SORENSEN
POWER SUPPLIES

Instruction Manual

SRL Series

MEDIUM POWER LOW VOLTAGE POWER SUPPLIES

THIS MANUAL COVERS SRL MODELS:

CONVECTION MODELS	FAN MODELS
10-25	10-50
20-12	10-100
20-25	20-50
40-6	40-25
40-12	40-50
60-4	60-17
60-8	60-35

Sorensen Company
676 Island Pond Road
Manchester, N.H. 03103
Tel: 603-668-4500
Twx: 710-220-1339

RAYTHEON

Digitized by the Internet Archive
in 2025

https://archive.org/details/manualsplus_10443

INSTRUCTION MANUAL FOR

1058427 Rev A (1/83)
PRINTED IN USA

SRL/SERIES

SORENSEN
POWER SUPPLIES

THIS MANUAL COVERS THE FOLLOWING SRL MODELS:

CONVECTION MODELS	FAN MODELS
10-25	10-50
20-12	10-100
20-25	20-50
40-6	40-25
40-12	40-50
60-4	60-17
60-8	60-35

SORENSEN
POWER SUPPLIES
SORENSEN COMPANY
A RAYTHEON COMPANY
676 ISLAND POND ROAD MANCHESTER, NEW HAMPSHIRE 03103

FIVE-YEAR WARRANTY

Sorensen Company warrants all parts of equipment of its manufacture, except special purpose tubes and semi-conductor devices which carry their own manufacturer's warranty, to be free from defects caused by faulty material or poor workmanship. Sorensen Company warrants its products to conform to applicable commercial or military specifications when confirmed on the Order Acknowledgment form to be free from defects caused by faulty material or poor workmanship. Sorensen Company's obligation is limited under the warranty to repair or replacement of products in kind, or at its option to issuance of a credit of original purchase price. Returns must be accompanied by a Sorensen Company Return Material Authorization form and conform to standard conditions for adjustment. The aforesaid warranty shall expire five (5) years following the last day of the month of shipment from Sorensen Company's plant. The foregoing states the entire warranty extended by Sorensen Company. No other warranty, expressed or implied, is made and, specifically, Sorensen Company makes no warranty of merchantability or fitness for any purpose. In no case shall Sorensen Company be liable for any special or consequential damages. Authorization must be obtained prior to return of defective items.

SORENSEN COMPANY

TABLE OF CONTENTS

Section	Title	Page
1	INTRODUCTION	
	1.1 Purpose	1-1
	1.2 Description	1-1
2	INSTALLATION	
	2.1 General	2-1
	2.2 Initial Inspection	2-1
	2.3 Electrical Installation	2-2
	2.4 Electrical Inspection	2-2
3	OPERATION	
	3.1 General	3-1
	3.2 Voltage Mode Operation	3-1
	3.3 Current Mode Operation	3-5
	3.4 Series Operation	3-7
	3.5 Parallel Operation	3-8
4	THEORY OF OPERATION	
	4.1 General	4-1
	4.2 SCR Pre-Regulated Series Pass Principle	4-1
	4.3 SRL Power Supply Theory	4-2
5	SERVICE AND REPAIR	
	5.1 General	5-1
	5.2 Periodic Servicing	5-1
	5.3 Troubleshooting	5-1
	5.4 Calibration	5-1
	5.5 Performance Test	5-5
	5.6 Hi-Pot Test Procedure	5-10
6	DRAWINGS AND PARTS LISTS	
	6.1 General	6-1
	6.2 Ordering Parts	6-1
	Field Service Representatives	

LIST OF ILLUSTRATIONS

FIGURE NO.	TITLE	PAGE
1-1	SRL Panel Controls/Indicators (Convection)	1-2
1-2	SRL Panel Controls/Indicators (Fan)	1-3
2-1	SRL Outline Drawing 3½" Panel Series	2-4
2-2	SRL Outline Drawing 5¼" Panel Series	2-5
2-3	SRL Outline Drawing 7" Panel Series	2-6
3-1	Unity Gain	3-4
3-2	Variable Gain	3-4
3-3	Series Operation	3-9
3-4	Parallel Operation	3-10
4-1	Series Pass Principle	4-1
4-2	SRL System Block Diagram	4-3
5-1	T3 Scope Display	5-3
5-2	Voltage Mode Test Setup	5-6
5-3	Current Mode Test Setup	5-6
6-1	SRL Series-Typical PCB	6-2
6-2	Convection Series Schematic Diagram	6-3
6-3	Fan Series Schematic Diagram	6-4
6-4	Convection Series, Typical Chassis Assemblies	6-5
6-5	Fan Series, Typical Chassis Assemblies	6-6
6-6	Typical Output Impedance Curves	6-7
6-7	Typical Crossover Characteristics	6-8
6-8	Firing Section Waveforms	6-9

LIST OF TABLES

TABLE	TITLE	PAGE
1-1	SRL Controls/Indicators (Convection)	1-2
1-2	SRL Controls/Indicators (Fan)	1-3
1-3	Convection Unit Specifications	1-6
1-4	Fan Unit Specifications	1-12
3-1	Programming Constants (Current Mode)	3-6
5-1	Difference Data	5-4
5-2	Troubleshooting Chart	5-8
6-1	Replaceable Parts List-Conv. PCB	6-11
6-2	Replaceable Parts List-Conv. Main Assembly	6-17
6-3	Replaceable Parts List-Fan PCB	6-23
6-4	Replaceable Parts List-Fan Main Assembly	6-29

1 INTRODUCTION

1.1 PURPOSE

This manual contains operation and maintenance data on the SRL series power supplies. The purpose of the manual is to familiarize the user with unit functions, to introduce the varied configurations to which the unit is convertible, and to provide the necessary maintenance data to assure long operating life.

Seven major sections form the content of the manual. Section 1 contains a description of the series, highlights important unit features, and tabulates complete unit specifications. Unit inspection and initial checkout procedure is covered in Section 2, and unit operation procedures are outlined in Section 3. Section 4 details the unit theory of operation, and Section 5 provides maintenance, service and repair instructions. Unit schematics, parts lists, operating curves and waveforms are included in Section 6.

1.2 DESCRIPTION

The SRL series consist of seven convection cooled models in the 250W to 500W range, and seven fan cooled models in the 500W to 2KW range. Both have outputs ranging to 60 Vdc. Differences in models are noted as applicable.

1.2.1 Physical

SRL power supplies are designed for either bench or rack mounted use, and for easy component accessibility. All controls used in normal operation are mounted on the front panel. Power outputs up to 25 Amperes may be taken from the unit front mounted binding posts. The mode selector terminal board is at the rear of the supply. Through manipulation of the terminal board links, the functions of voltage/current mode programming, remote sensing and parallel operation are obtained. Output terminals are also provided at the rear of the SRL units.

Models 20-12, 40-6, and 60-4 have an input fuseholder, and use a front panel power switch. The other convection cooled models (SRL 10-25, 20-25, 40-12, and 60-8) and all fan cooled models (SRL 10-50, 10-100, 20-50, 40-25, 40-50, 60-17, and 60-35) use a circuit breaker.

TABLE 1-1 SRL PANEL CONTROLS/INDICATORS (CONVECTION MODELS)

Control	Function
POWER Switch: (CB 1/S1) S1 (Models 20-12, 40-6, 60-4) CB1 (Models 10-25, 20-25, 40-12, 60-8)	Applies ac line voltage to input of power supply.
POWER Light (DS1)	Illuminates when POWER switch is in the ON position. (And internal fuse is not blown)
OVERVOLTAGE SET (S2)	Momentary toggle switch, when depressed causes panel dc VOLTS meter to indicate overvoltage trip level.
OVERVOLTAGE ADJ (R85)	Recessed potentiometer to adjust trip level of overvoltage circuit.
OVERVOLTAGE INDICATOR (DS2)	Illuminates when limit set by OVERVOLTAGE ADJ (R85) has been exceeded by the power supply output voltage.
VOLTAGE Controls (R53A, R53B)	Provide coarse and fine adjustment of output voltage. (Voltage Mode)
DC VOLTS Meter (M1)	Provides direct readout of voltage selected by voltage controls.
DC AMPERES Meter (M2)	Provides direct readout of load current.
CURRENT Controls (R18A, R18B)	Provide coarse and fine adjustment of output current. (Current Mode)

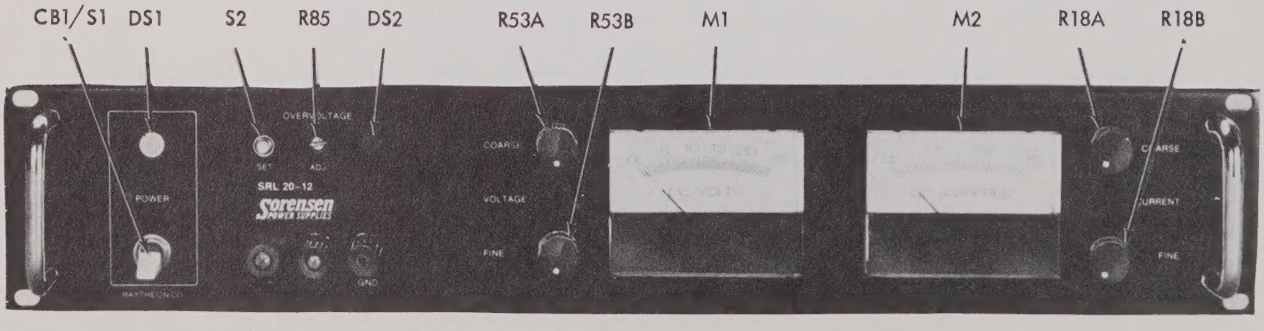

FIGURE 1-1. FRONT PANEL CONTROLS AND INDICATORS (TYPICAL)

TABLE 1-2 SRL PANEL CONTROLS/INDICATORS (FAN MODELS)

Control	Function
POWER Light (DS1)	Illuminates when POWER switch is in the ON position. (And internal fuse is not blown)
OVERVOLTAGE SET (S2)	Momentary toggle switch, when depressed causes panel dc VOLTS meter to indicate overvoltage trip level.
OVERVOLTAGE ADJ (R85)	Recessed potentiometer to adjust trip level of overvoltage circuit.
OVERVOLTAGE INDICATOR (DS2)	Illuminates when limit set by OVERVOLTAGE ADJ (R85) has been exceeded by the power supply output voltage.
DC VOLTS Meter (M1)	Provides direct readout of voltage selected by voltage controls.
DC AMPERES Meter (M2)	Provides direct readout of load current.
CURRENT Controls (R18A), (R18B)	Provide coarse and fine adjustment of output current. (Current Mode)
VOLTAGE Controls (53A, R53B)	Provide coarse and fine adjustment of output voltage. (Voltage Mode)
THERMAL OVERLOAD (DS3)	Illuminates when unit temperature exceeds a preset limit.
POWER Switch (CB1)	Applies ac line voltage to input of power supply.

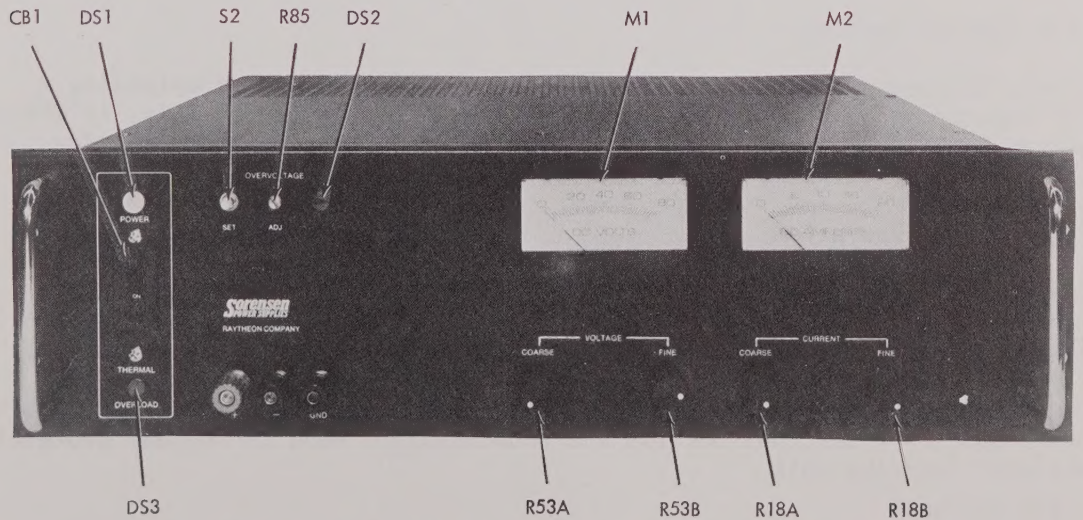

FIGURE 1-2 FRONT PANEL CONTROLS AND INDICATORS (TYPICAL)

1.2.2 Functional

The SRL power supplies provide a precisely regulated dc output, adjustable over a wide range. They operate from any of three*nominal ac inputs, and exhibit rapid response to transients, both load and line. Unit characteristics are outlined in specifications table 1-2.

All semiconductors used in the SRL series are silicon types, and contribute significantly to the unit ambient-temperature characteristics. High dissipation transistors are mounted to a cast aluminum alloy heatsink; low-dissipation devices are located on a plug-in printed circuit board.

1.2.2.1 Operating Modes

SRL models have two basic operating modes; constant voltage and constant current. In the former, the output voltage is regulated at the front-panel selected or programmed value, and the output current varies with the load. In constant-current operation, the output-current is regulated at the selected value while the output voltage varies as a function of load.

1.2.2.2 Automatic Crossover

The automatic crossover capability enables the unit to transfer operating modes as a function of load requirements. If, for example, load current attempts to increase above the setting of the current adjust control, the unit will switch operation automatically from the voltage to current mode. If the load requirements are lowered, return to the voltage mode will occur automatically.

1.2.2.3 Remote Programming

Any SRL model may be remotely programmed, that is its output may be altered from a distant location in either the voltage or current mode by introducing a calculated resistance or signal into the appropriate programming circuit. This may be readily accomplished through the link arrangements at the rear terminal board.

1.2.2.4 Remote Sensing

Terminals located on the rear terminal board offer the means of extending a unit's regulating point from the output terminals to the load. This, in effect, compensates for variations in the load-lead IR drop. The maximum drop for which a unit will compensate is 1 volt per load-lead.

1.2.2.5 Series Operation

For applications requiring voltages higher than a single SRL can provide, a number of units may be connected in series. Maximum system output is specified at 200 Vdc. Unit connections are illustrated in Section 3 (figure 3-3). Regulation in series operation is the sum of the regulations for all units. In series operation, external rectifiers to protect units against reverse voltage developed by a unit malfunction are unnecessary. Reverse-voltage protection is designed into the unit.

*Two are optional

1.2.2.6 Parallel Operation

Parallel operation may be used to service those applications requiring a higher output current than a single SRL can provide. Unit connections are illustrated in Section 3 (Figure 3-4). Paralleling is indirect through a "master-slave" approach, i.e., the amplifier of the "master" unit controls the output of all units in the system. In parallel operation, the maximum output current of each unit is derated to 90%. (See Figure 6-4.)

1.2.2.7 Protection Features

Protection against the effects of overloads and internal short circuits is provided; in the first case, by automatic crossover, and in the second by the input fuse or circuit breaker. In addition, open sensing leads or links will not drive the unit into high output voltage. Internal rectifiers preclude this by clamping the output to approximately 1-1/2 volts above output setting.

Internal control circuitry is protected by fuse F2, connected in the primary of input transformer T2.

Table 1-3 Convection Cooled Unit Specifications (Sheet 1 of 6)

	ALL	20-12	40-6	60-4	10-25	20-25	40-12	60-8
INPUT RATINGS								
Voltage Range	105-125V (Standard) 190-230V (M1) 210-250V (M2)							
Frequency	47-53/57-63Hz							
Phase	1							
Current (Adc Max)								
@ 115Vac		7.8	6.3	6.0	7.5	13.6	13.2	12.5
@ 210Vac		4.3	3.5	3.3	4.1	7.5	7.3	6.9
@ 230Vac		3.9	3.2	3.0	3.75	6.8	6.6	6.25
Power Factor (typical)		0.65	0.58	0.66	0.67	0.64	0.56	0.54
Efficiency (typ)		42%	56%	50%	45.5%	52.5%	60%	64%
OUTPUT RATINGS								
Voltage Mode:								
Voltage Range (Vdc)		0-20	0-40	0-60	0-10	0-20	0-40	0-60
Coarse	Full Range							
Fine	1% of Full Range							
Resolution (typ)	0.01% of Full Range							
Current Range (Adc)								
@ 55°C	0-Io Max.	0-12	0-6	0-4	0-25	0-25	0-12	0-8
@ 71°C		0-67% Io Max	0-67% Io Max	0-67% Io Max	0-77% Io Max	0-50% Io Max	0-67% Io Max	0-67% Io Max
Current Mode:								
Current Range:	Same as in Voltage Mode							

Table 1-3 Convection Cooled Unit Specification (Sheet 2 of 6)

	ALL	20-12	40-6	60-4	10-25	20-25	40-12	60-8
Current Range (cont)								
Coarse	Full Range							
Fine	1% of Full Range							
Resolution (typ)	0.015% of Full Range							
Voltage Compliance	Full Voltage Range							
Crossover Characteristics	Figure 6-6 (Section 6)							
PERFORMANCE								
Voltage Mode:								
Regulation[1]	0.01% or 2 mV							
PARD (ripple) 50-60Hz input:[2]								
Max. RMS, 10Hz-7MHz (uV)		200	200	300	350	300	300	300
Max. P-P, 0-25MHz (mV, grounded output)		30	30	30	20	30	30	30
Transient Response (typ. recovery time-uSec)[3]		30	30	70	150	150	150	70
Output Impedance								
Typical Low Freq. (R & jwL):	Figure 6-5 (Section 6)							
R=(uOhms)		80	320	750	20	40	170	375
L=(uHy)		1.3	1.0	0.8	1.0	0.8	1.6	0.8
Temp. Coefficient	0.01% +200 uV/°C							

[1]For a combined full line swing, and a NL-FL (no load-to-full load) or FL-NL change.
[2]With chassis input tied to ground.
[3]For a step load change of NL-FL or FL-NL, recovery to ± 10mV band.

Table 1-3 Convection Cooled Unit Specification (Sheet 3 of 6)

	ALL	20-12	40-6	60-4	10-25	20-25	40-12	60-8
Drift (typical)[1]	0.025% + 500uV							
Remote Programming								
Prgrm. Constant:								
Res. (ohms/volt)[2]	200±0.5%							
Volt.Gain (volt/-volt)[3]	1							
Remote Sensing	1V/Load Lead							
Overload Protection	Crossover to Current Mode							
Output voltage Over-Shoot	None							
Current Mode:								
Regulation, full line and load (mA)	0.02% + B, where B= :	4	1	1	4	4	4	1
PARD (ripple) 50-60Hz input:								
Max. RMS 10Hz-7MHz (mA) Full Compliance (FC)		3	0.5	0.5	10	10	1	1

[1]For 8hrs after warmup, @ constant line voltage, load and ambient temperature.
[2]Can be varied.
[3]Can be varied-signal source can be connected to negative output.

Table 1-3 Convection Cooled Unit Specification (Sheet 4 of 6)

	ALL	20-12	40-6	60-4	10-25	20-25	40-12	60-8
Output Impedance (typ)	Figure 6-5 (Section 6)							
Temperature Coeff. (/°C)(typ)	0.01% + C Where C= :	1mA	0.5mA	0.5mA	1mA	1mA	1mA	1mA
Drift (after 8hrs warmup)(typ)	0.03% + D where D=3mA							
Remote Programming								
Prgrm. Constant:								
Res. (ohms/amp)		80±10%	150±10%	250±10%	40±10%	40±10%	80±10%	125±10%
Voltage (volts/amp)		0.08±10%	0.150±10%	0.25±10%	0.02±10%	0.02±10%	0.08±10%	0.125±10%
Overload Protection	Crossover to Voltage Mode							
Output Current Overshoot	None							
SPECIFICATIONS (MISC.)								
Overvoltage Protection								
Crowbar: Response Time (typ)[1]	To E_{rated} (typ) +6V, 50uSec							

[1] 10uSec response can be achieved by removing C51, although nuisance tripping may result.

Table 1-3 Convection Cooled Unit Specification (Sheet 5 of 6)

Crowbar (cont)	ALL	20-12	40-6	60-4	10-25	20-25	40-12	60-8
Temperature Coeff. (typ)	0.05%/°C							
Open Sensing Protection	Yes							
Reverse Voltage Protection	Yes							
Ambient Temperature Range	0°C-71°C							
Derate Per Characteristics	Figure 6-4 (Section 6)							
Series Operation (direct connection or master-slave)	Up to 200 Vdc Output							
Parallel Operation (by current limiting feature or master-slave)	Up to 3 Units							
Cooling	Convection							
Isolation Voltage to Ground:								
Input	1000Vdc							
Output	200VDC							

Table 1-3 Convection Cooled Unit Specification (Sheet 6 of 6)

	All	20-12	40-6	60-4	10-25	20-25	40-12	60-8
MECHANICAL DATA								
Size in. (mm):								
Width	19 (483)							
Height		3-15/32 (88)	3-15/32 (88)	3-15/32 (88)	5-7/32 (133)	5-7/32 (133)	5-7/32 (133)	5-7/32 (133)
Depth	17-3/4 (451)							
Weight lbs. (kg)		45 (20.4)	44 (20)	44 (20)	64 (29)	64 (29)	64 (29)	64 (28)
AC Input Connections	Line Cord							

Table 1-4 Fan Cooled Unit Specifications (Sheet 1 of 6)

	ALL	10-50	40-25	60-17	10-100	20-50	40-50	60-35
INPUT RATINGS	105-125 (Standard) 190-230 (M1 Option) 210-250 (M2 Option)						*	*
Voltage Range								
Frequency	47-53/57-63Hz							
Phase	1							
Current (Adc Max)								
@ 115Vac		14.7	22	22	32.5	28	N/A	N/A
@ 210Vac		8	12	12	18.5	15.4	25	26
@ 230Vac		7.3	11	11	16.3	14	23	24
Power Factor (typical)		0.73	0.675	0.685	0.66	0.64	0.66	0.6
Efficiency (typ)		42.4%	59.7%	61.7%	45.5%	53.6%	62.5%	67.8%
OUTPUT RATINGS								
Voltage Mode:								
Voltage Range (Vdc)		0-10	0-40	0-60	0-10	0-20	0-40	0-60
Coarse	Full Range							
Fine	1% of Full Range							
Resolution (typ)	0.01% of Full Range							
Current Range (Adc)								
@ 55°C	0-Io Max.	0-50	0-25	0-17	0-100	0-50	0-50	0-35
@ 71°C	0-67% Io Max.							
Current Mode:								
Current Range:	Same as in Voltage Mode							

*105 - 125-volt input not provided.

Table 1-4 Fan Cooled Unit Specifications (Sheet 2 of 6)

	ALL	10-50	40-25	60-17	10-100	20-50	40-50	60-35
Current Range (cont)								
Coarse	Full Range							
Fine	1% of Full Range							
Resolution (typ)	0.015% of Full Range							
Voltage Compliance	Full Voltage Range							
Crossover Characteristics	Figure 6-6 (Section 6)							
PERFORMANCE								
Voltage Mode:								
Regulation[1]	The greater of 0.01% or 2mV							
PARD (ripple) 50-60Hz input:[2]								
Max. RMS, 10Hz-7MHz (uV)		300	500	500	300	500	700	700
Max. P-P, 0-25MHz (mV, grounded output)		25	40	25	20	40	40	40
Transient Response (typ. recovery time-uSec)[3]	150 uSec							
Output Impedance								
Typical Low Freq. (R & jwL):	Figure 6-5 (Section 6)							
R=(uOhms)		10	80	180	5	20	40	85
L=(uHy)		0.5	1.2	1.6	0.3	1.6	0.8	1.6
Temp. Coefficient	0.01% +200 uV/°C							

[1]For a combined full line swing, and a NL-FL (no load-to-full) or FL-NL change.
[2]With chassis input tied to ground.
[3]For a step load change of NL-FL or FL-NL, recovery to ± 10mV band.

Table 1-4 Fan Cooled Unit Specifications (Sheet 3 of 6)

	ALL	10-50	40-25	60-17	10-100	20-50	40-50	60-35
Drift (typical)[1]	0.025% + 500uV							
Remote Programming								
Prgrm. Constant:								
Res. (ohms/volt)[2]	200±0.5%							
Volt. Gain (volt/-volt)[3]	1							
Remote Sensing	1V/Load Lead							
Overload Protection	Crossover to Current Mode							
Output voltage Over-Shoot	None							
Current Mode:								
Regulation, full line and load (mA)	0.02% + B, where B= :	4	4	4	6	4	4	4
PARD (ripple) 50-60Hz input:								
Max. RMS 10Hz-7MHz (mA) Full compliance (FC)		20	10	3	35	10	10	10

[1] For 8hrs after warmup, @ constant line voltage, load, and ambient temperature.
[2] Can be varied.
[3] Can be varied-signal source can be connected to negative output.

Table 1-4 Fan Cooled Unit Specifications (Sheet 4 of 6)

	ALL	10-50	40-25	60-17	10-100	20-50	40-50	60-35
Output Impedance (typ)	Figure 6-5 (Section 6)							
Temperature Coeff. (/°C)(typ)	0.01% + C Where C=	1mA	1mA	1mA	2mA	1mA	1mA	1mA
Drift (For 8hrs after warmup)(typ)	0.03% + D Where D= :	3mA	3mA	3mA	10mA	3mA	3mA	3mA
Remote Programming								
Prgrm. Constant:								
Res. (ohms/amp)		20±10%	40±10%	60±10%	10±10%	20±10%	20±10%	28±10%
Voltage (volts/amp)		0.008±10%	0.02±10%	0.04±10%	0.0025 ±10%	0.008 ±10%	0.008 ±10%	0.015± ±10%
Overload Protection	Crossover to Voltage Mode							
Output Current Overshoot	None							
SPECIFICATIONS (MISC.)								
Overvoltage Protection								
Crowbar: Response Time (typ)[1]	To Erated (typ) +6V, 50uSec							

[1] 10uSec response can be achieved by removing C51, although nuisance tripping may result.

Table 1-4 Fan Cooled Unit Specifications (Sheet 5 of 6)

	ALL	10-50	40-25	60-17	10-100	20-50	40-50	60-35
Crowbar (cont)								
Temperature Coeff. (typ)	0.05%/°C							
Open Sensing Protection	Yes							
Reverse Voltage Protection	Yes							
Ambient Temperature Range	0°C-71°C							
Derated Per Characteristics	Figure 6-4 (Section 6)							
Series Operation (direct connection or master-slave)	Up to 200 Vdc Output							
Parallel Operation (by current limiting feature or master-slave)	Up to 3 Units							
Cooling	Fan							
Isolation Voltage to Ground:								
Input	1000Vdc							
Output	200Vdc							

Table 1-4 Fan Cooled Unit Specifications (Sheet 6 of 6)

	ALL	10-50	40-25	60-17	10-100	20-50	40-50	60-35
MECHANICAL DATA								
Width	19 (483)							
Height		5-7/32 (133)	5-7/32 (133)	5-7/32 (133)	6-31/32 (177)	6-31/32 (177)	6-31/32 (177)	6-31/32 (177)
Depth		21 (533)	21 (533)	21 (533)	23 (584)	21 (53.3)	21 (533)	21 (533)
Weight: Lbs. (Kg)		81 (36.74)	95 (43.1)	95 (43.1)	132 (59.8)	128 (58)	120 (54.4)	120 (54.4)

2 INSTALLATION

2.1 GENERAL

After unpacking, initial inspections and preliminary checkout procedures should be performed to assure that unit is in good working order. Basically, these consist of visually checking for damaged parts and components, and making an electrical check. Procedures are given in this section to check the unit voltage and current modes of operation. If it is determined that the unit is damaged, the carrier should be notified immediately. The carrier claim agent will then prepare a report of damage. The user is required to send this report to the Service Dept., Sorensen Company, 676 Island Pond Road, Manchester, New Hampshire, 03103. Sorensen Company will advise the user as to what action is required to repair or replace the supply.

2.2 INITIAL INSPECTION

Proceed as follows to inspect for damage incurred during shipment, prior to applying ac power:

1. Inspect panel and chassis for dents, paint chips and obvious signs of structural damage.

2. For units with rear-mounted fuseholder, assure that holder contains a properly rated fuse. Fuse ratings for both 115 and 220/230 Vdc inputs appear above holder.

3. Turn front-panel controls from stop-to-stop. Rotation should be smooth.

4. Set POWER switch to ON and then OFF, then test OVERVOLTAGE switch for proper mechanical action.

5. Check for cracked or broken indicator-lamp lens.

6. Inspect for a cracked meter window. If pointer is off zero, reset using adjust screw. (To minimize effects of static electricity causing deflection, touch meter window and chassis with fingers of one hand).

7. Check input cord for physical damge. Tug lightly on cord near chassis to make certain relief grommet grips cord.

8. Inspect terminal boards. On TB2, links should be firmly connected across terminals 1 & 2, 3 & 4, 7 & 8, 9 & 10. Check that sensing leads are properly connected between TB3-1 and TB2-5, and TB3-3 and TB2-6.

9. Remove screws retaining top cover to chassis. Inspect printed circuit board and components for damage.

Unit mounting and installation dimensions are shown in figures 2-1 and 2-2.

2.3 ELECTRICAL INSTALLATION

Sorensen's high - power SRL models 40 - 50 and 60 - 35 are factory-wired for 190 - 230Vac inputs (order M1 for 210 - 250Vac input). Other models of SRL power supplies are factory-wired to accept 105-125 Vac (standard model), 190-230 Vac (M1 model) or 210-250 Vac (M2 model). Low power units are provided with a factory-wired power cord. This cord terminates externally in a three-prong polarized plug through the line cord, and therefore insertion of the plug into a compatible receptacle will automatically ground the unit. If a grounded input is not available, use an adapter, making sure that the external lead of the adapter is well grounded. For units not equipped with a line cord intact, connect 3-wire input leads to terminals 1, 2 (GRD) and 3 on input terminal board TB1 at the rear of the supply.

CAUTION

If chassis is not grounded, case will be at approximately 55 Vac due to RFI capacitors connected between AC line and chassis. This can produce an unpleasant (although not dangerous) electrical shock.

2.4 ELECTRICAL INSPECTION

The following paragraphs describe the procedure for making an initial electrical inspection. If specification verification is required, refer to section 5, Service and Repair.

2.4.1 Voltage Mode

To check voltage mode operation, proceed as follows:

1. Rotate COARSE CURRENT control and VOLTAGE controls fully counter-clockwise.

2. Rotate FINE CURRENT control fully clockwise.

NOTE

Do not loosen or remove interconnecting links on terminal boards.

3. Insert power cord into a suitable receptacle, and set POWER switch to ON.

4. Slowly rotate the COARSE VOATAGE control clockwise. Minimum range should be from 0 to maximum rated output voltage (table 1-1).

5. Set POWER switch to OFF.

2.4.2 Current Mode

To check current-mode operation, proceed as follows:

1. Rotate COARSE VOLTAGE control and CURRENT controls fully counter-clockwise.

2. Turn FINE VOLTAGE control fully clockwise.

3. Short output terminals, using appropriate size wire. (rear terminals only for units of 25 amperes and above).

4. Set POWER switch to ON.

5. Rotate COARSE CURRENT control slowly clockwise. The control range should be from "0" to the maximum rated output (table 1-1).

6. Set POWER switch to OFF.

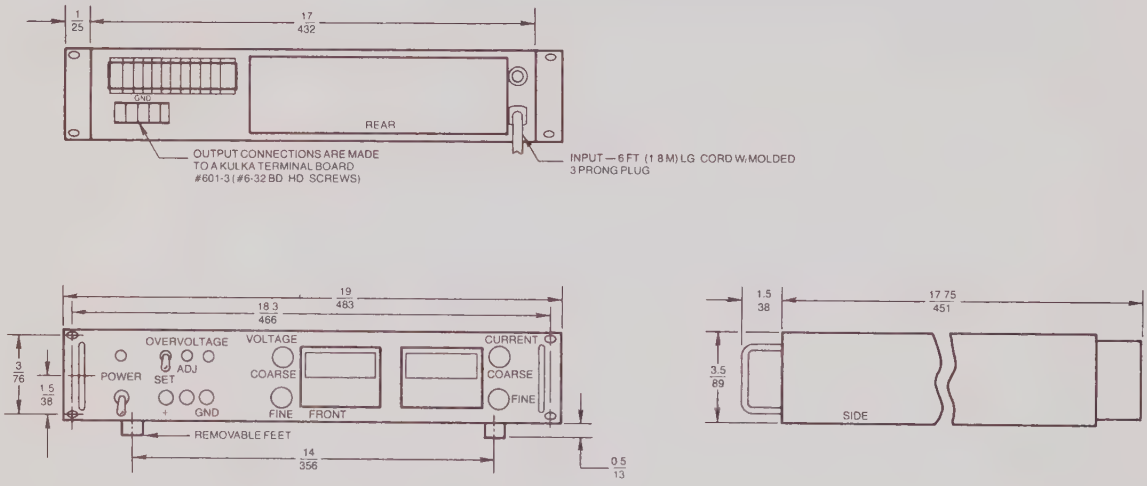

Model	Weight lbs (kg) Net
SRL 20-12	45 (20.4)
SRL 40-6	44 (20.0)
SRL 60-4	44 (20.0)

ALL DIMENSIONS ARE IN INCHES / MM

FIGURE 2-1
SRL OUTLINE DRAWING
3 1/2" PANEL SERIES

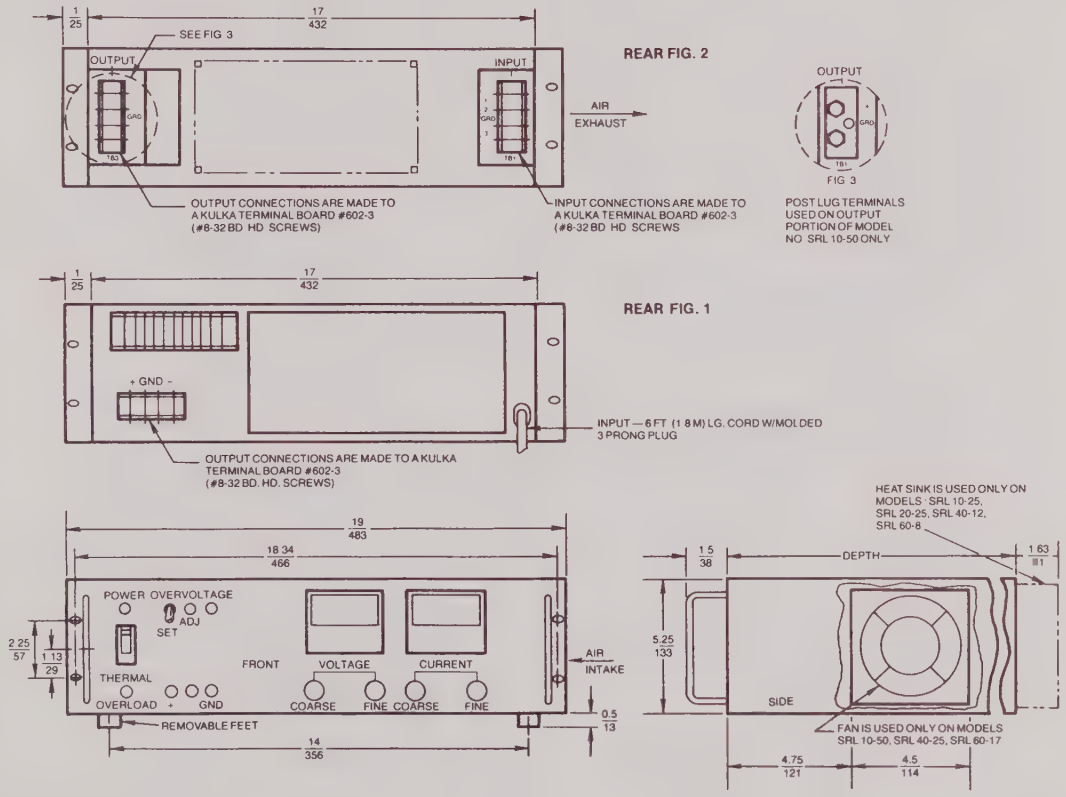

Model	Depth	Rear View	Weight lbs (kg) Net
SRL 10-25	16.2 (409)	Fig. 1	64 (29)
SRL 10-50	21 (533)	Fig. 2	81 (36)
SRL 20-25	16.2 (409)	Fig. 1	64 (29)
SRL 40-12	16.2 (409)	Fig. 1	64 (29)
SRL 40-25	21 (533)	Fig. 2	95 (43)
SRL 60-8	16.2 (409)	Fig. 1	64 (29)
SRL 60-17	21 (533)	Fig. 2	95 (43)

NOTES: ALL DIMENSIONS ARE IN INCHES / MM

FIGURE 2-2
SRL OUTLINE DRAWING
5 1/4" PANEL SERIES

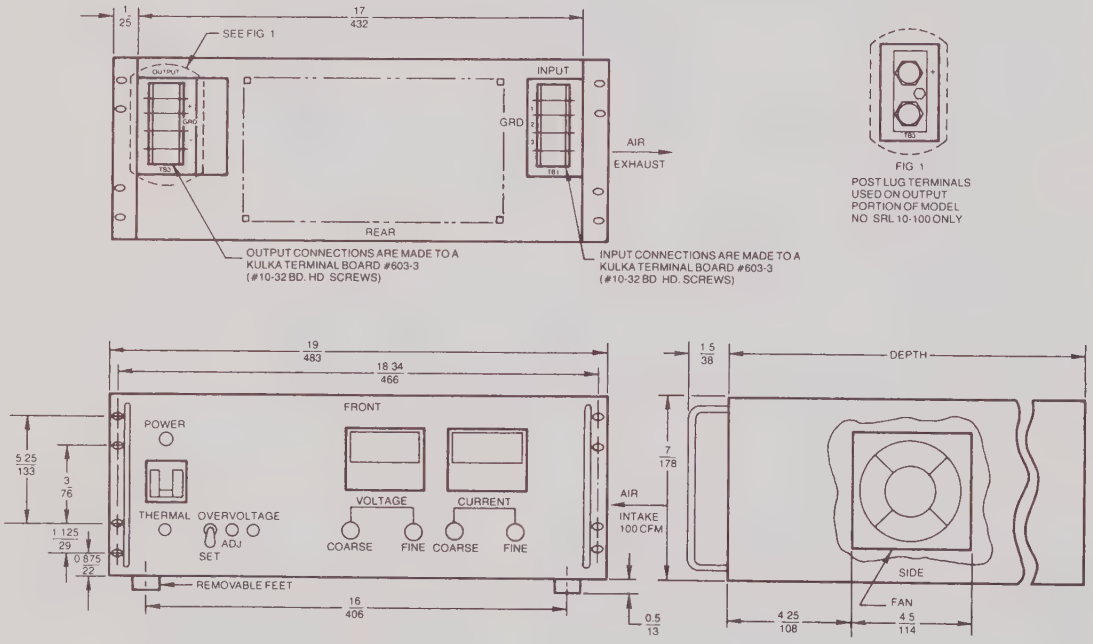

Model	Depth	Weight lbs (kg) Net
SRL 10-100	23 (584)	132 (60)
SRL 20-50	21 (533)	128 (58)
SRL 40-50	21 (533)	120 (54)
SRL 60-35	21 (533)	120 (54)

NOTES: ALL DIMENSIONS ARE IN INCHES / MM

CERTIFIED DRAWINGS AVAILABLE ON REQUEST

FIGURE 2-3
SRL OUTLINE DRAWING
7" PANEL SERIES

3 OPERATION

3.1 GENERAL

In this section, procedures required to convert an SRL unit to any of its various operating configurations are presented, including local and remote sensing, voltage-and current-mode programming, and series and parallel operation. Unit controls and indicators have been illustrated and described in section 1.

3.2 VOLTAGE MODE OPERATION

3.2.1 Local Sensing

All models in the SRL series are shipped ready for use with local sensing, i.e., sensing point is at the output terminals. If variations in load-lead drops are expected to be high relative to unit's specified regulation, remote sensing should be used (paragraph 3.2.2).

To operate unit in local sensing, proceed as follows:

1. To set current-limit value, short the unit output terminals, set POWER switch to ON, and use CURRENT control to adjust current-limit value, not to exceed 110% of rated current).

2. Set POWER switch to OFF, remove short.

3. Apply input power, and rotate COARSE and FINE VOLTAGE controls to obtain desired output. Set POWER switch to OFF.

4. Observing polarity, run load leads to either front or rear output terminals, (at rear terminals, link should be fitted between binder screw head and lead); then re-apply input power.

5. Set POWER switch to ON.

3.2.2 Remote Sensing

To adapt unit for remote-sensing operation, follow procedures outlined in preceding paragraphs 1.-4. Before setting POWER switch to ON, remove links between terminals TB3-1 and TB2-5 and TB3-3 and TB2-6. Then connect sensing leads, observing polarity, to TB2-5 &, -6. Use coaxial cable or a twisted pair of wires for sensing leads and make certain that the leads are firmly connected to unit terminals and load. Current in the sensing leads is below 100mA. In remote sensing, standard-programming operation, transient-response characteristics may degenerate slightly.

3.2.3 Remote Programming

In voltage-mode, remote-programming operation, unit output voltage is controlled by external resistance or voltage-signal commands. Both types may be used.

3.2.3.1 Resistance Programming

If the output voltage is to be controlled by resistance programming, calculate the resistance required using the ratio at 200 ± 0.5 ohms/volts, that is for every volt of output desired approximately 200 ohms are required. In selecting a programming resistor, choose one with a low temperature coefficient (±20 ppm/^{o}C) and a wattage ten times that calculated (programming current is normally 5 mA). Note that resitance programming may also be used to improve the unit drift characteristic. For example, if a fixed output is required, a fixed resistor may be selected. This eliminates the variable contact resistance which is inherent in any potentiometer and which contributes to the drift characteristic. If abrupt changes in output voltage are to be made by switching the programming resistance, use a make-before-break switch.

To adapt unit to resistance programming, proceed as follows:

a. Short unit output terminals, set POWER switch to ON. Use the CURRENT control to adjust current-limit value.

b. Set POWER switch to OFF, remove short.

c. Rotate VOLTAGE controls fully counterclockwise.

d. Remove link between terminals TB2-3 and TB2-4, and connect programming resistor. Use twisted or shielded wire for leads.

CAUTION

1. Operating the unit with open programming leads or links may result in either low or high output voltage.

2. With the programming resistor connected across terminals TB2-3 and TB2-4, the VOLTAGE control remains in the circuit. Rotation of this control will alter the programmed voltage. If this is undesirable, connect the resistor across terminals TB2-3 and -6 to effect complete bypass.

3.2.3.2 Changing of Programming Constant

If it becomes desirable to change the programming constant, the value of R21 (programming constant resistor) may be determined as in the following example.

Example: To change the programming coefficient (Pc) from 200 ohms/volt to 1000 ohms/volt, calculate the new value of R21:

$$R21 = V_{ref} \times Pc$$

where Vref is the voltage across C11 (approximately 9 volts). thus;

$$R21 = 9 \text{ volts} \times 1000 \text{ ohms/volt} = 9000 \text{ ohms}$$

The current through R21 is then $\frac{9 \text{ volts}}{9000 \text{ ohms}} = 1$ milliampere.

As noted before, the programming resistor should have a low temperature coefficient, and a wattage rating ten times that of the calculated rating.

To adapt unit to a different resistance programming constant, proceed as follows:

a. Rotate VOLTAGE controls fully counterclockwise.

b. Remove the link between TB2-1 and TB2-2. Install programming constant resistor R21 between TB2-1 and TB2-3 and adjust Vref until the ratio of Vref/R21 is exactly 1 milliampere, or the calculated reference current. This can be done by inserting a resistor in place of R53A (between TB2-3 and -6, with TB2-3 and -4 open) equal to Eout max/1 mA and adjusting the voltage reference potentiometer R9 until Eout is exactly equal to Eout max.

c. Deterioration of the voltage regulation will occur as the programming constant is increased due to the effect of the offset current, and will be proportional to the increase of R21. As an example, if the contribution due to offset current at 200 ohms/volt is 0.002%, at 1000 ohms/volt approximately 0.01% contribution to regulation might be expected.

3.2.3.3 Voltage Signal Programming

To adapt unit for voltage signal programming proceed as follows:

a. Unity Gain (1V/V) (figure 3-1)

1) Remove the input power.

2) Remove the link between TB2-1 and TB2-2.

3) Remove the link between TB2-3 and TB2-4.

4) Connect the signal programming source between TB2-3 and TB2-6. Observe the proper polarity of signal source (negative) on TB2-6.

5) With this modification, the SRL will produce a one volt output for one volt of signal. Do not exceed the rated output voltage of the SRL.

NOTE

The stability and regulation will be a function of the signal source stability.

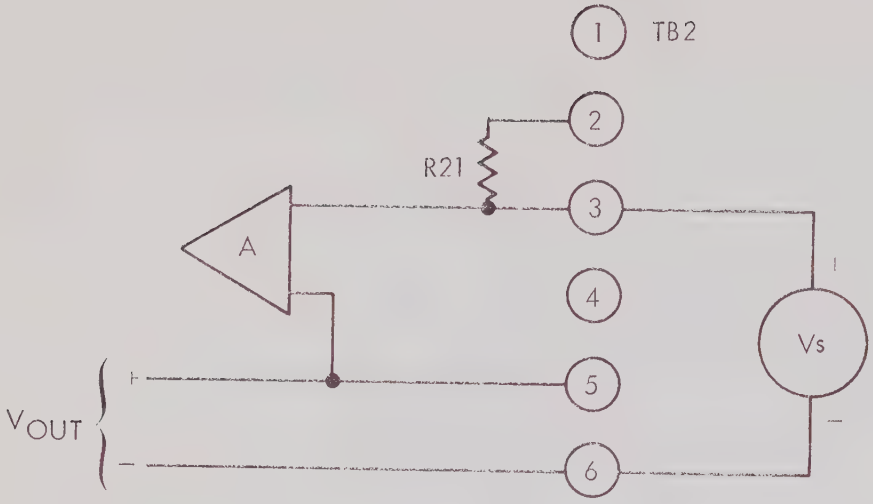

FIGURE 3-1. UNITY GAIN

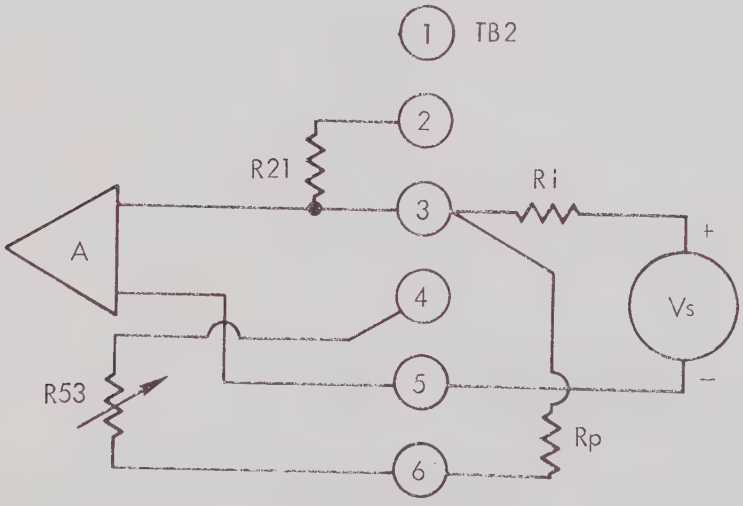

FIGURE 3-2. VARIABLE GAIN

b. Variable Gain (Figure 3-2)

1) Remove the link between TB2-1 and TB2-2.

2) Remove the link between TB2-3 and TB2-4.

3) Place Ri (1.78K suggested) in series with the signal source and connect as shown in figure 3-2 between TB2-3 and TB2-5 observing the proper polarity.

4) As with the previous method of programming, stability will be a function of the signal source stability, its internal impedance, and the stability of Ri and Rp.

In this mode of operation Vo=Vs Rp/Ri assuming the effects of amplifier offset and signal source impedance are negligible. Thus the gain is determined by the ratio Rp/Ri. It is suggested that Ri be made equal to 1.78K ohm or less to minimize the effect of offset voltage. Ri and Rp should be stable resistors (20 ppm/°C or less). Note that the front panel VOLTAGE control R53 may be substitued for Rp if TB2-3 and TB2-4 are linked.

3.3 CURRENT MODE OPERATION

To operate an SRL unit in the current mode, proceed as follows:

1. Rotate all front panel controls fully counterclockwise.
2. Short the output terminals.
3. Rotate FINE VOLTAGE control clockwise, and close POWER switch.
4. Turn COARSE and FINE CURRENT controls clockwise to select the desired output current.
5. Open POWER switch and remove short from output terminals.
6. Set POWER switch to ON and adjust output voltage to desired compliance setting.
7. Open POWER switch, and observing polarity, connect load to terminals TB3-1 and -3. Re-apply input power.

NOTE

If compliance voltage exceeds voltage control setting, crossover to voltage-mode operation occurs automatically.

3.3.1 Remote Programming

In current-mode, remote-programming operation, the regulated output current may be controlled externally by resistance changes or voltage signals.

3.3.1.1 Resistance

For resistance programming, calculate the value of resistor required by using the ohms/ampere coefficient listed in Table 3-1.

TABLE 3-1
PROGRAMMING CONSTANTS
(CURRENT MODE)

SRL MODEL	RESISTIVE OHMS/AMPERE (±10%)	VOLTAGE MILLIVOLTS/AMPERE (±10%)
10-25	40	20
20-12	80	80
20-25	40	20
40-6	150	150
40-12	80	80
60-4	250	250
60-8	125	125
10-50	20	8
10-100	10	2.5
20-50	20	8
40-25	40	20
40-50	20	8
60-17	60	40
60-35	28	15

Note: Use a resistor with a low temperature coefficient (±20 ppm/°C), and a wattage rating at least ten times calculated value (normal programming current is approximately 1 milliampere).

To adapt unit for current-mode, resistance-programming operation, proceed as follows:

a. Close POWER switch, adjust output voltage to desired compliance setting.

b. Open POWER switch and rotate CURRENT controls fully counterclockwise.

c. Remove link between terminals TB2-7 and -8, and replace with programming resistor.

CAUTION

Operating unit with open programming leads or links will result in high output current with possible crossover to voltage mode. If step changes in output current are to be made by abrupt resistance alterations, use make-before-break switching.

d. Run load to terminals TB3-1 and -3, observing polarity.

e. Set POWER switch to ON. Unit supplies regulated programmed current to the load.

NOTE

Any rotation of the CURRENT control alters the output current.

3.3.1.2 Voltage Signal

To adapt an SRL unit to voltage-signalprogramming, follow procedures outlined in the previous paragraphs except connect signal-producing device across terminals TB2-7 and -8, instead of the programming resistor. (See Table 3-1). The programming device should be floating (ungrounded), be capable of absorbing the 1mA programming current, and have a low-noise, low-ripple output signal.

3.4 SERIES OPERATION

For applications which require voltages higher than a single SRL model can provide, series operation may be utilized. The maximum rated output of any series connected system is 200 Vdc. System regulation is the sum of the regulations for all units. In SRL models, there is no need to connect reverse-voltage rectifiers across the output terminals. Reverse-voltage protection has been designed into the entire series.

3.4.1 Local Sensing (Figure 3-3 (a))

To connect units in series, local sensing, proceed as follows:

1. Adjust the output voltage of each unit so that their sum is equal to the desired system output. Set POWER switches of each unit to OFF.

2. Disconnect links between terminals TB3-1 and TB2-5, and TB3-3 and TB2-6 of each unit.

3. Reconnect load and sensing leads as shown in figure 3-3, (a).

4. Set POWER switches to ON. The system supplies regulated voltage to the load.

3.4.2 Remote Sensing (Figure 3-3 (b))

To connect units in series, remote sensing, remove leads from terminals TB2-5 and -6. Observing polarity, connect coaxial cable or a twisted pair of wires from TB2-5 and -6 across load as shown.

NOTE

Wherever possible, use twisted or shielded leads. At load and unit terminals, place sensing leads between binder screwhead and load lead.

3.5 PARALLEL OPERATION

Parallel operation may be used to obtain currents greater than any single model can supply. Up to three units may be connected in this manner. The maximum rated output of any parallel-connected system is the sum of the maximum outputs of each unit, derated to 90%.

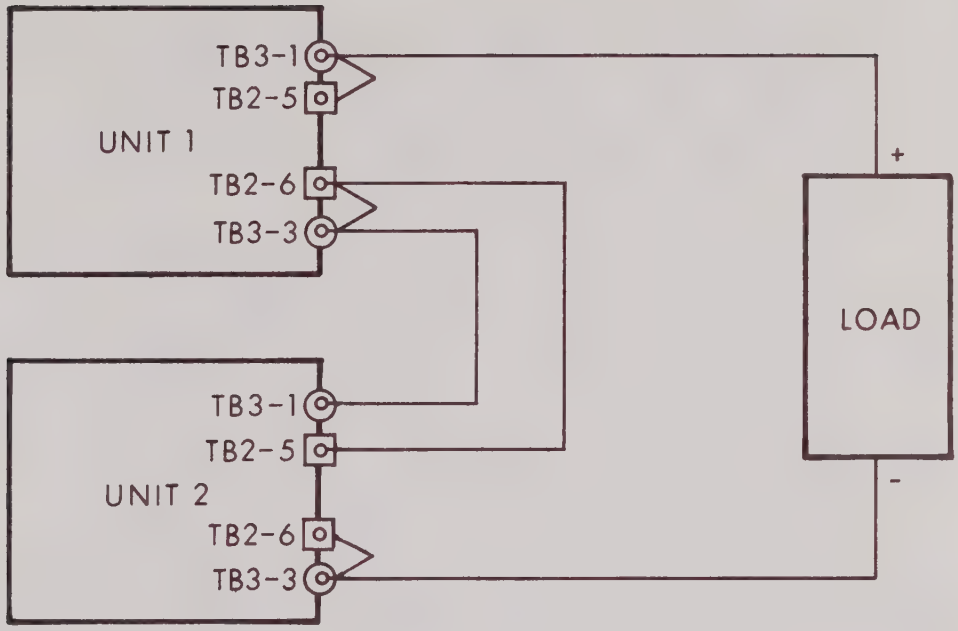

(a) LOCAL SENSING - SERIES OPERATION

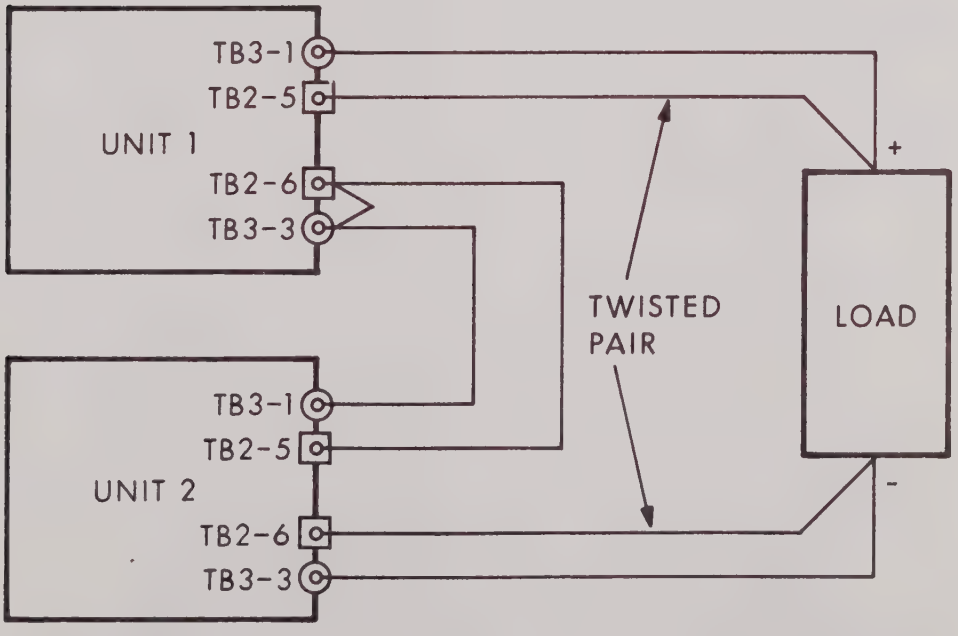

(b) REMOTE SENSING - SERIES OPERATION

FIGURE 3-3 SERIES OPERATION

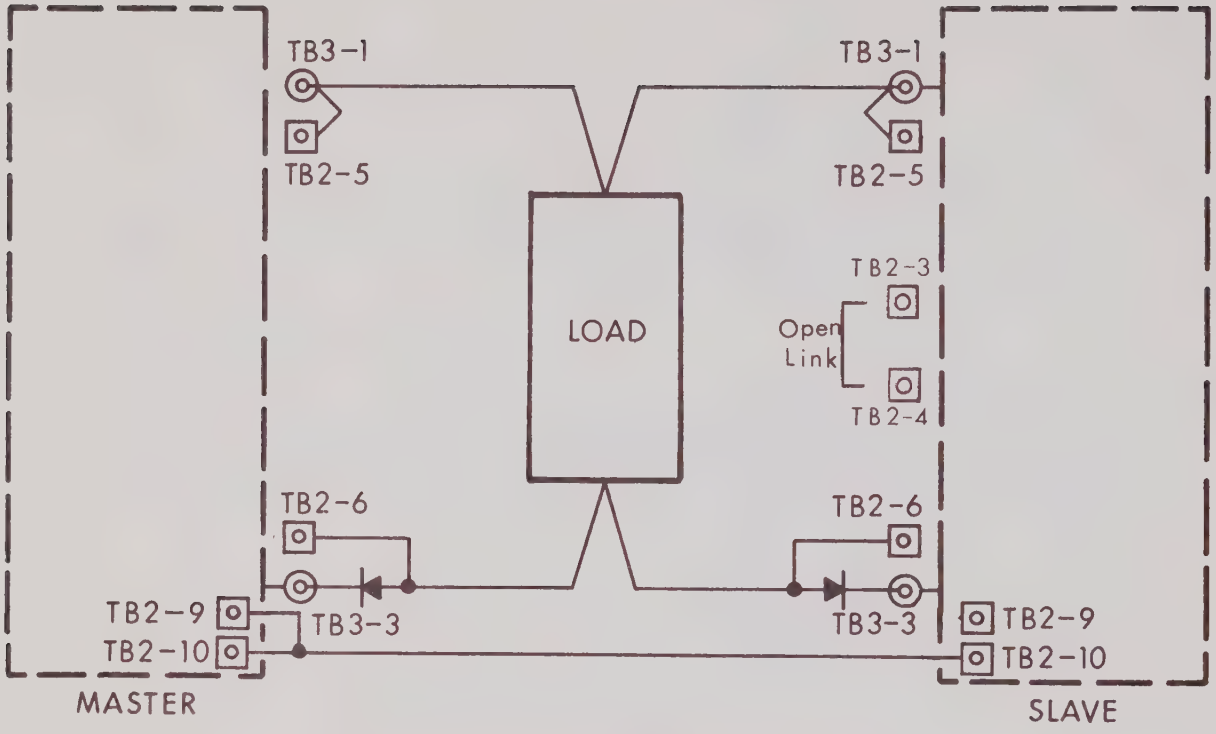

(a) LOCAL SENSING - PARALLEL OPERATION

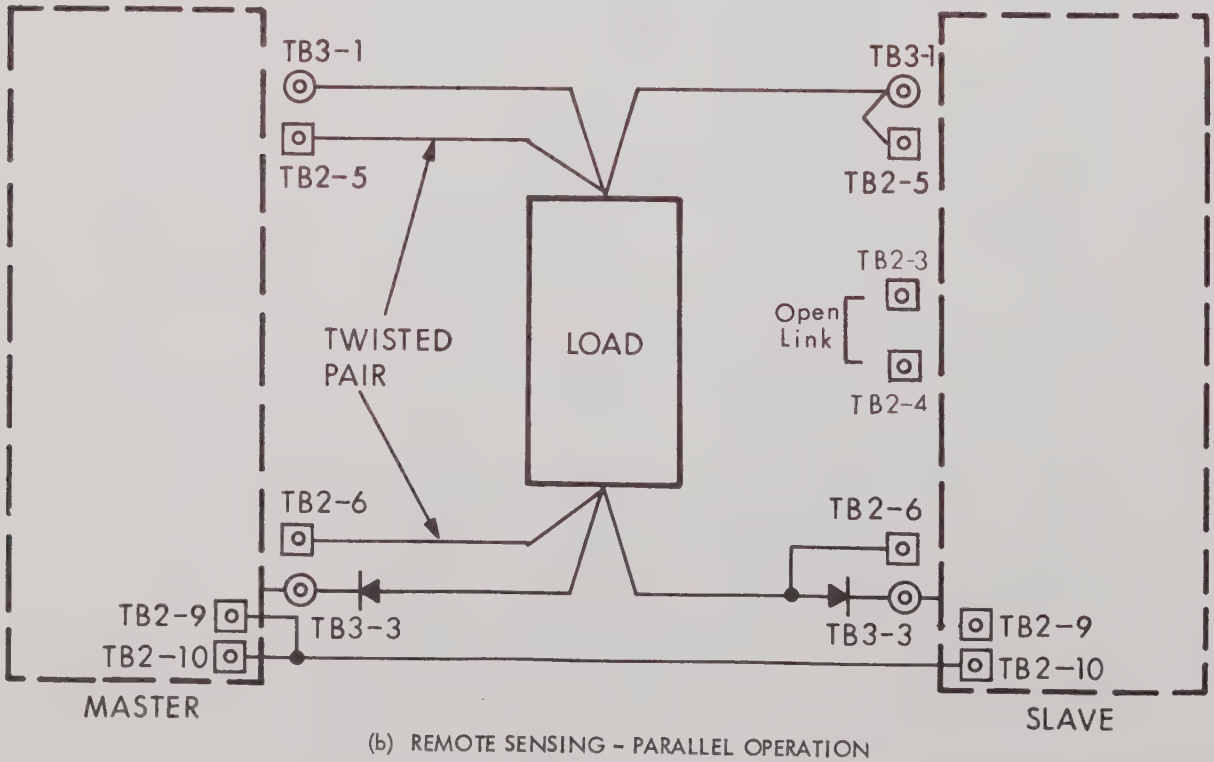

(b) REMOTE SENSING - PARALLEL OPERATION

FIGURE 3-4 PARALLEL OPERATION

3.5.1 Local Sensing (Figure 3-4 (a))

To connect two units in parallel, local sensing, (extend this procedure to connect an additional unit), proceed as follows:

1. Apply nominal input power to "MASTER" unit, and adjust output to desired load voltage. Set POWER switch to OFF.

2. Short master unit output terminals and apply input power. Adjust output current to Io/X, where Io is the total system output current, and X is the number of units in the system. Set POWER switch to OFF.

3. At "SLAVE" unit, remove links from across terminals TB2-3 and -4, and TB2-9 and -10. Connect a lead between TB2-10 terminals of each unit.

4. Observing polarity, run leads from the load to terminals TB3-1 and TB3-3 on each unit, with (2) diodes connected as shown in (a) of figure 3-4.

NOTE

Assure diode has a current capability at least equal to its associated supply. Connect anode to load in each case.

5. On each unit, open lead between terminals TB2-6 and TB3-3, and connect a lead from TB2-6 to the anode of the diode.

3.5.2 Remote Sensing (Figure 3-4 (b)

For remote sensing, remove existing leads from terminals TB2-5 and -6. Observing polarity, connect coaxial cable or twisted pair of wires from TB2-5 and -6 of master unit across load as shown in the figure.

3.5.3 Overvoltage Protection (OVP)

A special circuit in the SRL series allows the operator to set the desired overvoltage trip point without disturbing the voltage output of the supply. This feature enables the trip point to be set and verified even with the load connected. Proceed as follows:

1. Depress the OVERVOLTAGE SET toggle switch on the front panel. The panel voltmeter will then indicate the OVP trip voltage, instead of the unit output voltage.

2. Adjust the recessed overvoltage ADJ screw on the front panel until the voltmeter indicates the desired trip voltage.

3. Release the toggle switch.

Overvoltage indicator DS2 will illuminate when the OVP preset limit has been exceeded by power supply output, and remains on until the OVP circuit is reset. Resetting is accomplished by placing the unit POWER switch to OFF momentarily. To avoid nuisance tripping, it is recommended that the OVP trip point be set at least 10% above the desired output voltage, but not less than 1 volt.

4 THEORY OF OPERATION

4.1 GENERAL

This section discusses the basic theory of series pass regulation, describes the block functions of various circuits and then details the operation of each circuit. If used as a supplement to the troubleshooting data provided in section 5, it will aid in the isolation of unit faults. Schematic locations of the reference designations used throughout this section will be found in figure 6-2.

4.2 SCR PRE-REGULATED SERIES PASS PRINCIPLE

The SRL utilizes a combination of SCR pre-regulation and series pass principles to regulate unit output. The series pass function utilizes a variable impedance to absorb the difference between the filtered dc and the desired output voltage in the voltage-mode, and the compliance voltage in the current-mode. The variable impedance is provided by a number of transistor stages connected in parallel, all of which react simultaneously to an output-related control signal. Operation of the transistors, which are called passing stages, is illustrated in Figure 4-1.

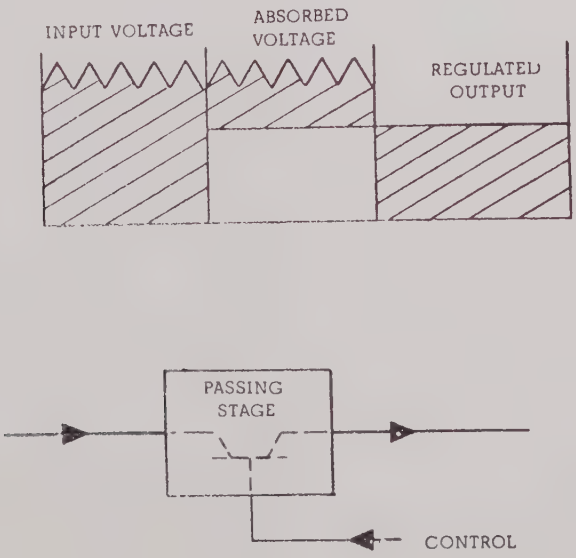

FIGURE 4-1.
SERIES PASS PRINCIPLE

For wide-range power supplies such as in the SRL series, the series pass regulator becomes less practical at higher power output levels. This is due to excessive voltage stored in the passing stage transistor at lower supply output voltages. The method used to restrict the power dissipated in the passing stage is pre-regulation, utilizing a pair of silicon-controlled rectifiers (SCR), whose outputs are controlled to maintain a constant dc voltage across the passing stage. (Paragraph 4.3.6 describes the operation of the pre-regulator circuit).

4.3 SRL POWER SUPPLY THEORY

NOTE

For this system-level discussion refer to the block diagram (Figure 4-2) and system schematic in section 6 (Figure 6-2).

Input power is applied through a phase-controlled SCR circuit consisting of CR 15/16, which function as part of the system pre-regulator circuit, to input transformer T1. The transformer output is then rectified and filtered through full-wave bridge rectifier CR18, sent through the passing stage, consisting of Q13 and associated components, and applied across the output through current and voltage sensing element.

This passing stage is the regulating device absorbing the difference between the pre-regulated dc and the desired or compliance voltages. In voltage-regulating operation, the voltage-mode section Q7, Q8, Q10 senses the output voltage, develops and amplifies error signal, and feeds this signal through a number of drivers to the passing stages. In current-regulating operation, the current-mode section Q3, Q5 monitors the output current through a sensing resistor R41 and regulates the voltage developed across the resistor by applying control signals to the drivers and consequently the passing stage. Unregulated supplies provide reverse-bias and collector supply voltages to the passing stages and forward bias for the current-mode differential amplifiers.

The voltage across the passing stage is sensed by a transistor Q18 through R66 in the pre-regulator circuitry, and compared to a reference voltage developed across R62. Any differential voltage across the base-emitter junction of Q18 is fed back as an error signal to the input SCR through pre-regulator amplifier (Q17), pulse generating circuitry (Q16) and pulse transformer T3.

An overvoltage amplifier (Q19, Q21-24) compares the output voltage to an adjustable reference (set by R85). If this reference is exceeded, the amplifier triggers "crowbar" CR50 which shorts the output of the unit. At the same time, the unit control circuitry is shut off. The unit must be switched off to remove this electronic short circuit.

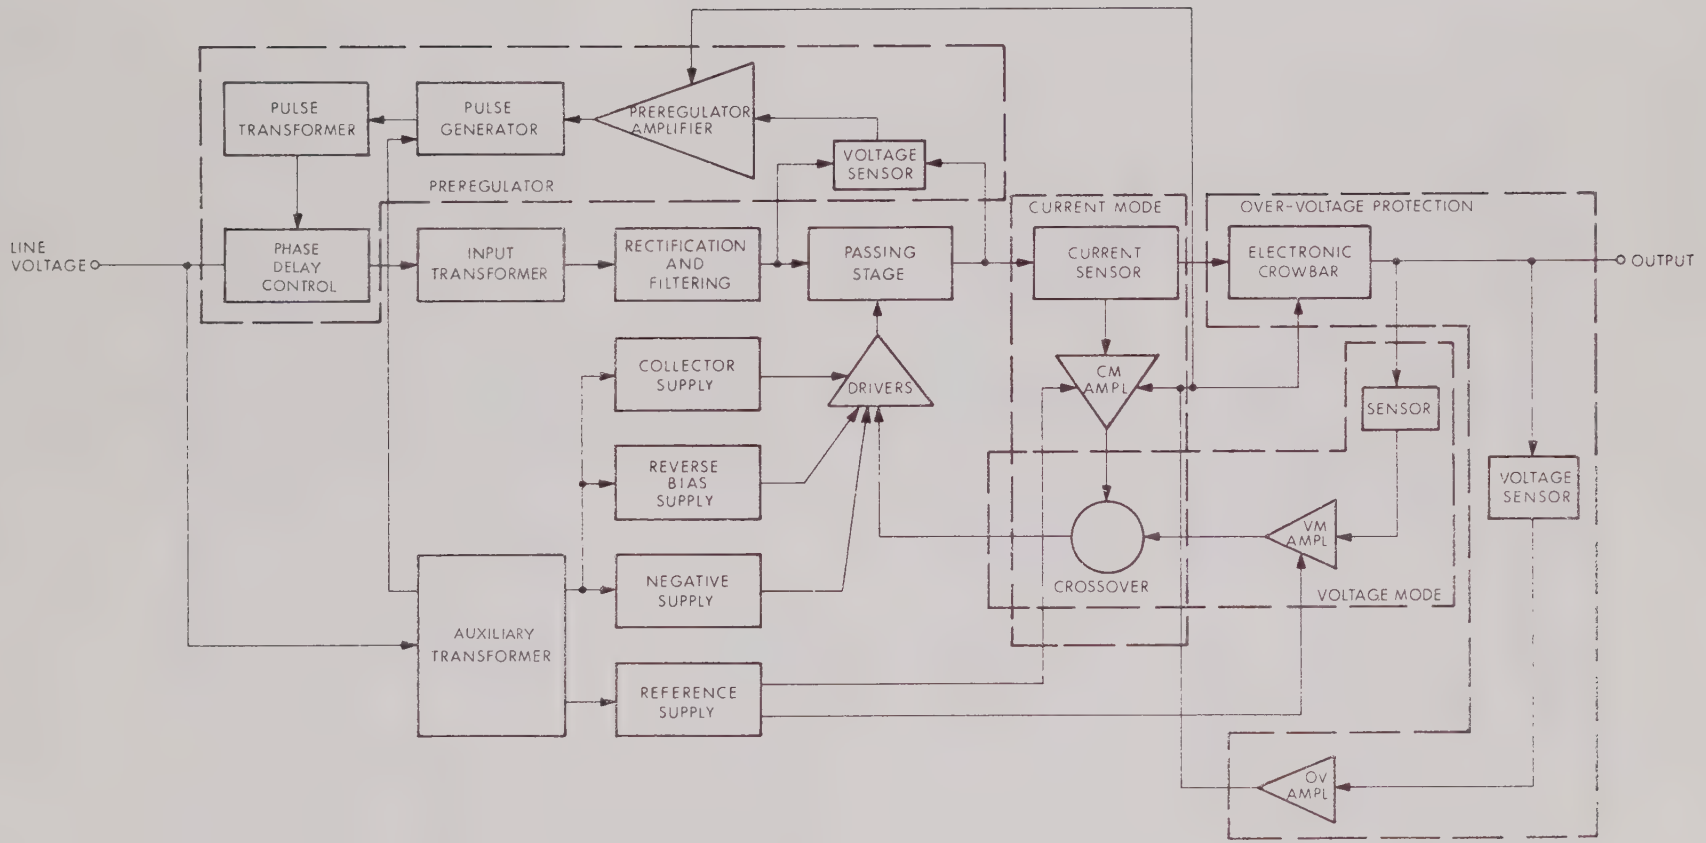

FIGURE 4-2. SRL SYSTEM BLOCK DIAGRAM

4.3.1 Reference Supply

The precisely regulated voltage required for output comparison and error-signal development is provided by a reference supply: (unregulated supply T2, CR1 and CR4), capacitor (C6), an error bridge (R5, R9 and CR5), two double-differential amplifiers (Q2) and a low-power passing stage (Q1). Resistor (R2) is a starting resistor, i.e., at turn-on it shunts current across the passing stage to allow the reference supply to start functioning.

In general, the supply operates as follows: the precise reference voltage developed by zener diode (CR5) is compared with a portion of the output voltage developed across R9. Error signal which develops is amplified first by differential amplifier (Q2-1/2-2) and then by amplifier (Q2-3/2-4). The amplified signal is then applied to the base of Q1, where it alters stage impedance and therefore the absorbed voltage.

As a specific example of circuit operation, assume that, as a result of an input line change, supply output voltage starts to increase. The voltage across R9 will then increase, and the base of Q2-2 will become more positive with respect to the base of Q2-1. Q2-2 will then conduct more current and Q2-1 less. (Note that the sum of the currents through Q2-1 and Q2-2 is held constant by the zener voltage across R8). With an increase in current, the voltage developed across R7 increases, while that across R6 decreases. The base of Q2-4 will therefore become more negative with respect to the base of Q2-3. As a result, Q2-4 will conduct less current, and the drive on Q1 will diminish. Q1 will increase its absorbed voltage, thereby regulating the output to a precise 8.9 volts.

4.3.2 Voltage-Mode Section

The voltage-mode section consists basically of two double-differential amplifiers (Q10-1, 10-2, and Q7, Q8), a constant-current generator (Q10-3) and sensing string (R21, R53A and B). The section functions to sense unit output voltage, to detect differences between the desired and the actual output voltages, and to convert and amplify these differences into error signals used to control passing-stage (Q13) impedance.

To clarify circuit operation, a specific example is given. Suppose that as a result of a load change the output voltage begins to increase. The increase is sensed across R53A and B, and Q16 base becomes more negative with respect to the base of Q10-2, which is connected to the positive sense terminal TB2-5. Current through Q10-1 decreases while that through Q10-2 increases. (The sum of the Q10 operating currents is fixed by constant-current generator Q10-3, R37, CR12 and 13). The decreasing current through R23 lowers its voltage while that across R24 increases. As a result, the base of Q7 becomes less negative with respect to the base of Q8, and the Q7's operating current decreases. This operating current is then the signal current to the drivers and passing stages, and any changes in it are reflected in changes in passing-stage impedance and consequently output voltage. A constant current source consisting of Q3-3 and R44 keeps Q7 operating in the high-gain region. A decrease in signal current,

resulting from an increase in output voltage, increases passing-stage impedance to reduce the output to the desired voltage.

Transistor Q9, diode CR10 and resistor R24 form the down-programming-time circuit. Under normal operating conditions, Q9 is nonconducting due to insufficient base-emitter voltage. However, when a programming-resistance or voltage-signal change is made to lower the output voltage, Q9 goes rapidly into conduction and almost instantaneously shunts the previously mentioned signal current into the sensing string. As a result, no signal is impressed on the drivers and the passing-stage impedance increases, absorbing more voltage.

As the bases of Q16 and Q17 regain their equilibrium, Q9 reverts to its nonconducting state, and normal regulation at the programmed voltage takes place.

4.3.3 Power-Limiting Circuit

In normal operation the passing stage voltage is kept constant by the preregulator. When the output is shorted, the voltage, and thus the power dissipated by the passing stage will exceed the maximum limits until input capacitor C23 reaches it final value. Therefore a power limiting, or protective circuit consisting of Q15, R49 and associated components has been included to limit the current through the passing stage.

Transistor Q15 senses the voltage across R49, as the voltage across the passing stage. In normal operation, the base/emitter junction is reverse-biased, and no collector current flows. As the passing stage voltage increases, the base of Q15 becomes more positive with respect to the emitter and turns Q15 on. The collector current then absorbs the current-mode reference current from Q6. This lowers the maximum current capable of being delivered by the passing stage, thus limiting the power dissipation.

4.3.4 Current-Mode Section

The current-mode section serves two functions. In constant-voltage operation, it protects the load from excessive currents by limiting action, and in constant-current operation, it regulates the output current to the desired value. Main components include differential amplifers (Q3-1 and -2, and Q5-1 and -2), constant-current generator (Q6), sensing resistor R41, switch (Q3-3) and potentiometers (R18A/B). (R15) is a calibration resistor used to adjust amplifier (Q5-1 and -2) zero-set point.

Basically, the current section functions as follows: the voltage across sensing resistor (R41), developed by the load current, is compared to a fixed reference. This reference is derived from 8.9-V regulated supply and the constant-current generator (U1, R17 and Q6) Any error signal which developes is amplified first by Q5-1 and -2, and by Q3-1 and -2, and then by Q3-1 and -2. A constant current source composed of Q4, R12, CR6 and CR7 is used to increase the collector impedance of Q3-2 and consequently the gain of the stage. The amplified signal is then applied to the base of switch Q3-3, which then functions as a variable impedance

to control the signal from the voltage-mode section to the driver and passing stages. It should be noted that the signal from the voltage-mode section is at full strength and that, in voltage-mode operation, Q3-3 is saturated.

As a specific example of current-mode-section operation, suppose that the load current begins to drop below the setting of the output current adjust (R18A and B). The voltage across R41 decreases, and the base of Q5-1 becomes negative with respect to the base of Q5-2. The operating current through Q5-1 increases and more voltage builds up across R31. As a result, the base of Q3-1 becomes more positive with respect to the base of Q3-2. The operating current through Q3-1 will then increase while that through Q3-2 decreases. As a result, the voltage developed across R10 drops, and the drive on Q3-3 increases. Q3-3's impedance will decrease, and the signal current to the drivers and passing stages will be greater. Consequently, passing stage impedance decreases, and output current increases to the regulator setting.

4.3.5 Drivers and Passing Stages

Basic components in the drivers and passing stages include transistors Q11/14, Q12, and Q13. Driver Q11/14 amplifies the signal produced by either the voltage-or current-mode sections, and applies to it the base of Q12 for further amplification. The amplified signals are then applied to the passing stage bases where they act to alter stage impedance, thereby controlling the output voltage or current. R40 assures equal current sharing amoung the passing stage.

4.3.6 Pre-Regulator

The pre-regulator section consists primarily of reference transistor Q20, amplifiers Q17, and Q18, pulse generator Q16 and transformer T3.
The function of the pre-regulator is to generate and control the firing pulses for the input SCR, thus controlling the voltage appearing across the passing stage network.

The pulse-forming section is composed of unijunction transistor Q16, capacitor C39, and zener diode CR38. This circuit produces pulses at the secondary of T3 which are synchronized to the zero crossing of the input sinewave voltage of T2 (see figure 6-7). CR38 maintains a constant voltage to operate the uni-junction transistor Q16. When the input sinewave voltage goes to zero at the end of each half-cycle, the zener voltage collapses toward zero. Uni-junction Q16 fires and resets the voltage across C39, which then recharges through R60 to a "pedestal" voltage established by the voltage at the collector of amplifier Q17.

Q16 will fire when its firing potential, (pre-determined at approximately 50% of the voltage across CR38) is reached by C39. A firing pulse is then produced and transmitted to the SCR through T3. The time taken for C39 to charge to the firing potential is controlled by the level of the pedestal voltage, which is a function of the collector current of Q17. The base of Q17 is driven by the error signal of pre-regulator amplifier Q18. Figure 6-7 depicts typical pulse-forming network waveforms as related to the rectified input waveform.

The pre-regulator amplifier section senses the voltage across the passing stage, and produces an error signal proportional to any increase or decrease in the passing stage voltage. This signal is such that if the voltage increases, the current through Q17 increases, lowering the pedestal voltage, causing the firing angle of the primary SCR to be delayed, and in turn maintaining the passing stage voltage relatively constant.

4.3.7 Overvoltage Protection

This circuit compares the output voltage with a preset reference voltage and activates electronic "crowbar" CR50 when this limit is exceeded. S2 on the front panel (OVERVOLTAGE SET) provides for monitoring the reference tripping voltage level.

The reference voltage is established by OVERVOLTAGE ADJ potentiometer R85 on the front panel, and appears on the base of Q23, which is half of the Q22/Q23 differential comparator. The power supply output voltage is applied to the base of Q22, whose output is applied to CR50 through SCR diode CR45. When CR45 fires, due to an overvoltage condition, it triggers the crowbar which clamps the output voltage at zero, activates the OVERVOLTAGE indicator DS2 on the front panel and cuts off the input of the pre-regulator through Q19 and CR44, calling for maximum phase delay, thus reducing the dc input voltage. Transistors Q24/Q25 act as a "turn-on" circuit, which prevents the overvoltage circuitry from triggering during unit turn-on/turn-off.

4.3.8 Reverse-Bias Section

The reverse-bias section functions (1) during "load-off" transients to improve response time by rapidly cutting off the passing stages and (2) to absorb "thermal-effect" current generated by high-junction temperature. The section is comprised of an unregulated supply and a number of biasing resistors.

A secondary of transformer T2, rectifiers CR22/CR23 and capacitor C2 form a supply which feeds reverse bias through R45-48 to transistors Q11, Q12, and Q13.

4.3.9 Stabilization

A tendency toward instability under certain operating conditions is inherent in the operation of any high-gain feedback amplifier. To preclude unstable operation, SRL power supplies have been equipped with a number of stabilization networks and capacitors. In the voltage-mode section, these include networks C30-R54, C15-R20 and capacitors C13, C16 and C43. The current-mode section includes network C12-R16, and capacitor C14. Network C9-R3 and capacitor C3 are used in the reference supply, and capacitors C24/C25 stabilize drivers Q12 and Q11/Q14.

4.3.10 Power Section

In the power section, ac line voltage is applied to the primary of T1 through input filter L1, and SCR's CR15/CR16. The output of the secondary is rectified by full wave bridge rectifier CR18, and filtered by capacitor C23 before being delivered to the passing stage input.

4.3.11 Thermal Overload Section

The thermal overload section consisting of thermostat S3, resistor R95, diode CR57 and indicator DS3, functions when unit temperature exceeds a predetermined limit. When this limit is reached, thermostat S3 closes, and the voltage across R74 is sufficient to cut off the pre-regulators, thus blocking the primary DCR's and removing the dc input to the unit.

4.3.12 Collector Supply

In order to limit the voltage across the passing stage, a separate bias supply provides collector bias voltages to the passing stage driver transistors Q11, Q12 and Q14. This supply consists of secondary T2-15, -16 and -17, diodes CR27/ CR28, and capacitor C26.

5 SERVICE AND REPAIR

5.1 GENERAL

This section provides periodic-servicing information, troubleshooting data, calibration procedures and performance testing procedures. The troubleshooting data should be used in conjunction with both the schematic diagram (Figure 6-2), which gives voltage-check points, and Section 4, which outlines the principles of operation. Figure 6-1 physically locates the parts appearing on the schematic. Any questions pertaining to repair should be directed to the nearest service representative, or to the Service Dept., Sorensen Company, 676 Island Pond Road, Manchester, New Hampshire, 03103. Include the model and serial numbers in any correspondence. Should it be necessary to return a unit to the factory for repair, authorization from the Service Department must be obtained first.

5.2 PERIODIC SERVICING

Units in the SRL Series should periodically be removed from service and cleaned. Compressed air at approximately 5 PSI should be used to remove dust or other accumulations from around chassis components. Naphtha or an equivalent solvent should be used on painted surfaces. The front panel may be washed with a weak solution of soap and warm water.

5.3 TROUBLESHOOTING

Table 5-2 provides a list of malfunction symptoms along with a tabulation of the possible cause or causes for each symptom. Note that the failure of one component may result in a "chain reaction" effect. For example, if one of the passing stages (Q13) opens, the remaining Q13 (where provided) may become overloaded and subsequently fail. In a like manner, if a diode in one of the full-wave rectifiers fails, its complementary rectifier and the main transformer may be damaged.

The data listed in Table 5-2 is based on prototype reliability studies, not on actual solutions to field problems, and therefore may be imcomplete. Where the probable cause for a symptom lists a transistor short, it is either a base-collector, emitter-collector or base-emitter-collector short. Base-emitter shorts may give an entirely different set of symptoms. It is therefore recommended that before a particular section is checked for failures, each transistor within the section be tested for base-emitter shorts. (Typical base-emitter voltage is approximately 0.6 volt.)

5.4 CALIBRATION

Following repair, the unit should be re-calibrated to insure that replacement components have not appreciably altered performance characteristics. When calibrating, follow the sequence outlined in the following paragraphs. It may be advisable to perform Hi-Pot test (para. 5.6) prior to calibration.

NOTE

If under full load, at high/low line inputs, the dc passing stage voltage (from C23 (+) to positive output terminal) is within ±10% of item A, Table 5-1, further calibration of the unit should not be necessary.

5.4.1 Pre-Test Inspection

Check that links are firmly in place across barriers on terminal board and leads between sensing and output terminals.

5.4.2 Preliminary Adjustments

1. Pre-Regulator

a. On the printed circuit board, turn potentiometers R9 (reference adjust), R15 (current mode zero adjust) and R63 (passing stage voltage set) to midpoint in rotation range; turn R78 (Pre-regulator firing angle control) fully counterclockwise.

b. On the front panel, turn VOLTAGE mode COARSE control (R53A), FINE control, (R53B), CURRENT mode COARSE control (R18A), FINE control (R18B) and OVERVOLTAGE SET (R85) fully clockwise.

c. Connect a voltmeter across C11 (reference supply output).

d. With nominal* input voltage applied at 60 Hz to the input and with no load applied, set POWER switch to ON. Pilot light should glow.

e. Adjust R9 to obtain 8.9 volts $\pm$ 0.1V across C11.

f. Set POWER switch to OFF, disconnect voltmeter from C11.

g. Connect a voltmeter from positive terminal of C23 to positive output terminal, (hereafter referred to as passing stage voltage). Rotate R78 clockwise. Connect an oscilloscope across terminals 4 and 5 of transformer T3.

h. Set POWER switch to ON. Set input voltage to 125 Vac (or 230 Vac on 210V models). Set output for rated voltage (item B, Table 5-1) and rated current (item C, Table 5-1).

i. Adjust R63 to obtain pass-stage voltage per item A of Table 5-1.

k. Set ac input to 105 Vac (190 Vac for 210V models). Rotate R78 fully counterclockwise. This will severely reduce the output voltage. Note that full load remains applied during this test.

l. Increase R78 clockwise until full rated output voltage at full load current is just obtained, holding 105 Vac** ac input.

m. Vary the ac input line (below 105 Vac**) until the scope picture (Figure 5-1) shows the minimum time "t".

n. If this time is 0.5 milliseconds ($\pm$ 0.2), then R78 is correctly set. If "t" is greater than 0.7 mS, rotate R78 clockwise to decrease "t" minimum (or counterclockwise rotation of R78 to increase "t" minimum).

NOTE

The final setting of 0.5 mS should occur between 90 and 105 Vac line (or 165 to 190 Vac for 210 Vac models).

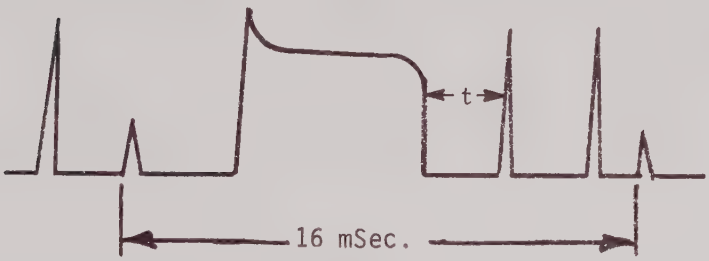

FIGURE 5-1 - T3 SCOPE DISPLAY

o. Check the waveform across terminals 7 and 8 of T3. It should be similar to that across terminals 4 and 5.

p. Using 125 Vac (230 Vac for 210 Vac models) and full rated adjust voltage and current, reset pass stage voltage per step "h" above.

q. Set POWER switch to OFF. Apply locking compound to R63 and R78. Remove oscilloscope from transformer T3 and voltmeter from C23 (+) to positive output.

*Nominal: 115, 210 or 230 Vac as applicable
** 190 Vac on 210 Vac models.

NOTE

Re-calibration per steps "i" through "q" is required for 50 Hz operation.

2. Voltage-Mode Calibration

a. At the rear terminal board (mounted on the printed circuit board) remove link between terminals 3 and 4 and connect a precision resistance set exactly to that value specified under Item D in Table 5-1. Assure that the leads are firmly connected both at terminal board and at box.

b. Connect a precision voltmeter (J. Fluke or equivalent) across rear output terminals.

c. With nominal input voltage at 60 Hz applied to input, set POWER switch to ON.

d. Adjust R9 to obtain output voltage specified under Item B, Table 5-1. Apply locking compound to R9.

3. Current-Mode Calibration

a. Rotate COARSE and FINE CURRENT controls fully counterclockwise. Set POWER switch to OFF. Connect appropriate ammeter in series with the load.

b. Set POWER switch to ON, and adjust R15 to obtain current between zero and that specified under Item E, Table 5-1. Apply locking compound to R15. Set POWER switch to OFF. Remove ammeter.

Table 5-1A, Difference Data

Item	20-12	40-6	60-4	10-25	20-25	40-12	60-8
A (Vdc)	8.9±0.1	11.4±0.1	14.5±0.1	4.8±0.1	6.6±0.1	12.5±0.1	14.6±0.1
B (Vdc)	20±0.07	40±0.14	60±0.21	10±0.035	20±0.07	40±0.14	60±0.21
C (Adc)	12	6	4	25	25	12	8
D (ohms)	4000	8000	12,000	2000	4000	8000	12,000
E (mA)	±10	±5	±5	±20	±20	±10	±5

Table 5-1B, Difference Data

Item	10-50	40-25	60-17	10-100	20-50	40-50	60-35
A (Vdc)	5.4±0.1	9.9±0.1	13.7±0.1	5.4±0.1	7.0±0.1	8.5±0.1	13.4±0.1
B (Vdc)	10±0.035	40±0.14	60±0.21	10±0.035	20±0.07	40±0.14	60±0.21
C (Adc)	50	25	17	100	50	50	35
D (ohms)	2000	8000	12,000	2000	4000	8000	12,000
E (mA)	±50	±25	±15	±100	±50	±50	±20

5.5 PERFORMANCE TEST

Sensitive instruments such as the SRL series require rigorous testing methods if a true evaluation of performance is to be made. Wherever possible, twisted leads should be used with test equipment to reduce stray pickup. At the power supply terminal board, these leads must be firmly screwed to the terminals. Alligator clips and similar types of connectors are not suitable. Note that the output specifications are applicable at rear terminals only. (Front panel binding posts may introduce errors which, although small, are sufficient to adversely influence measurements.) In addition, grounding techniques in which more than one device in the test system is grounded (excluding ac inputs) may introduce extraneous ripple through ground loops. Although unrelated to supply output, this ripple will be displayed on the test oscilloscope.

5.5.1 Voltage-Mode Regulation

To check voltage-mode regulation, connect test system as shown in Figure 5-2. For regulation testing, the oscilloscope and RMS voltmeter are not required. Use a variable autotransformer for ac input, connect an ac voltmeter across tranformer output terminals and proceed as follows:

1. At no load, adjust output to maximum rated voltage.
2. Adjust differential voltmeter internal voltage to obtain a null indication.
3. With proper (nominal) input applied, load the unit until dc ammeter indicates rated output current (at 55°C). Record deviation from null position.
4. Decrease the input by 10%, and readjust voltmeter internal voltage to regain the null position. With full load on the unit, reset the input to 10% above nominal. Note the deviation from null. This shall be equal to, or less than, the specification listed in Table 1-2.

5.5.2 Voltage-mode PARD*

To check a periodic and random deviations in the voltage mode, connect a true RMS voltmeter and oscilloscope across unit sense terminals as shown in Figure 5-2. RMS voltmeter should have a 10MHz-7MHz bandwidth and bandwidth of oscilloscope should be 0-25MHz. Proceed as follows:

1. Apply nominal input voltage.
2. At no load, adjust unit output voltage to maximum rated.
3. Apply load until dc ammeter indicates rated output current at 55°C.
4. Observe oscilloscope and voltmeter. Maximum RMS and peak voltages should not exceed the the specifications as noted in Table 1-2.

* Deviation in output voltage from its average value.

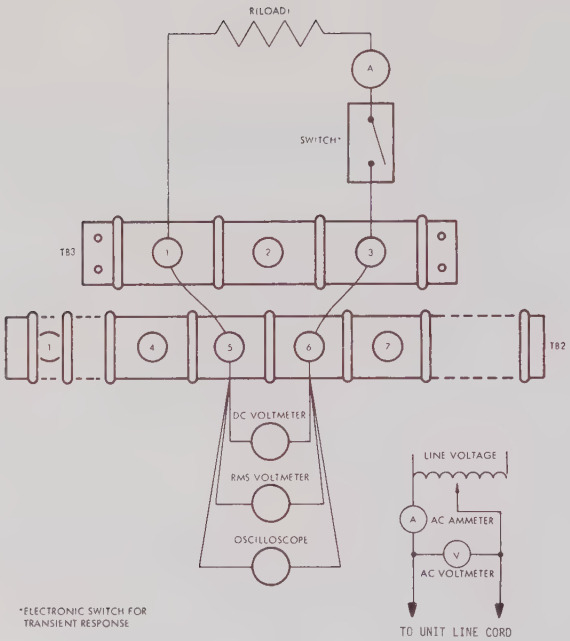

FIGURE 5-2
VOLTAGE MODE
PERFORMANCE TEST SETUP

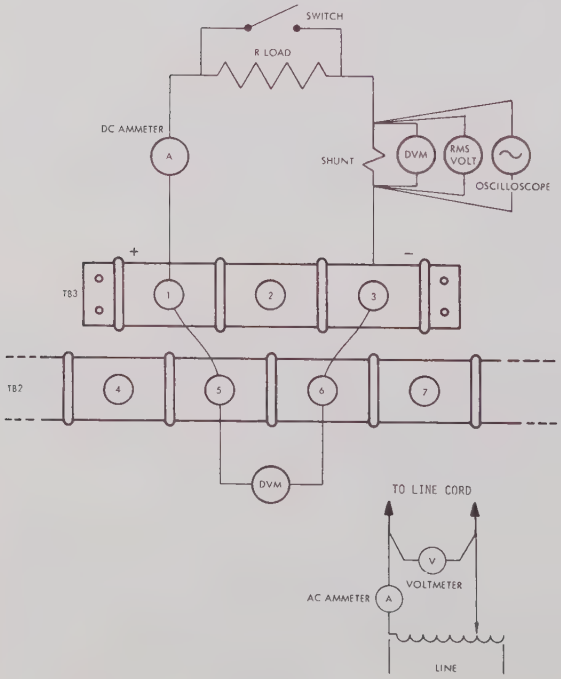

FIGURE 5-3
CURRENT MODE
PERFORMANCE TEST SETUP

5.5.3 Current-mode Regulation

This test consists of measuring the voltage-drop deviation resulting from a full-line swing and a full-load change across a shunt resistor. Set up test equipment as shown in Figure 5-3. If possible, select a precesion (± 1%) shunt which will provide a voltage drop of approximately 0.5 volt at unit maximum rated current. Also, to reduce temperature-coefficient effects, the shunt selected should be capable of dissapating 10 times the maximum power output attainable. The load must be able to absorb the full compliance voltage. For regulation testing, the true RMS voltmeter and oscilloscope are not required. Proceed as follows:

1. At no load, rotate VOLTAGE controls fully clockwise. Note the output indicated on the digital voltmeter.

2. Apply load until output drops to exactly the maximum rated compliance voltage.

3. Set internal voltage of differential voltmeter to obtain a null indication.

4. Close load shorting switch and record deviation.

5. Open switch and adjust input voltage to 10% below nominal. If necessary, reset voltmeter to null position and then vary the input to 10% above nominal. Note any deviation.

The sum of the deviations obtained should be no greater than that specified in Table 1-2.

5.5.4 Current-mode PARD

To check current-mode periodic and random deviations, connect a true RMS voltmeter and an oscilloscope across shunt as shown in Figure 5-3. The differential voltmeter is not required. Load resistor should be noninductive. Proceed as follows:

1. Set input voltage to 10% above nominal.

2. Apply sufficient load to obtain maximum compliance-voltage indication on digital voltmeter.

3. Observe RMS voltmeter and oscilloscope. Maximum allowable RMS current should not be greater than that specified in Table 1-2.

5.5.5 Drift

The drift in both voltage and current modes is measured using a strip-chart recorder at constant load, line and ambient temperature. Allow one-half hour for voltage-mode warmup and a full hour for current-mode warmup. Drift specifications are listed in Table 1-2.

TABLE 5-2 SRL TROUBLESHOOTING CHART

SYMPTOM	PROBABLE CAUSE	REMEDY
I No Output, Pilot light does not glow	Internal Fuse (F2)	Replace F2
II Low or No Output-Voltage Mode	A. Overvoltage circuitry	1. Check that DS2 (OVERVOLTAGE) on front panel is not illuminated 2. Set S2 to overvoltage set position and read level on meter. Adjust R85 (OV ADJ on front panel) to its maximum level. Switch unit off, and on again after a few moments. If problem does not disappear, determine if output current adjust (R18) functions properly. If so, check for CR50 short. If R18 does not function, check for CR45 short, or defective Q22-Q25.
	B. No pre-regulator output (no voltage across C23).	1. Check for presence of firing pulses at T3-4 and -5, or T3-7 and -8 (See Figure 6-7). If pulse is present, SCR CR15, or 16 defective. 2. If no pulse at T3, check signal across CR38 (Figure 6-7). If proper signal exists, check for defective transistors Q16 or Q17. 3. If CR38 signal is not correct check CR38, CR35 or CR36.
	C. 4.7-volt supply	Check for 4.7 volts across CR29. If incorrect, check CR29 or R28.
	D. 9-volt supply	Check for proper voltage across C11. If incorrect adjust using R9. If no effect, defective Q1 or IC Q2.
	E. Current Mode section	Short Q3-3. If output voltage exists, check for defective Q5, Q3-1, Q3-2 or Q4.
	F. Voltage Mode section	Short Q3-3. If no output voltage, check bias across CR11. If forward-biased check Q7, Q8 and check for shorted Q3-4. If reverse-biased, replace Q10 and check for shorted Q3-4.

TABLE 5-2 SRL TROUBLESHOOTING CHART

SYMPTOM	PROBABLE CAUSE	REMEDY
II Low or No Output, Voltage Mode (continued)	G. Drivers or Passing Stage	Check for open Q11-Q14.
III High Output, Voltage Mode	A. Reference supply	Output should be ripple-free at 8.9 Vdc. If adjustment with R9 is to no avail, check for shorted Q1, or defective Q2.
	B. Drivers or Passing Stage	Short TB2-9 to TB2-5. If no change, check for shorted Q11-Q14. If problem disappears, check for open Q3-4, Q8, or defective Q10 or shorted Q7. Check for presence of 4.7 volts across CR29.
IV Low Output, Current Mode	Current Mode Section	1. Check for 2.1 volts across R17. If not, check U1 and Q6. 2. Place short across Q3-3. If no change, check for open Q7. 3. Check for Q15 leakage or shorted or defective associated components. 4. Check for defective Q5 or Q3.
V High Output, Current Mode	Current Mode Section	1. Same as IV-1. above. 2. Check for shorted Q3-3 or defective Q5 or Q3.
VI Repeated shutsown of unit due to thermostat operation.	Excessive voltage across C23, due to: A. Pre-regulator B. Passing stage C. Fan inoperative	 CR15/CR16 SCR Shorted components. Check Q11-Q14. Check fan motor or restriction of fan blade.

5.6 HI-POT TEST PROCEDURE

High potential test procedures have been carefully carried out at the factory. These units are 100% tested and should not require further testing in the field.

High potential tests can overstress or destroy the power semiconductors in this power supply if improperly applied.

Isolation measurements may be made using a standard VOM (Simpson 260 or equivalent) on the highest resistance scale available.
If it is essential to use the high potential test method, please contact the factory for information on special precautions that should be taken.

CAUTION

Sorensen Company cannot be held liable for any malfunctions resulting from the application of a high potential test (greater than 100V). See standard Sorensen Company warranty.

6 DRAWINGS AND PARTS LISTS

6.1 GENERAL

This section contains all the drawings referenced throughout the text. Included are the system schematic diagram, a typical printed-circuit board showing component layout, typical chassis assembly photographs with major components identified, and typical impedance and crossover characteristic curves.

This section includes the replaceable parts lists. All parts are identified by circuit symbol, keyed to the schematic diagram. Included are part descriptions, Sorensen part number and coded manufacturer part number, type or series. Coded identifications of representative manufacturers are summarized below. Values for components required with 210/230-volt inputs (M1/M2 options) are detailed.

Mfr. Code	Manufacturer	Mfr. Code	Manufacturer
AB	Allen Bradley Co.	MAL	P. R. Mallory Co.
AC	Acushnet Capacitor Co.	MP	Miller Products Co., Inc.
AM	Ammon Instrument Co.	NS	National Semiconductor
BNS	Bourns, Inc.	RAM	RAM Electronics
BUS	Bussman Mfg.	RAY	Raytheon Co.
CD	Cornell-Dubilier Corp.	RCA	RCA Corporation
CEC	Concord Electronics Corp.	RCL	RCL Electronics
CG	Corning Glass Works	RDM	Radio Material Co.
CL	Clarostat Corp.	SAN	Sangamo Electric
CTS	CTS Corporation	SE	Seacor, Incorporated
ELA	Electra/Midland	SEM	Semtech Corporation
EMC	Electromotive Mfg. Co.	SP	Sprague Electric
FS	Fairchild Semiconductor	SR	Sorensen Company
GE	General Electric Co.	ST	Solitron Devices
GI	General Illuminating Co.	STM	STM Corporation
IND	Industrial Devices	SU	Superior
IR	International Rectifier	TEL	Tel-Labs
IRC	International Resistance Co.	TI	Texas Instruments
KEM	Kemet Div. Union Carbide Corp.	UC	Union Carbide
KC	Keystone Carbon	WH	Westinghouse Semiconductors
LF	Littelfuse Corporation	WL	Ward Leonard
MA	Motorola		

6.2 ORDERING PARTS

When ordering parts from Sorensen Company, include the Sorensen part number and the unit model number. Call (603)668-4500, or address order to:

Sorensen Company
Replacement Parts Dept.
676 Island Pond Road
Manchester, N. H. 03103

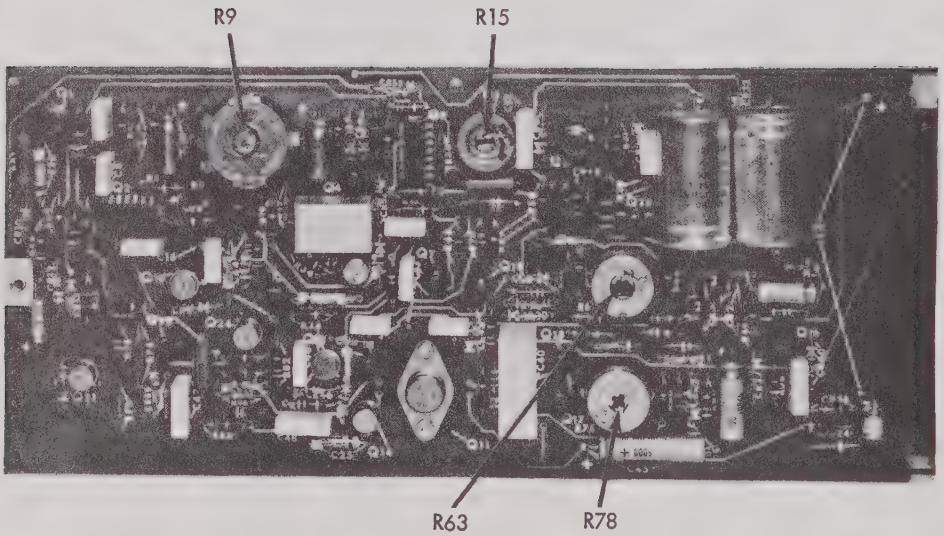

Figure 6-1 SRL Series-Typical Printed Circuit Board

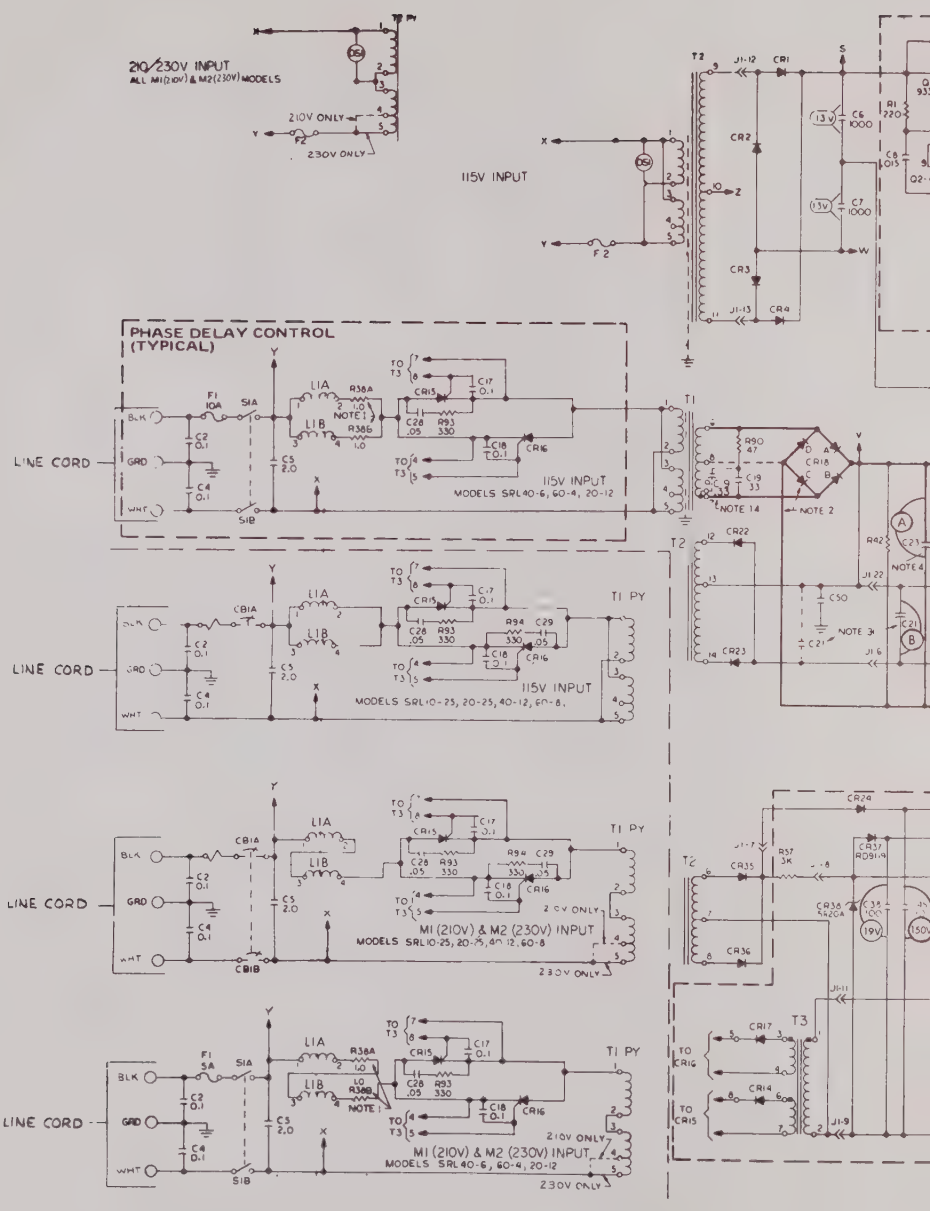

* SELECTED FOR VOLTAGE BREAKDOWN CHARACTERISTICS

UNIT	C12	C 13	C 21	C 23	C 60	C 24	C 25	C 26	C 30	C 31	C 50	Q 9
10-25	.1	.01	6.8K	4 X 69K	—	.047	.001	9.6K	.01	3.5K	.15	2N 697
20-12	.1	.01	1.5K	2 X 20K	—	.01	.0033	—	.0022	1K	.10	2N 697
20-25	.1	.01	6.8K	5 X 21K	—	.01	.001	9.6K.	.015	3.5K	.15	2N 697
40-6	.1	.0022	800	14K	.01	.001	.0033	—	.0015	1.1K	.10	2N 697*
40-12	.1	.01	1K	3 X 8K	.01	.001	.0033	—	.0022	1.5K	.15	2N 697*
60-4	.1	.0022	800	6.5K	.01	.001	.0033	—	.001	1K	.047	40321
60-8	.1	.0022	1K	2 X 6.5K	.01	.001	.0033	—	.01	1.5K	.15	40321

Q12	Q13	Q14	Q2
2N 3055	2N 3771 (3)	2N 697	2N
2N 3055	2N 3055 (2)	2N 697	933
2N 3055	2N 3055 (4)	2N 697	938
40312	2N 3055 (2)*	2N 697*	RC/
40312	2N 3055 (3)*	2N 697*	RC/
40313	2N 3442 (2)	40321	RC/
40313	2N 3442 (3)	40321	RC/

UNIT	R 39	R 40	R 41	R 42	R 45	R 46	R 47	R 48	R 49	R 52	R 53A	R 53B	R 55	R 62	R 63	R 65	R 66	R 7
10-25	0	.1(3)	.020	15	1.2K	1.2K	270	5	18K	10K	2K	20	.055	330	1K	4.7K	5.6K	12,
20-12	.15	.18(2)	.080	50	2.2K	2.2K	470	25	33K	4.7K	4K	40	.4	680	400	12K	10K	24,
20-25	0	.18(4)	.020	25	1.2K	1.2K	220	4	33K	10K	4K	40	.055	680	1K	12K	10K	24,
40-6	0	.27(2)	.150	150	—	2.2K	680	50	47K	4.7K	8K	80	.4	820	400	22K	18K	49,
40-12	.1	.18(3)	.080	75	—	2.2K	470	25	47K	4.7K	8K	80	.44	820	400	22K	18K	49,
60-4	0	.39(2)	.250	400	—	2.2K	680	75	47K	4.7K	12K	120	.4	1K	400	33K	27K	80,
60-8	0	.39(3)	.125	200	—	2.2K	390	35	47K	4.7K	12K	120	.24	1K	400	33K	27K	80,

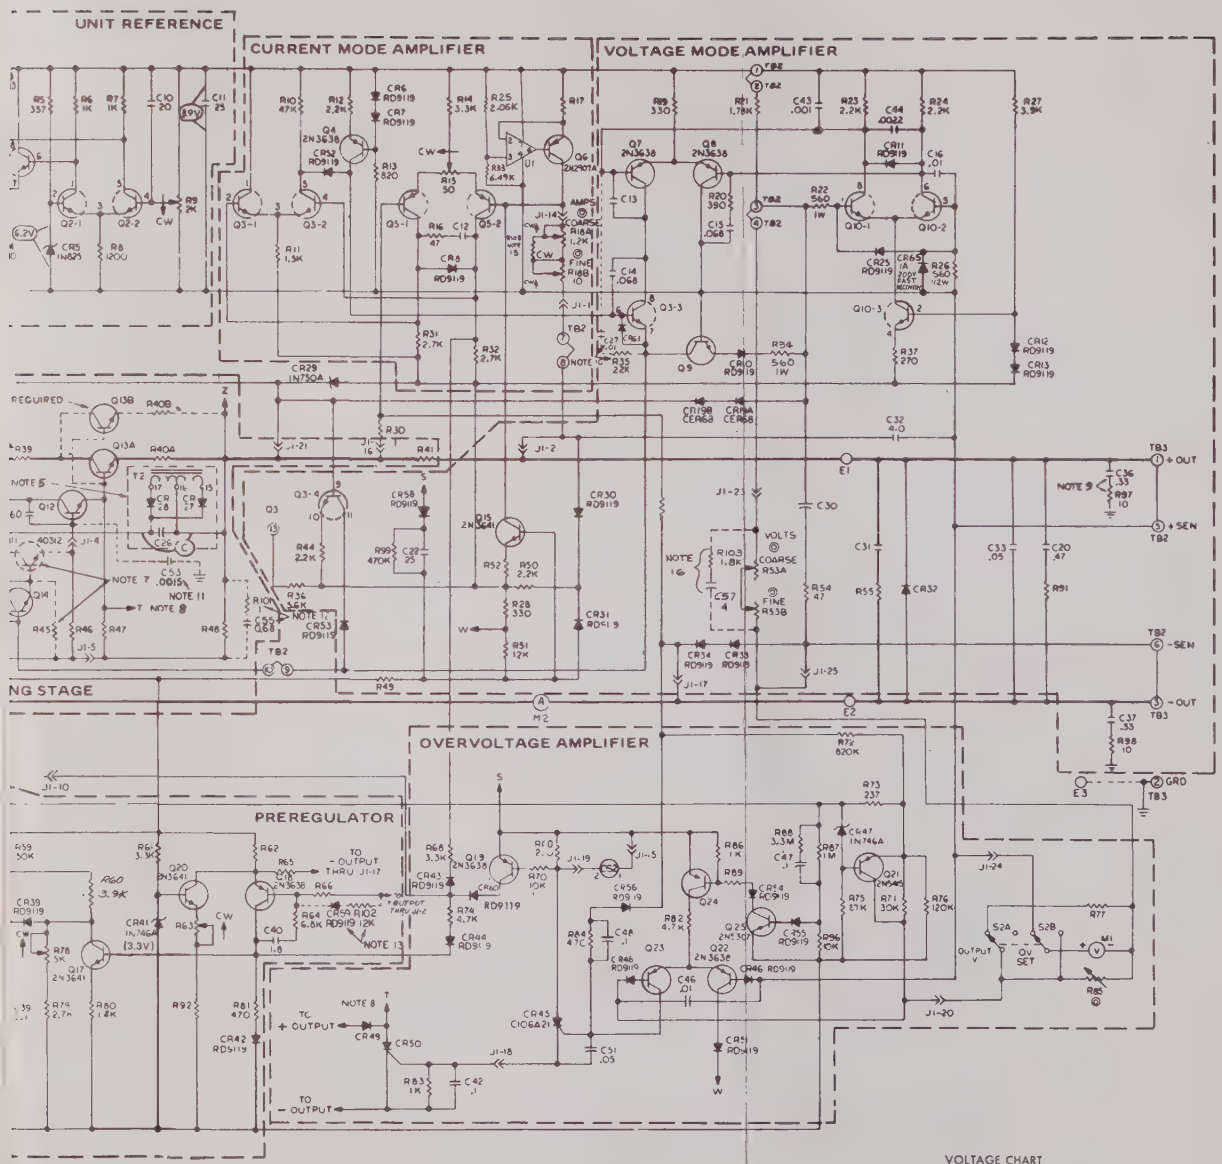

Notes:

1. R38A and B inserted only on models 40-6 and 60-4.
2. CR18C and D not used on 10-25, and indicated lead is wired to T 1-8.
3. C21 relocated to dotted position except Models 20-12, 40-6 and 60-4.
4. C60 used only on models 40-12, 60-8, 40-6 and 60-4.
5. Bias supply CR27, CR28 and C26 not used on 20-12, 40-6, 40-12, 60-4 and 60-8 in which case referenced dotted connection is used.
6. R39 inserted only on 20-12 and 40-12.
7. Q11 and R45 not used on 40-6, 40-12, 60-4, 60-8 (add connection between Q14E and J 1-4)
8. CR49 inserted and indicated lead "T" used only on 60-8.
9. C36 and R97 omitted on 20-12, 40-6 and 60-4.
10. C27 and R35 not used in 40-6, 60-4, and 60-8.
11. C53 used only on 20-12, 40-6 and 60-4.
12. C55 and R101 used only on 20-25.
13. CR59 and R102 used only on 60-4 and 60-8.
14. C19 relocated to dotted position on Model 20-25.
15. R105 MAY BE OMITTED IN SOME UNITS, AS DETERMINED BY TEST LIMITS.
16. C57 AND R103 USED ONLY ON MODELS 20-25 AND 60-8.

VOLTAGE CHART

MODEL	A (C23)	B (C21)	C (C26)
10-25	14.8	14	11
20-12	28.9	27	Not Used
20-25	26.6	14	11
40-6	51.4	27	Not Used
40-12	52.5	27	Not Used
60-4	74.5	27	Not Used
60-8	74.6	27	Not Used

Q24	R 17	R 29
2N 3638	4.32K	604K
9338	2.15K	316K
9388	4.32K	1.21M
RCA62490	2.15K	332K
RCA62490	2.15K	634K
RCA62490	2.15K	316K
RCA62490	2.15K	634K

R 89	R 91	R 92	R105
27K	.24	150	11K
22K	1	100	7.87K
22K	.24	100	11K
18K	1	100	5.62K
18K	.24	100	7.87K
15K	1	100	11K
15K	.24	100	11K

UNIT	F2 115V	F2 210V	F2 230V
10-25	1.5A	1A	1A
20-12	1A	1/2A	1/2A
20-25	1.5A	1A	1A
40-6	1A	1/2A	1/2A
40-12	1A	1/2A	1/2A
60-4	1A	1/2A	1/2A
60-8	1A	1/2A	1/2A

FIGURE 6-2
SCHEMATIC DIAGRAM
SRL CONVECTION POWER SUPPLIES

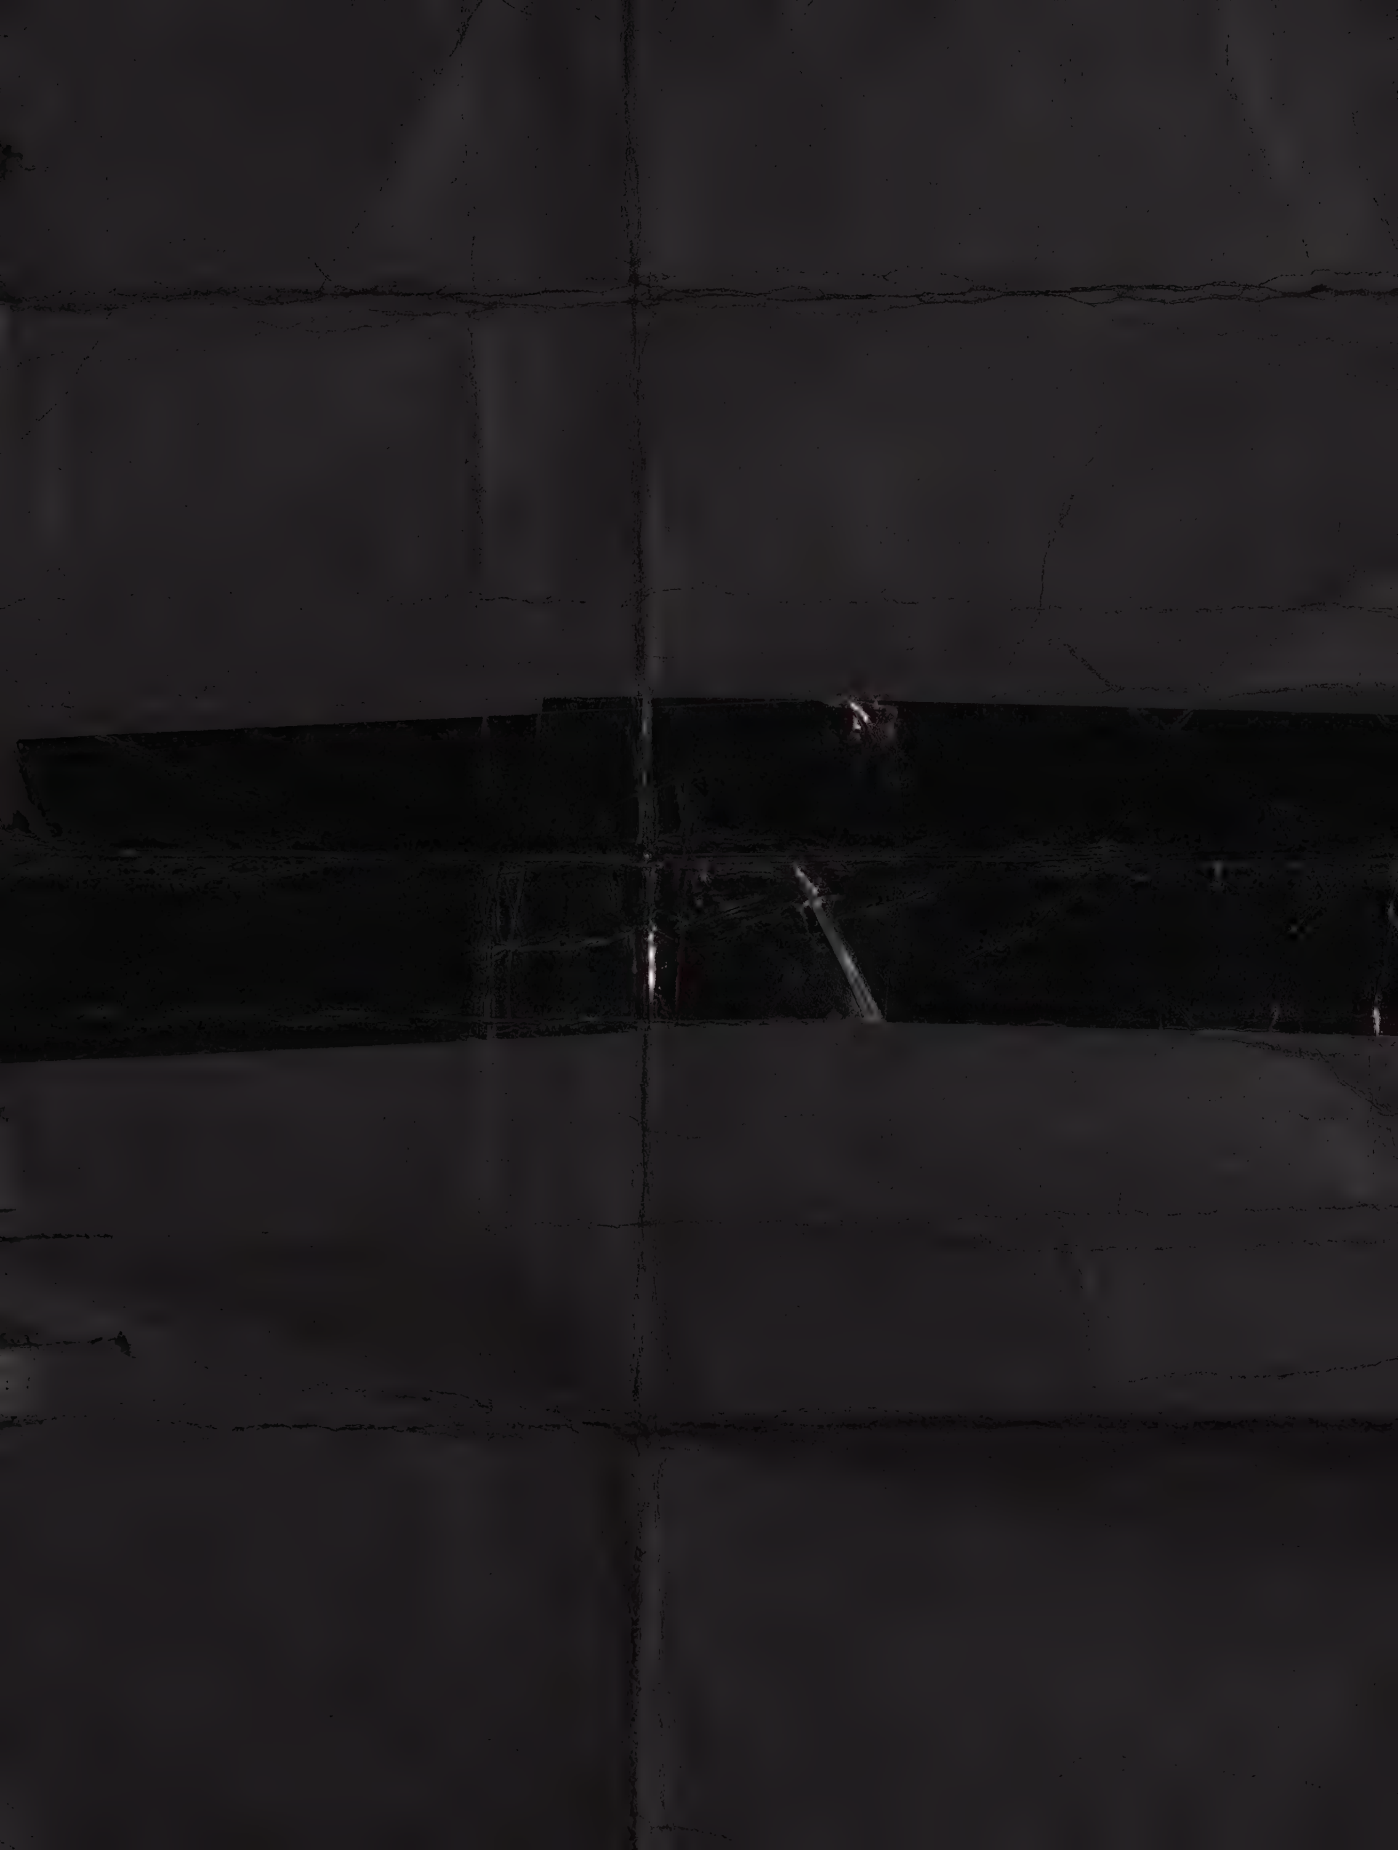

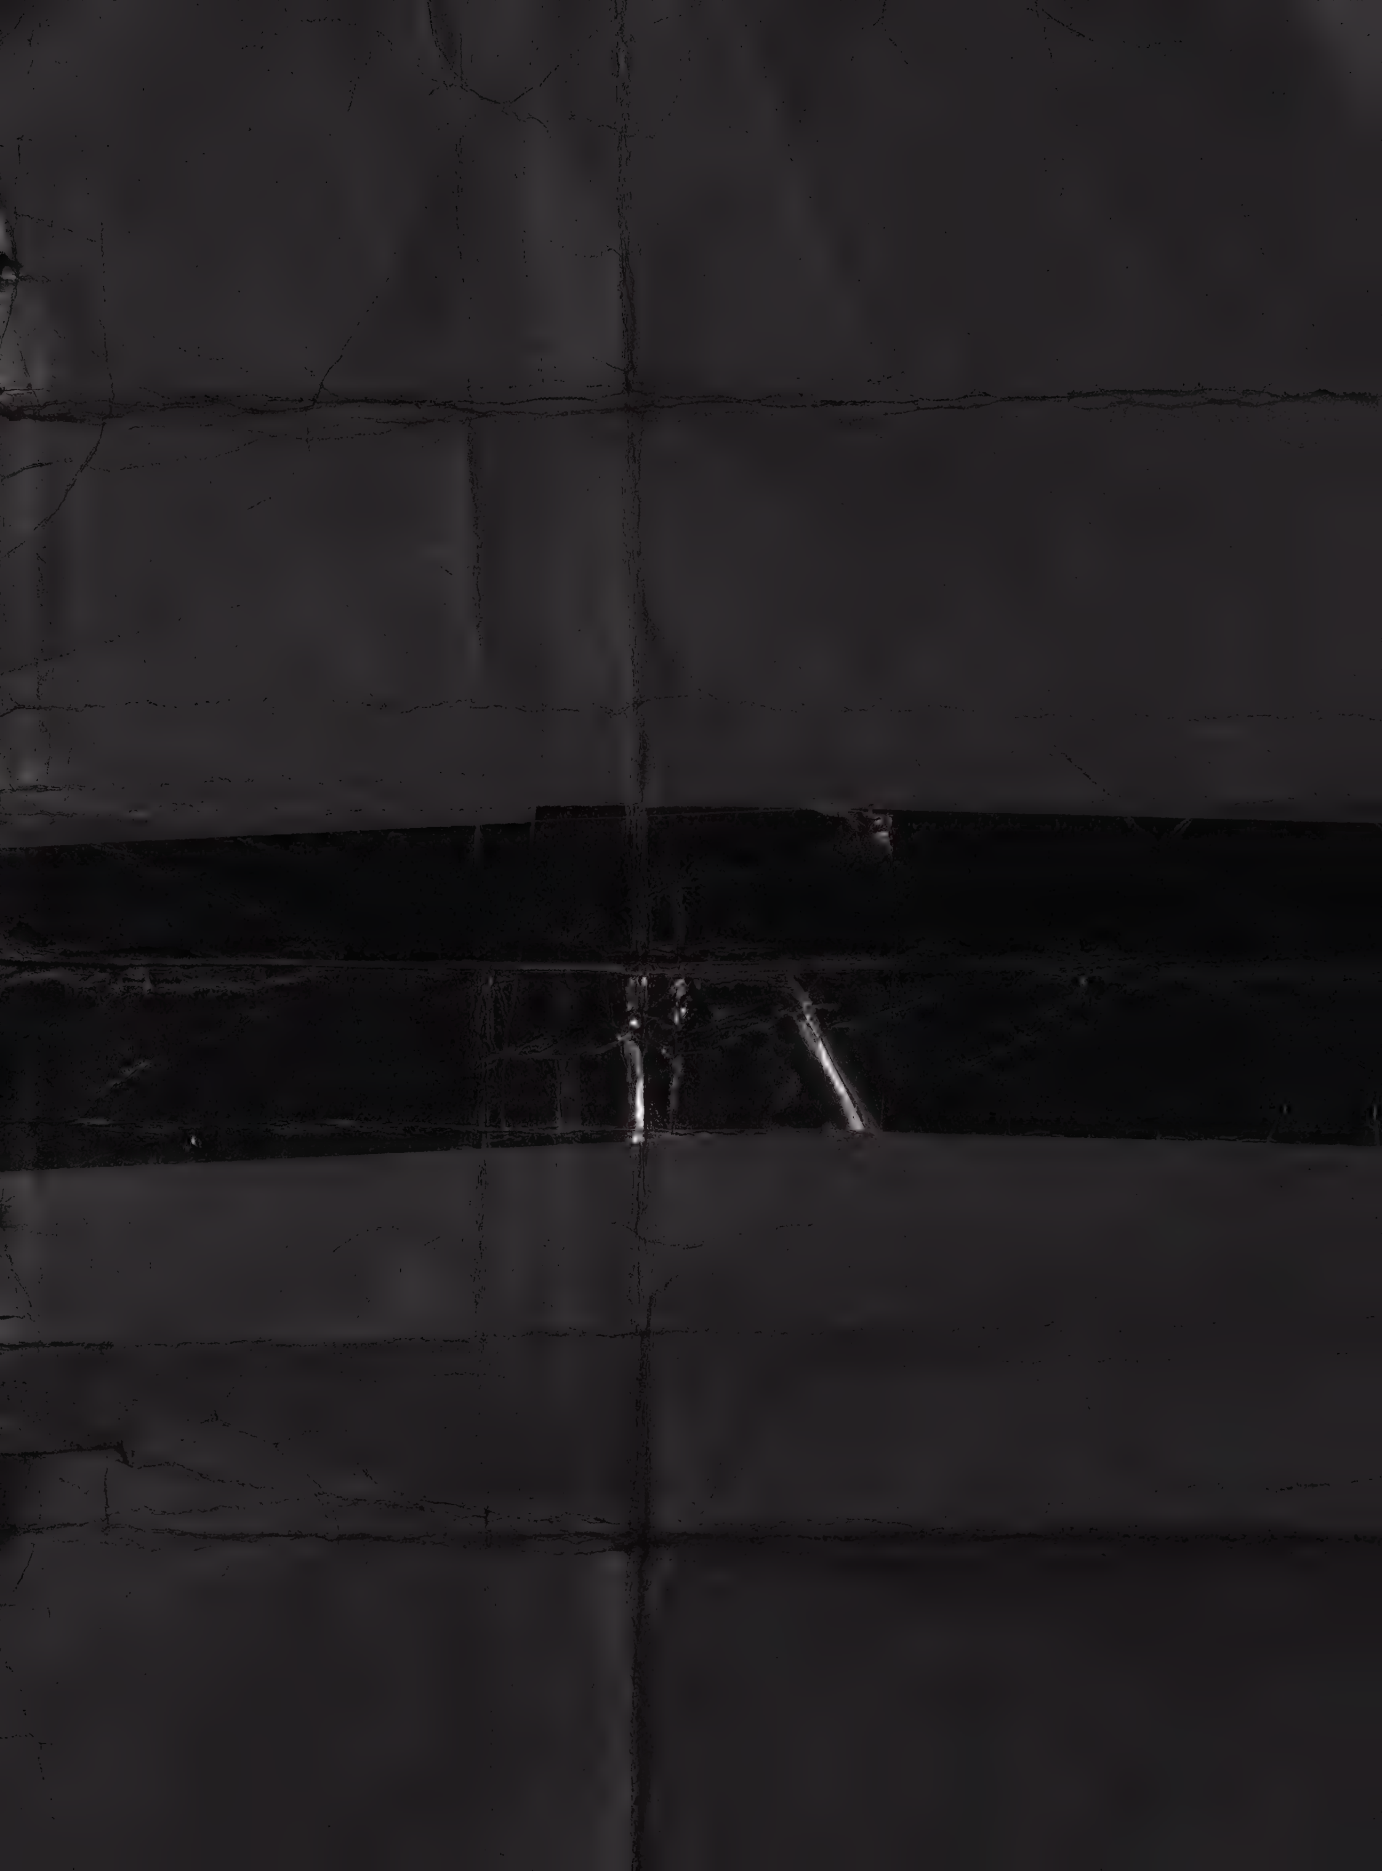

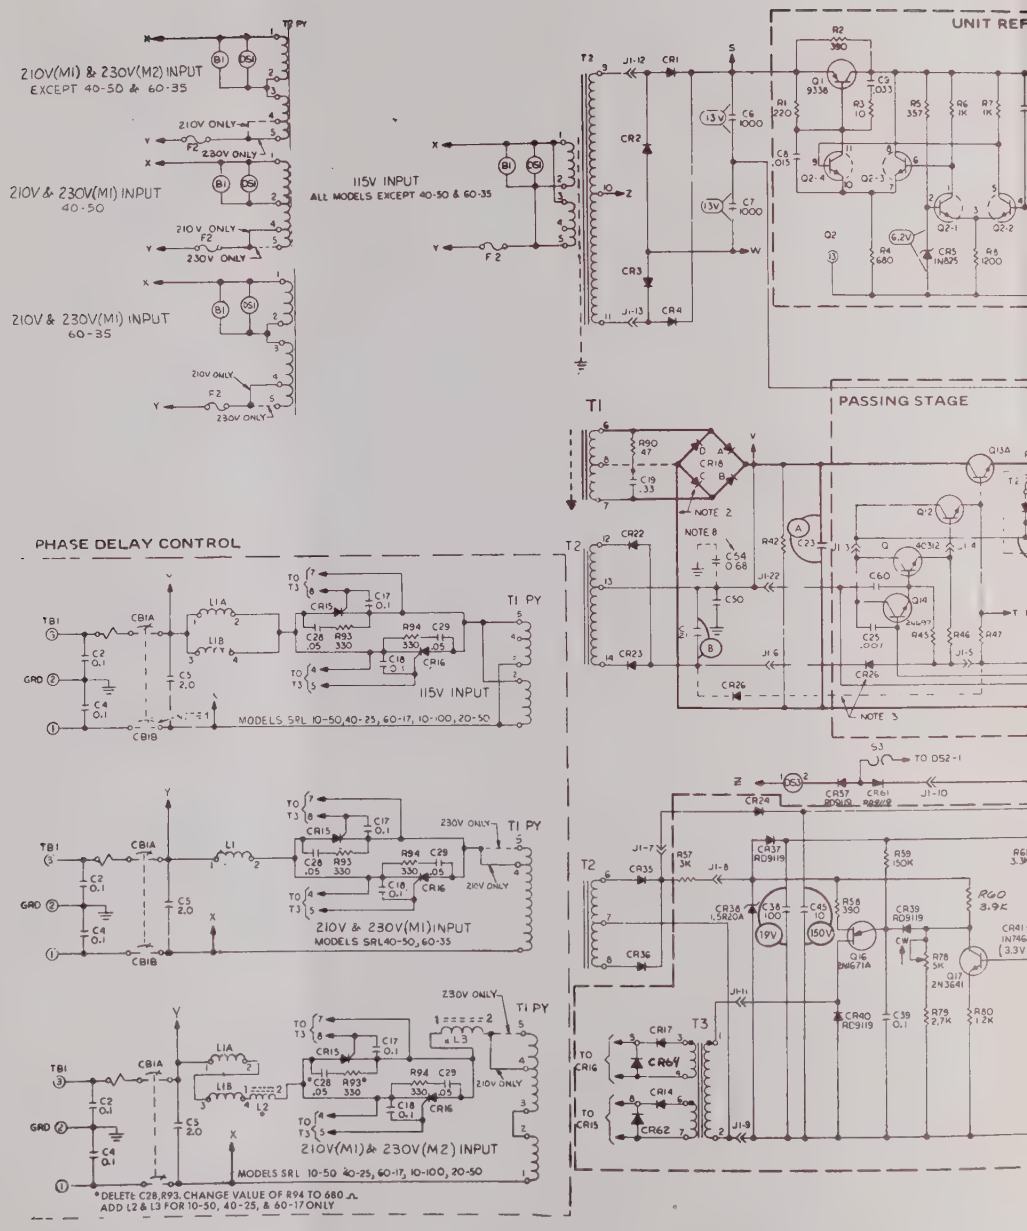

*SELECTED FOR VOLTAGE BREAKDOWN CHARACTERISTICS

UNIT	C12	C13	C 21	C 23	C60	C25	C 26	C 30	C 31	C 50	Q 9	Q 12	Q 13	Q 23	Q 24	R 17	R 29	R 30	R 40
10-50	.22	.01	15K	7 X 69K	.047	.001	9.6K	.01	6.4K	0.15	2N 697	2N 3055	2N 3771 (4)	2N 3638	2N 3638	5.36K		0	.18(8)
10-100	.22	.01	23K	8 X 85K	.047	.001	21K	.015	26K	.33	2N 697	2N 3771	2N 3771 (7)	2N 3638	2N 3638	8.66K		0	.18(14)
20-50	.1	.01	15K	7 X 26K	.01	.001	9.6K	.0033	6.7K	.33	2N 697	2N 3055	2N 3771 (5)	RCA62490	RCA62490	5.36K		0	.1(5)
40-25	.1	.01	4.7K	6 X 9.4K	.01	.001	9.6K	.0022	3.2K	0.15	2N 697*	2N 3055	2N 3055 (4)*	RCA62490	RCA62490	4.32K	2.49M	1	.18(4)
40-50	.1	.01	8.7K	6 X 21K	.01	.001	21K	.0022	5.8K	.33	2N 697*	2N 3055	2N 3055 (8)*	RCA62490	RCA62490	5.36K		0	.18(8)
60-17	.1	.01	4.7K	4 X 6.5K	.01	.001	9.6K	.001	2.5K	0.33	40321	2N 3055	2N 3442 (4)	RCA62490*	RCA62490*	3.16K	2M	1	.33(4)
60-35	.1	.01	4.7K	8 X 6.5K	.01	.001	21K	.0022	6.5K	.33	40321	2N 3055	2N 3442 (8)	RCA62490*	RCA62490*	4.12K		0	.33(8)

UNIT	R 41	R 42	R 45	R 46	R 47	R 48	R 49	R 52	R 53A	R 53B	R 55	R 56	R 62	R 63	R 65	R 66	R 77	R 85	R 89	R 92	R 103	R5
10-50	.008	5	1.2K	1.2K	220	3	18K	12K	2K	20	.02	60A	470	1K	4.7K	5.6K	12.1K	3K	27K	150		
10-100	.0025	3	1.2K	1.2K	125	1.0	18K	20K	2K	20	.015	120A	470	1K	4.7K	5.6K	12.1K	3K	27K	150	3.3K	68
20-50	.008	10	1.2K	1.2K	150	2	33K	12K	4K	40	.055	60A	680	1K	12K	10K	24.9K	4K	22K	100		68
40-25	.020	25 (2) ser.	2.2K	2.2K	390	10	33K	9K	8K	80	.14		820	1K	22K	18K	49.9K	8K	18K	100		68
40-50	.008	50 (2) par.	2.2K	2.2K	180	5	33K	11K	8K	80	.055	60A	820	1K	22K	18K	49.9K	8K	18K	100		68
60-17	.040	50 (2) ser.	2.2K	2.2K	300	15	47K	7.5K	12K	120	.185		1K	400	33K	27K	80.6K	12K	15K	100		68
60-35	.015	100 (2) par.	2.2K	2.2K	150	10	47K	10K	12K	120	.120	40A	1K	400	33K	27K	80.6K	12K	15K	100	6.8K	68

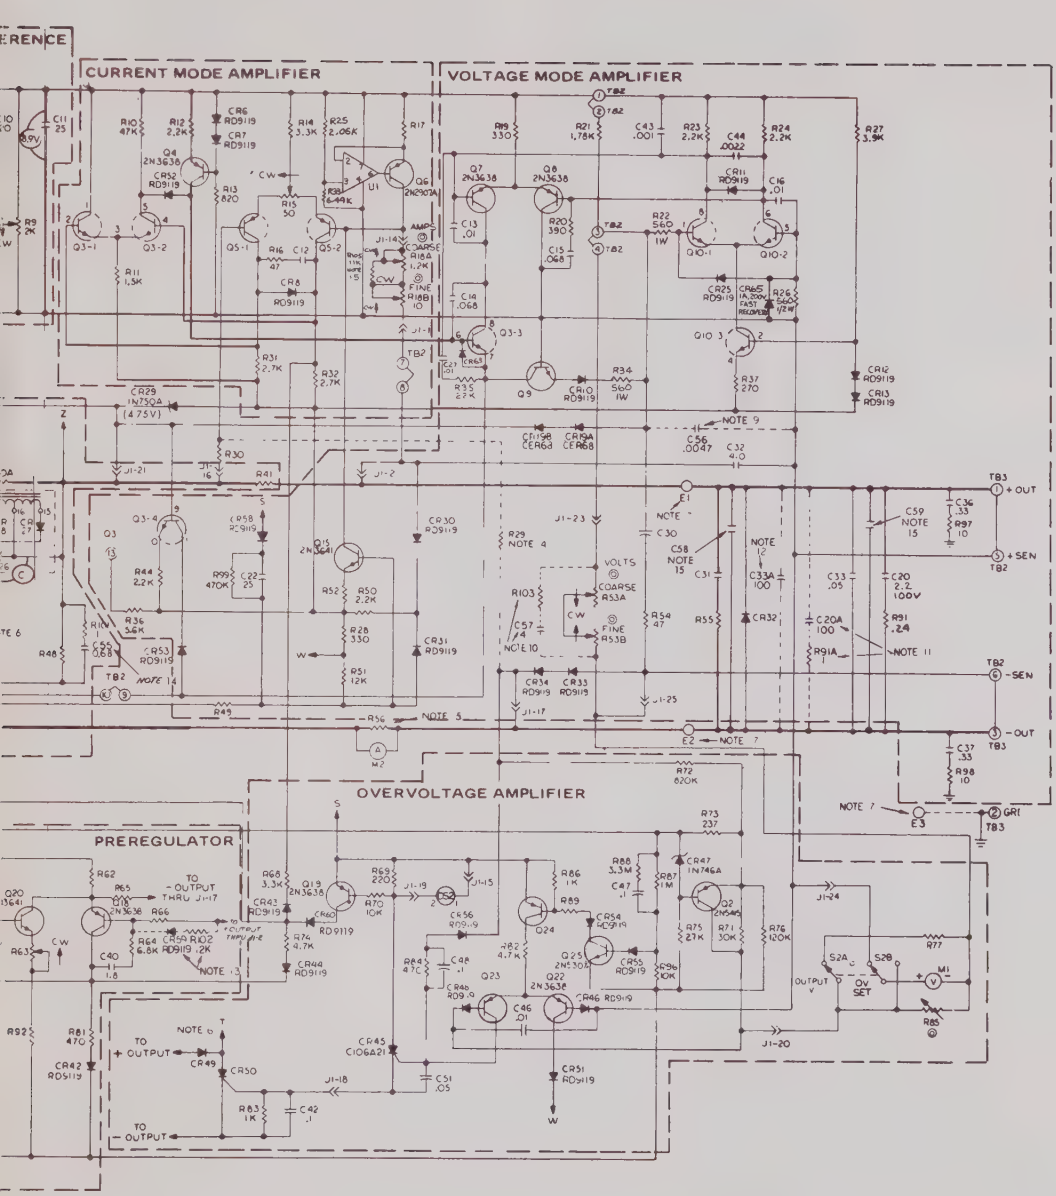

Notes:

1. CB 1-B used only on 10-100 and 20-50 (115 Input) of this group.
2. CR18C and D not used on 20-50, 10-50, 10-100 and indicated lead is wired to T 1-B.
3. CR26 relocated to dotted position on models 10-50, 10-100, 20-50 and 40-50.
4. R29 not used on 10-50, 10-100, 20-50, 40-50, 60-35.
5. Shunt R56 used on units 35 amp output and up.
6. CR49 inserted and indicated lead "T" used only on 40-25, 40-50, 60-17 and 60-35.
7. E1, E2 and E3 not used on models 20-50, 40-50, 60-35, and 10-100.
8. C54 used only on 10-50, 40-25 and 60-17.
9. C56 used only on 10-100 and 40-50.
10. C57 and R103 used only on 10-100, 60-35.
11. C20A and R91A used only on 20-50.
12. C33A used only on 40-50 and 10-100.
13. CR59 and R102 used only on 60-17 and 60-35.
14. C55 is 2.0 μFD 200V and R101 is short circuit for model SRL 40-25
15. Add C58 and C59 for 10-50, 40-25, 60-17 only (M1 & M2)
16. R105 MAY BE OMITTED IN SOME UNITS, AS DETERMINED BY TEST LIMITS.

UNIT	F2 115V	F2 210V	F2 230V
10-50	2.0A SB	1¼A SB	1¼A SB
10-100	4.0A SB	2½A SB	2½A SB
20-50	2.0A SB	1¼A SB	1¼A SB
40-25	2.0A SB	1.0A SB	1.0A SB
40-50		2½A SB	2½A SB
60-17	1.5A	1A	1A
60-35		1¼A SB	1¼A SB

VOLTAGE CHART

MODEL	A (C23)	B (C21)	C (C26)
10-50	15.5	14	11
10-100	15.5	14	11
20-50	27.0	14	11
40-25	50.0	27	9
40-50	48.5	27	9
60-17	73.7	27	9
60-35	73.4	27	9

FIGURE 6-3
SCHEMATIC DIAGRAM
SRL FAN POWER SUPPLIES

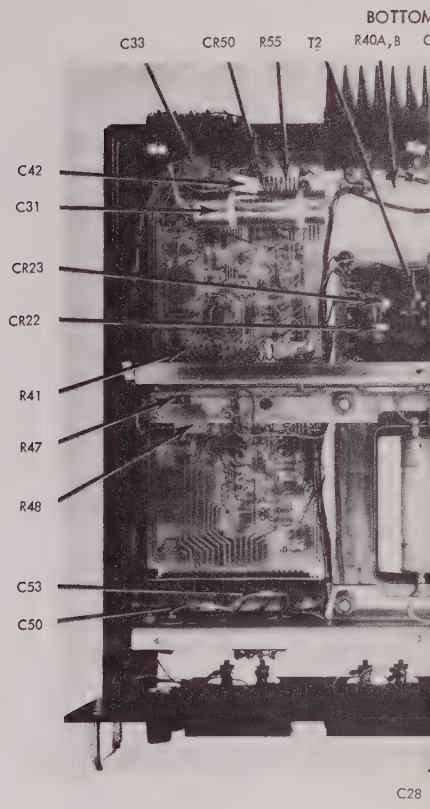
BOTTOM
C33
CR50
R55
T2
R40A,B
C42
C31
CR23
CR22
R41
R47
R48
C53
C50
C28

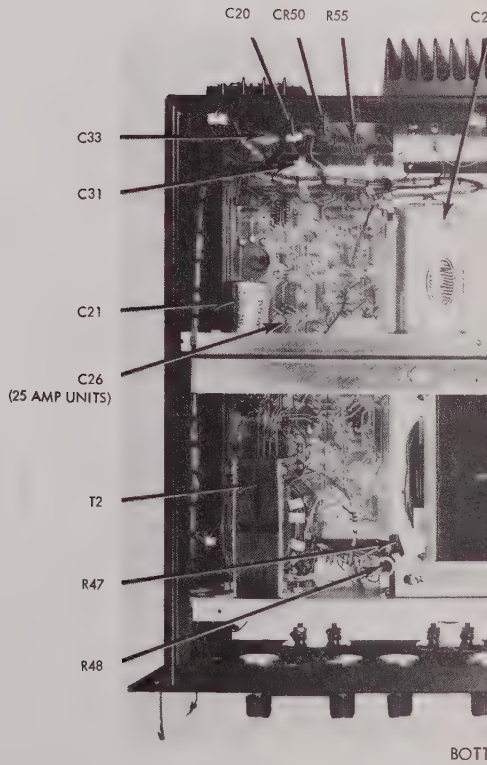
C20
CR50
R55
C33
C31
C21
C26
(25 AMP UNITS)
T2
R47
R48
BOTT

UNITS 20-12, 40-6, 60-8, 60-4 (SHOWN),

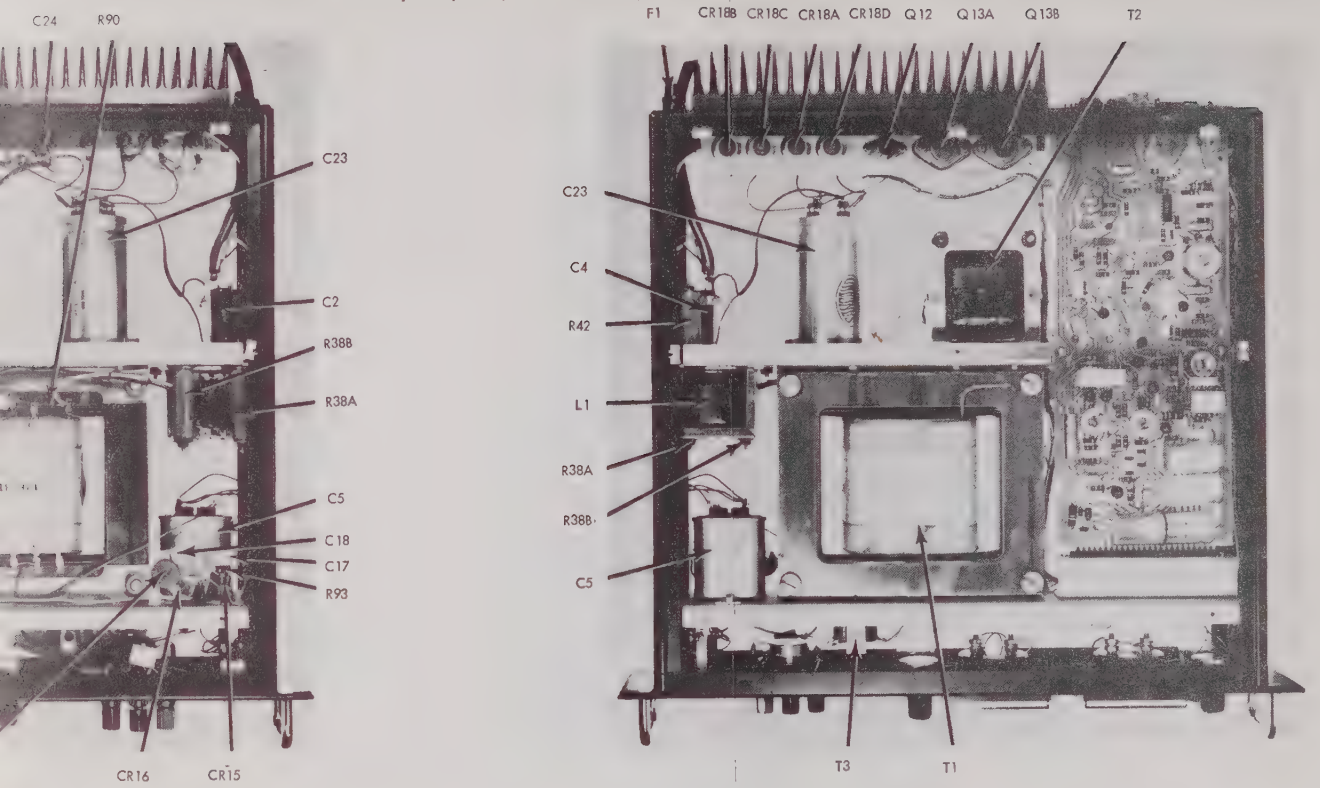

UNITS 10-25, 20-25, 40-12 (SHOWN)

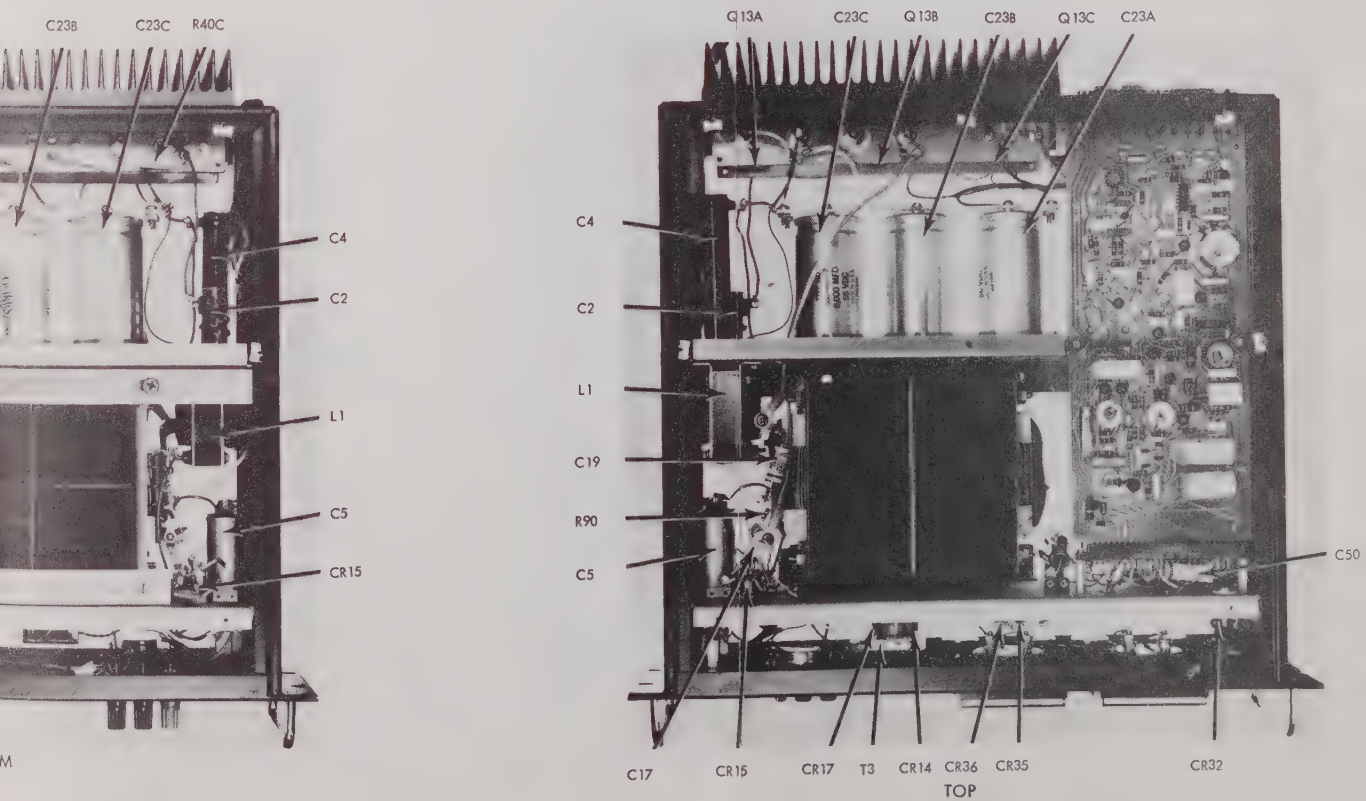

FIGURE 6-4
SRL CONVECTION
TYPICAL CHASSIS ASSEMBLIES

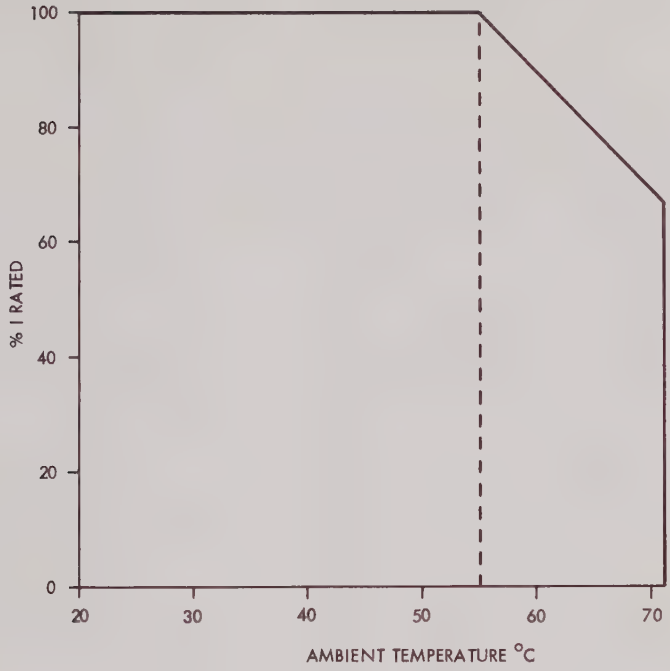

FIGURE 6-4. SRL CURRENT DERATING CHARACTERISTICS

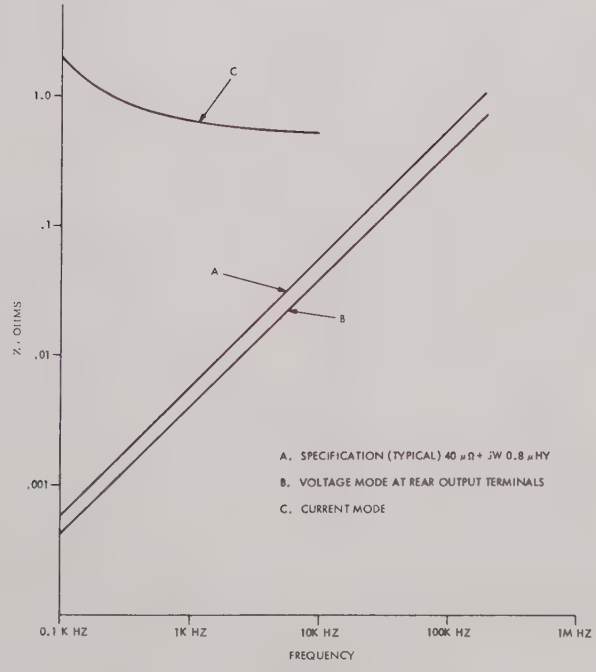

FIGURE 6-6. SRL-TYPICAL OUTPUT IMPEDANCE CURVES

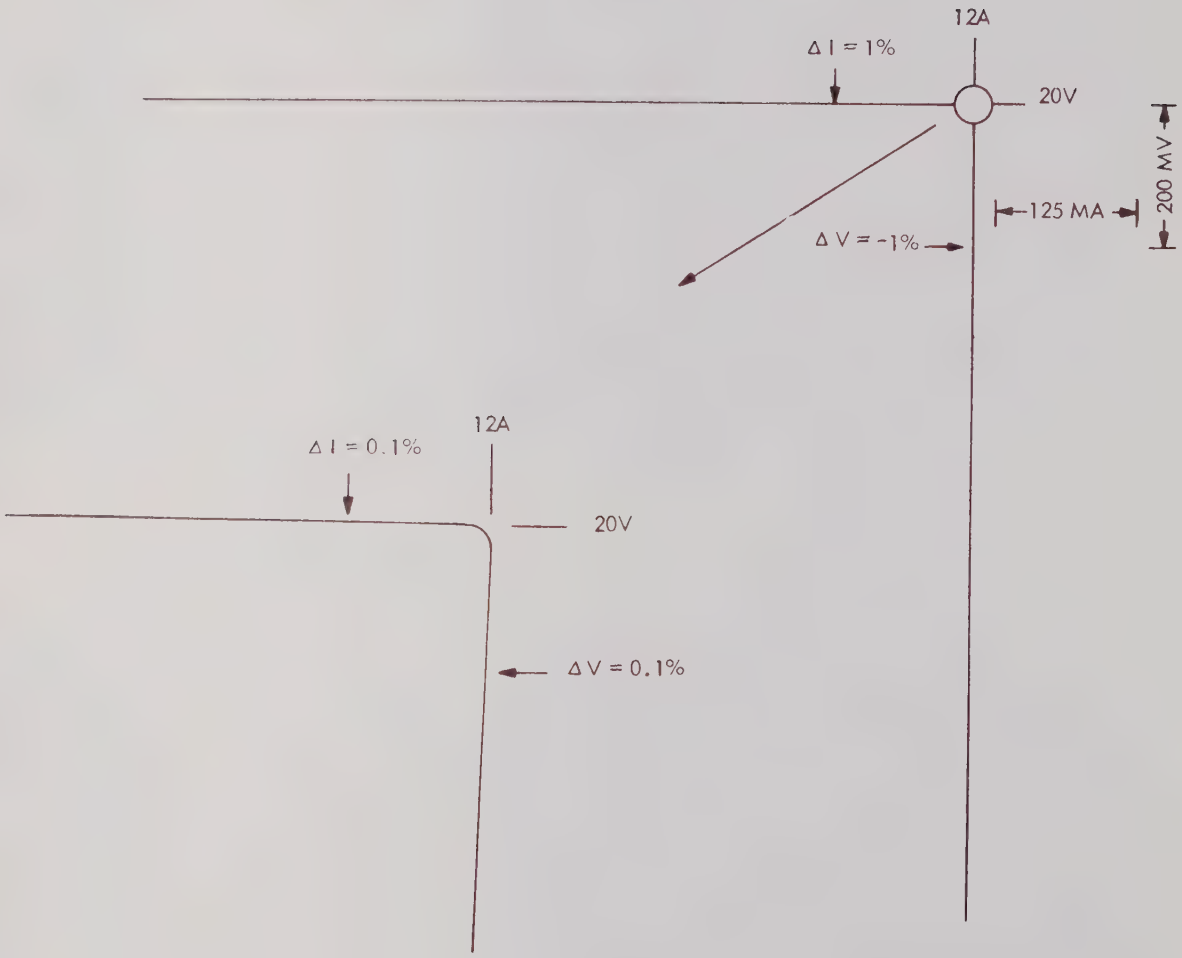

FIGURE 6-7. TYPICAL CROSSOVER CHARACTERISTICS (SRL 20-12)

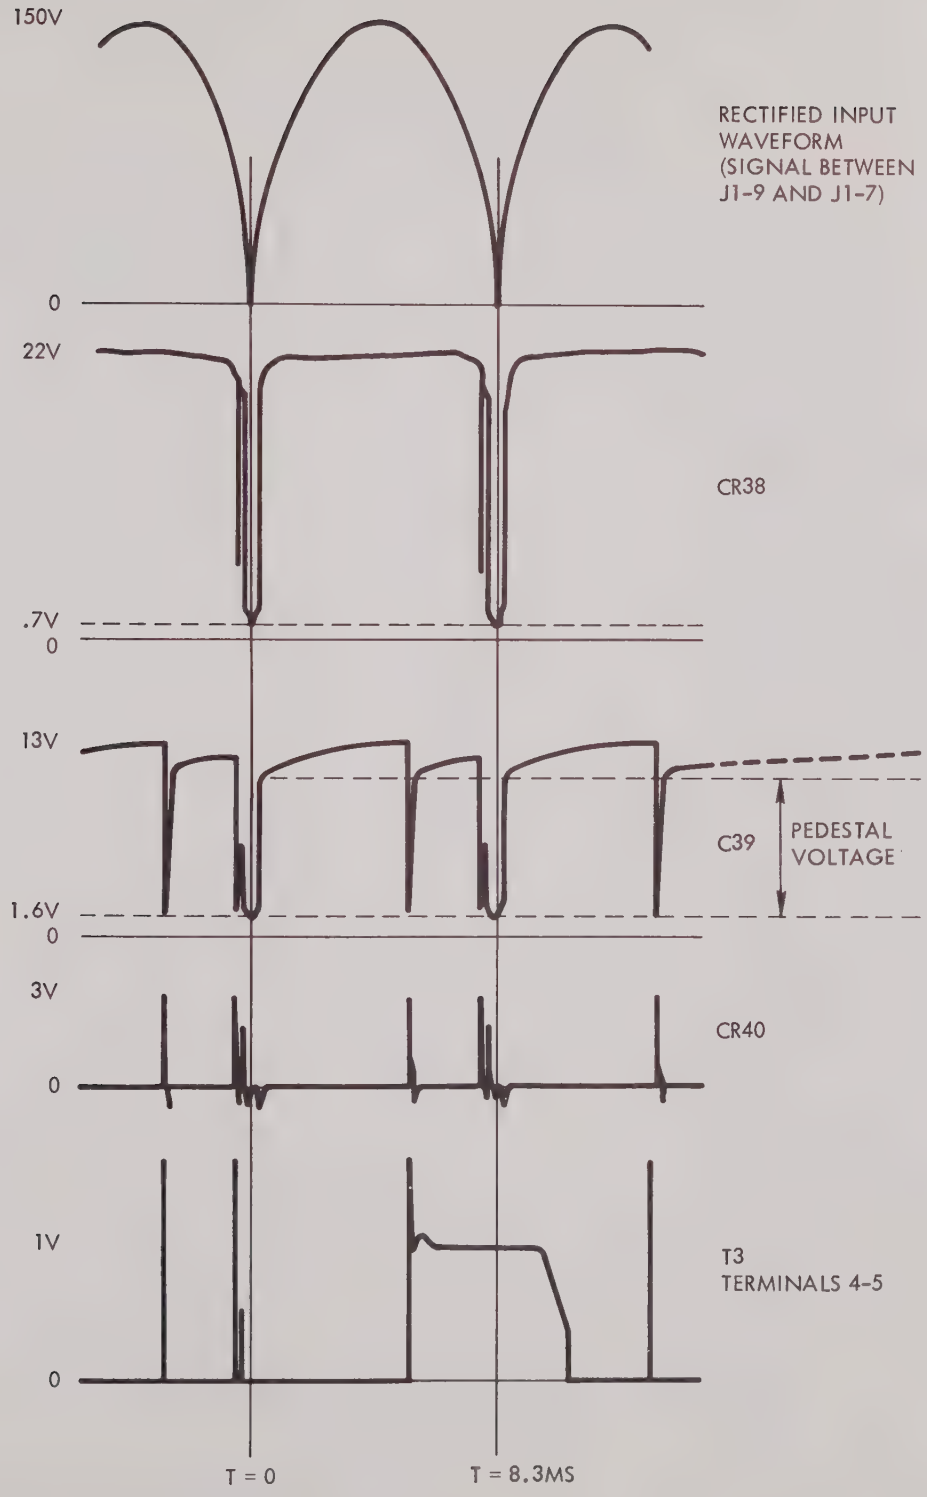

FIGURE 6-8
FIRING SECTION WAVEFORMS

TABLE 6-1
Replaceable Parts List
Printed-Circuit Board Assembly
SRL Series/Convection Cooled

CIRCUIT SYMBOL	SRL Model 10-25	20-12	20-25	40-6	40-12	60-4	60-8	DESCRIPTION	SORENSEN PART NUMBER	MANUFACTURER, TYPE
								Capacitors (uF unless noted)		
C6	x	x	x	x	x	x	x	1,000, 15V	24-2554-4	SP, 45D
C7	x	x	x	x	x	x	x	1,000, 15V	24-2554-4	SP, 45D
C8	x	x	x	x	x	x	x	0.015, 250V	24-2015-3	SE, MMK
C9	x	x	x	x	x	x	x	0.033, 250V	24-2015-7	SE, MMK
C10	x	x	x	x	x	x	x	20, 12V	235-7404P31	SP, TE1130
C11	x	x	x	x	x	x	x	25, 75V	235-7404P11	SP, TE1207
C12	x	x	x	x	x	x	x	0.1, 250V	24-2015-13	SE, MMK
C13	x	x	x		x			0.01, 250V	24-2015-1	SE, MMK
				x		x	x	0.0022, 200V	24-2409-3	AC, V146XR
C14	x	x	x	x	x	x	x	0.068, 250V	24-2015-11	SE, MMK
C15	x	x	x	x	x	x	x	0.068, 250V	24-2015-11	SE, MMK
C16	x	x	x	x	x	x	x	0.01, 250V	24-2015-1	SE, MMK
C21	x		x		x		x	6,800, 20V	24-2459-1	SP, 32D
		x						1,500, 40V	24-2453-1	SP, 34D
				x		x		800, 40V	24-2453-3	SP, 34D
C22	x	x	x	x	x	x	x	25, 75V	235-7404P11	SP, TE1207
C24	x							0.047, 250V	24-2015-9	SE, MMK
		x	x					0.01, 250V	24-2015-1	SE, MMK
				x	x	x	x	0.001, 100V	235-7355P266	EMC, DM15
C25	x		x					0.001, 200V	24-2409-1	AC, V146XR
		x		x	x	x	x	0.0033, 200V	24-2409-4	AC, V146XR
C27	x	x	x		x			0.01, 250V	24-2015-1	SE, MMK
				x		x	x	Not Used		
C30	x							0.01, 250V	24-2015-1	SE, MMK
		x			x			0.0022, 200V	24-2409-3	AC, V146XR
			x					0.015, 200V	24-2015-3	SE, MMK
				x				0.0015, 200V	24-2409-2	AC, V146XR
						x		0.001, 200V	24-2409-1	AC, V146XR
							x	0.01, 200V	24-2409-7	AC, V146XR
C32	x	x	x	x	x	x	x	4, 25V	235-7404P35	SP, TE1201.2
C38	x	x	x	x	x	x	x	100, 25V	237-7404P8	SP, TE121
C39	x	x	x	x	x	x	x	0.1, 250V	24-2015-13	SE, MMK
C40	x	x	x	x	x	x	x	1.8, 250V	24-2015-28	SE, MMK
C41	x	x	x	x	x	x	x	Not Used		
C43	x	x	x	x	x	x	x	0.001, 200V	24-2409-1	AC, V146XR
C44	x	x	x	x	x	x	x	0.0022, 200V	24-2409-3	AC, V146XR
C45	x	x	x	x	x	x	x	10, 200V	24-2496	SP
C46	x	x	x	x	x	x	x	0.01, 250V	24-2015-1	SE, MMK
C47	x	x	x	x	x	x	x	0.1, 250V	24-2015-13	SE, MMK
C48	x	x	x	x	x	x	x	0.1, 250V	24-2015-13	SE, MMK
C49	x	x	x	x	x	x	x	Not Used		
C51	x	x	x	x	x	x	x	0.047, 250V	24-2015-9	SE, MMK
								Diodes		
CR1	x	x	x	x	x	x	x	S11	587565-1	SEM
CR2	x	x	x	x	x	x	x	S11	587565-1	SEM
CR3	x	x	x	x	x	x	x	S11	587565-1	SEM
CR4	x	x	x	x	x	x	x	S11	587565-1	SEM
CR5	x	x	x	x	x	x	x	1N825, Zener, 6.2V	588105-3	MA
CR6	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR7	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR8	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR9	x	x	x	x	x	x	x	Not Used		
CR10	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR11	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR12	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR13	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR19A/B	x	x	x	x	x	x	x	S11	587565-1	SEM

TABLE 6-1
Replaceable Parts List
Printed-Circuit Board Assembly
SRL Series/Convection Cooled (cont'd)

CIRCUIT SYMBOL	SRL Model 10-25	20-12	20-25	40-6	40-12	60-4	60-8	DESCRIPTION	SORENSEN PART NUMBER	MANUFACTURER, TYPE
								Diodes		
CR24	x	x	x	x	x	x	x	S16	587565-4	SEM
CR25	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR26	x		x					1N4720	26-1006-2	MA
		x		x	x	x	x	S11	587565-1	SEM
CR29	x	x	x	x	x	x	x	1N750, Zener, 4.7V	26-211	MA
CR30	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR31	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR33	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR34	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR37	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR38	x	x	x	x	x	x	x	1N4747A, Zener	588102-13	MA
CR39	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR40	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR41	x	x	x	x	x	x	x	1N5226B, Zener, 3.3V	588101-3	MA
CR42	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR43	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR44	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR45	x	x	x	x	x	x	x	C106A21	26-1105	GE
CR46	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR47	x	x	x	x	x	x	x	1N5226B, Zener, 3.3V	588101-3	MA
CR48	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR51	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR52	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR53	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR54	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR55	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR56	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR58	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR59						x	x	RD5637	26-1017	RAY
CR60	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR63	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR65	x	x	x	x	x	x	x	SS2996	587306-4	SEM
								Transistors		
Q1	x	x	x	x	x	x	x	RT9338	18-146	SR
Q2	x	x	x	x	x	x	x	CA3046 (IC, Transistor Array)	18-605	RCA
Q3	x	x	x	x	x	x	x	CA3046 (IC, Transistor Array)	18-605	RCA
Q4	x	x	x	x	x	x	x	2N3638	18-143	FS
Q5	x	x	x	x	x	x	x	Dual SA1448	18-176	SR
Q6	x	x	x	x	x	x	x	2N2907A	386-7249P58	RCA
Q7	x	x	x	x	x	x	x	2N3638	18-143	FS
Q8	x	x	x	x	x	x	x	2N3638	18-143	FS
Q9	x	x	x					2N697	18-115	GE
				x	x			2N697, Selected	18-161-3	SR
						x	x	40321	18-165	RCA
Q10	x	x	x	x	x	x	x	CA3053 (IC, Diff. Amp)	18-606	RCA
Q11	x	x	x					40312	18-142	RCA
Q14	x	x	x					2N697	18-115	GE
				x	x			2N697 (Selected)	18-161-4	SR
						x	x	40321	18-165	RCA
Q15	x	x	x	x	x	x	x	2N3641	18-144	FS
Q16	x	x	x	x	x	x	x	2N1671A	18-097	GE
Q17	x	x	x	x	x	x	x	2N3641	18-144	FS
Q18	x	x	x	x	x	x	x	2N3638	18-143	FS
Q19	x	x	x	x	x	x	x	2N3638	18-143	FS
Q20	x	x	x	x	x	x	x	2N3641	18-144	FS
Q21	x	x	x	x	x	x	x	2N5415	18-216	RCA
Q22	x	x	x	x	x	x	x	2N3638	18-143	FS

TABLE 6-1
Replaceable Parts List
Printed-Circuit Board Assembly
SRL Series/Convection Cooled (cont'd)

CIRCUIT SYMBOL	SRL Model 10-25	20-12	20-25	40-6	40-12	60-4	60-8	DESCRIPTION	SORENSEN PART NUMBER	MANUFACTURER, TYPE
								Transistors		
Q23	x							2N3638	18-143	FS
		x	x	x	x	x	x	62940	587062-1	RCA
Q24	x							2N3638	18-143	FS
		x	x	x	x	x	x	62940	587062-1	RCA
Q25	x	x	x	x	x	x	x	2N5307	18-214	GE
								Resistors (ohms, 1/2W, ±10% unless noted)		
R1	x	x	x	x	x	x	x	220	280-1145P50	AB, EB
R2	x	x	x	x	x	x	x	390, 1W	280-1180P59	AB, GB
R3	x	x	x	x	x	x	x	10	280-1145P2	AB, EB
R4	x	x	x	x	x	x	x	680	280-1145P68	AB, EB
R5	x	x	x	x	x	x	x	357, 1/8W, 1%	28-1285	IRC, CEA-TO
R6	x	x	x	x	x	x	x	1K	280-1145P74	AB, EB
R7	x	x	x	x	x	x	x	1K	280-1145P74	AB, EB
R8	x	x	x	x	x	x	x	1.2K	280-1145P77	AB, EB
R9	x	x	x	x	x	x	x	2K, 2W, Variable	29-519	CL, 43
R10	x	x	x	x	x	x	x	47K	280-1145P134	AB, EB
R11	x	x	x	x	x	x	x	1.5K	280-1145P80	AB, EB
R12	x	x	x	x	x	x	x	2.2K	280-1145P86	AB, EB
R13	x	x	x	x	x	x	x	820	280-1145P71	AB, EB
R14	x	x	x	x	x	x	x	3.3K	280-1145P91	AB, EB
R15	x	x	x	x	x	x	x	50, 2W, 20%, Variable	29-467	IRC, 110
R16	x	x	x	x	x	x	x	47	280-1145P26	AB, EB
R17	x		x					4.32K, 1/8W, 1%	586055-190	ELA, MF4
		x		x	x	x	x	2.15K, 1/8W, 1%	28-1415	IRC, CEA-T2
R19	x	x	x	x	x	x	x	330	280-1145P56	AB, EB
R20	x	x	x	x	x	x	x	390	280-1145P59	AB, EB
R21	x	x	x	x	x	x	x	1.78K, 1%	28-1373	IRC, CEC-T2
R22	x	x	x	x	x	x	x	560, 1W	280-1180P65	AB, GB
R23	x	x	x	x	x	x	x	2.2K	280-1145P86	AB, EB
R24	x	x	x	x	x	x	x	2.2K	280-1145P86	AB, EB
R25	x	x	x	x	x	x	x	2.05K, 1/8W, 1%	586055-89	ELA, MF4
R26	x	x	x	x	x	x	x	560	280-1145P65	AB, EB
R27	x	x	x	x	x	x	x	3.9K	280-1145P95	AB, EB
R28	x	x	x	x	x	x	x	330, 1W	280-1180P56	AB, GB
R29	x							604K, 1%	28-1267	IRC, CEC-TO
		x				x		316K, 1%	28-1397	IRC, CEC-TO
			x					1.21M, 1%	28-1358	IRC, CEC-TO
				x				332K, 1%	28-1357	IRC, CEC-TO
					x		x	634K, 1%	28-1398	IRC, CEC-TO
R30	x	x	x	x	x	x	x	1	27-983	IRC, BWH
R31	x	x	x	x	x	x	x	2.7K	280-1145P89	AB, EB
R32	x	x	x	x	x	x	x	2.7K	280-1145P89	AB, EB
R33	x	x	x	x	x	x	x	6.49K, 1/8W, 1%	586055-113	ELA, MF4
R34	x	x	x	x	x	x	x	560, 1W	280-1180P65	AB, GB
R35	x	x	x		x			22K	280-1145P122	AB, EB
				x		x	x	Not Used		
R36	x	x	x	x	x	x	x	5.6K, 5%	280-1145P100	AB, EB
R37	x	x	x	x	x	x	x	220	280-1145P50	AB, EB
R44	x	x	x	x	x	x	x	2.2K	280-1145P86	AB, EB
R45	x		x					1.2K	280-1145P77	AB, EB
		x						2.2K	280-1145P86	AB, EB
				x	x	x	x	Not Used		
R46	x		x					1.2K	280-1145P77	AB, EB
		x		x	x	x	x	2.2K, 1W	280-1180P86	AB, GB
R49	x							18K	280-1145P119	AB, EB
		x	x					33K	280-1145P128	AB, EB
				x	x	x	x	47K	280-1145P134	AB, EB

TABLE 6-1
Replaceable Parts List
Printed-Circuit Board Assembly
SRL Series/Convection Cooled (cont'd)

CIRCUIT SYMBOL	SRL Model 10-25	20-12	20-25	40-6	40-12	60-4	60-8	DESCRIPTION	SORENSEN PART NUMBER	MANUFACTURER, TYPE
								Resistors (ohms, 1/2W, ±10% unless noted)		
R50	x	x	x	x	x	x	x	2.2K	280-1145P86	AB, EB
R51	x	x	x	x	x	x	x	12K	280-1145P113	AB, EB
R52	x		x					10K	280-1145P110	AB, EB
		x		x	x	x	x	4.7K	280-1145P98	AB, EB
R54	x	x	x	x	x	x	x	47	280-1145P26	AB, EB
R58	x	x	x	x	x	x	x	390	280-1145P59	AB, EB
R59	x	x	x	x	x	x	x	150K	280-1145P152	AB, EB
R60	x	x	x	x	x	x	x	3.9K	280-1145P95	AB, EB
R61	x	x	x	x	x	x	x	3.3K	280-1145P91	AB, EB
R62	x							330	280-1145P56	AB, EB
		x	x					680	280-1145P68	AB, EB
				x	x			820	280-1145P71	AB, EB
						x	x	1K	280-1145P74	AB, EB
R63	x		x					1K, 2W, Variable	29-503	CTS, 110
		x		x	x	x	x	400, 2W, Variable	29-547	CTS, 110
R64	x	x	x	x	x	x	x	6.8K	280-1145P104	AB, EB
R65	x							4.7K	280-1145P98	AB, EB
		x	x					12K	280-1145P113	AB, EB
				x	x			22K	280-1145P122	AB, EB
						x	x	33K	280-1145P128	AB, EB
R66	x							5.6K	280-1145P100	AB, EB
		x	x					10K	280-1145P110	AB, EB
				x	x			18K	280-1145P119	AB, EB
						x	x	27K	280-1145P125	AB, EB
R68	x	x	x	x	x	x	x	3.3K	280-1145P91	AB, EB
R69	x	x	x	x	x	x	x	220	280-1145P50	AB, EB
R70	x	x	x	x	x	x	x	10K	280-1145P110	AB, EB
R71	x	x	x	x	x	x	x	30K, 2W	585109-56	CG, C42S
R72	x	x	x	x	x	x	x	820K	280-1145P179	AB, EB
R73	x	x	x	x	x	x	x	237, 1/4W, 1%	28-1418	IRC, CEA-TO
R74	x	x	x	x	x	x	x	4.7K	280-1145P98	AB, EB
R75	x	x	x	x	x	x	x	27K, 2W	585109-55	CG, C42S
R76	x	x	x	x	x	x	x	120K	280-1145P149	AB, EB
R78	x	x	x	x	x	x	x	5K, 2W, Variable	29-426	CTS, 110
R79	x	x	x	x	x	x	x	2.7K	280-1145P89	AB, EB
R80	x	x	x	x	x	x	x	1.2K	280-1145P77	AB, EB
R81	x	x	x	x	x	x	x	470	280-1145P62	AB, EB
R82	x	x	x	x	x	x	x	4.7K	280-1145P98	AB, EB
R84	x	x	x	x	x	x	x	470	280-1145P62	AB, EB
R86	x	x	x	x	x	x	x	1K	280-1145P74	AB, EB
R87	x	x	x	x	x	x	x	1.0 Meg, 1/4W, 1%	28-1418	IRC, CEA-TO
R88	x	x	x	x	x	x	x	3.3 Meg	280-1145P200	AB, EB
R89	x							27K	280-1145P125	AB, EB
		x	x					22K	280-1145P122	AB, EB
				x	x			18K	280-1145P119	AB, EB
						x	x	15K	280-1145P116	AB, EB
R92	x							150	280-1145P44	AB, EB
		x	x	x	x	x	x	100	280-1145P38	AB, EB
R96	x	x	x	x	x	x	x	10K, 1/4W, 1%	28-1325	IRC, CEA-TO
R99	x	x	x	x	x	x	x	470K	280-1145P170	AB, EB
R102	x	x	x	x	x			Not Used		
						x	x	12K	280-1145P113	AB, EB
TB2	x	x	x	x	x	x	x	Terminal Board	90-3837	SR
U1	x	x	x	x	x	x	x	LM741CH	585322-1	NS

TABLE 6-1
Replaceable Parts List
Printed-Circuit Board Assembly
SRL Series/Convection Cooled (cont'd)

CIRCUIT SYMBOL	SRL Model 10-25	20-12	20-25	40-6	40-12	60-4	60-8	DESCRIPTION	SORENSEN PART NUMBER	MANUFACTURER, TYPE
								Miscellaneous		
XQ2	x	x	x	x	x	x	x	Socket (IC)	585741-1	TI, C931402
XQ3	x	x	x	x	x	x	x	" "	585741-1	TI, C931402
	x							Printed-Circuit Board Ass'y	190-4118-1	SR
		x						" " " "	190-4118-4	SR
			x					" " " "	190-4118-5	SR
				x				" " " "	190-4118-7	SR
					x			" " " "	190-4118-8	SR
						x		" " " "	190-4118-11	SR
							x	" " " "	190-4118-12	SR

TABLE 6-2
Replaceable Parts List
Main Assembly
SRL Series/Convection Cooled*

CIRCUIT SYMBOL	SRL Model 10-25	20-12	20-25	40-6	40-12	60-4	60-8	DESCRIPTION	SORENSEN PART NUMBER	MANUFACTURER, TYPE
								Capacitors (uF unless noted)		
C1	x	x	x	x	x	x	x	Not Used		
C2	x	x	x	x	x	x	x	0.1, 600V	24-2110-13	CD, PKM
C3	x	x	x	x	x	x		Not Used		
C4	x	x	x	x	x	x	x	0.1, 600V	24-2110-13	CD, PKM
C5	x	x	x	x	x	x	x	2, 330 VAC	24-369	CD, KS
C17	x	x	x	x	x	x	x	0.1, 250V	587626-65	SE, 105
C18	x	x	x	x	x	x	x	0.1, 250V	587626-65	SE, 105
C19	x	x	x	x	x	x	x	0.33, 200V	24-2409-16	AC, V146XR
C20	x	x	x	x	x	x	x	0.47, 250V	587626-69	SE, 105
C21	x		x					6,800, 20V	24-2459-1	SP, 32D
		x		x		x		1,500, 40V	24-2453-1	SP, 34D
					x		x	1,000, 40V	24-2460-4	SP, 32D
C23	x							69,000, 15V (4 Required)	24-2594-1	CD, FAH
		x						20,000, 30V (2 Required)	24-2444-6	SP, 32D
			x					21,000, 40V (5 Required)	24-2582-2	SP, 36D
				x				14,000, 75V	24-1034-4	SP, 36D
					x			8,000, 60V (3 Required)	24-2596-1	CD, FAH
						x		6,500, 75V	24-2593-1	SP, 32D
							x	6,500, 75V (2 Required)	24-2593-1	SP, 32D
C26	x		x					9,600, 15V	24-2454-8	SP, 32D
		x		x	x	x	x	Not Used		
C28	x	x	x	x	x	x	x	0.05, 600V	24-2010	Arco, CCD503
C29	x		x		x		x	0.05, 600V	24-2010	Arco, CCD503
		x		x		x		Not Used		
C31	x							3,500, 15V	24-2441-5	SP, 34D
		x						1,000, 25V	24-2452-4	SP, 34D
			x					3,500, 20V	24-2455-3	SP, 34D
				x				1,100, 40V	24-2453-4	SP, 34D
					x			1,500, 40V	24-2453-1	SP, 34D
						x		1,000, 75V	24-2557-5	SP, 45D
							x	1,500, 75V	24-2557-4	SP, 39D
C33	x	x	x	x	x	x	x	0.05, 600V	24-2010	Arco, CCD503
C36	x		x		x		x	0.33, 250V	587626-68	SE, 105
		x		x		x		Not Used		
C37	x	x	x	x	x	x	x	0.33, 250V	587626-68	SE, 105
C42	x	x	x	x	x	x	x	0.1, 250V	587626-65	SE, 105
C50	x		x		x		x	0.15, 400V	24-2411-14	AC, V146XR
		x		x				0.1, 400V	24-2411-13	AC, V146XR
						x		0.047, 400V	24-2411-11	AC, V146XR
C53	x		x		x		x	Not Used		
		x		x		x		0.0015, 200V	24-2409-2	AC, V146XR
C55	x	x		x	x	x	x	Not Used		
			x					0.68, 200V	24-2409-18	AC, V146XR
C57	x	x		x	x	x		Not Used		
			x				x	4, 150V	24-2288-1	SP, TVA
C60	x	x	x					Not Used		
				x	x	x	x	0.01, 200V	24-2409-7	AC, V146XR
CB1**	x							Circuit Breaker, 10A, 250V	92-377	Airpax, APGX
		x		x		x		Not Used		
			x		x		x	Circuit Breaker, 18A, 250V	92-378	Airpax, APGX
								Diodes		
CR14	x	x	x	x	x	x	x	S11	587565-1	SEM
CR15**	x	x	x		x		x	C230CX7	26-178-5	GE
				x		x		C220CX245	26-1158-5	GE
CR16**	x	x	x		x		x	C230CX7	26-178-5	GE
				x		x		C220CX245	26-1158-5	GE

*Includes all components not on PCB.
**115V input only. For 210/230V input, see page 6-21).

TABLE 6-2
Replaceable Parts List
Main Assembly
SRL Series/Convection Cooled (cont'd)

CIRCUIT SYMBOL	SRL Model 10-25	20-12	20-25	40-6	40-12	60-4	60-8	DESCRIPTION	SORENSEN PART NUMBER	MANUFACTURER, TYPE
								Diodes (cont'd)		
CR17	x	x	x	x	x	x	x	S11	587565-1	SEM
CR18A	x	x	x					1N1184A	587382-2	WH
				x	x	x		1N1202A	587393-2	WH
					x			1N1186A	587382-3	WH
CR18B	x	x	x					1N1184A	587382-2	WH
				x		x	x	1N1202A	587393-2	WH
					x			1N1186A	587382-3	WH
CR18C	x		x					Not Used		
		x						1N1184A	587382-2	WH
				x		x	x	1N1202A	587393-2	WH
					x			1N1186A	587382-3	WH
CR18D	x		x					Not Used		
		x						1N1184A	587382-2	WH
				x		x	x	1N1202A	587393-2	WH
					x			1N1186A	587382-3	WH
CR22	x		x					Not Used		
		x		x	x	x	x	S11	587565-1	SEM
CR23	x		x					Not Used		
		x		x	x	x	x	S11	587565-1	SEM
CR27	x		x					3S11	587566-1	SEM
		x		x	x	x	x	Not Used		
CR28	x		x					3S11	587566-1	SEM
		x		x	x	x	x	Not Used		
CR32	x	x	x		x			1N1184A	587382-2	WH
				x		x	x	1N1200A	587393-1	WH
CR35	x	x	x	x	x	x	x	S16	587565-4	SEM
CR36	x	x	x	x	x	x	x	S16	587565-4	SEM
CR49	x	x	x	x	x	x		Not Used		
							x	1N1200A	587393-1	WH
CR50	x							C230UX7	26-178-1	GE
		x	x					C230FX7	26-178-2	GE
				x	x	x	x	C230AX7	26-178-3	GE
DS1	x	x	x	x	x	x	x	Indicator Light	43-357	IND
DS2	x	x	x	x	x	x	x	Indicator Light	43-358	GI
								Fuses		
F1*	x		x		x		x	Not Used		
		x		x		x		10A, 250V	42-1809	BUS, ABC
XF1		x		x		x		Fuseholder	42-459	LF, 342012AL
F2*	x		x					1.5A, 250V	226-7176P41	BUS, AGC
		x		x	x	x	x	1.0A, 250V	226-7176P39	BUS, AGC
XF2	x	x	x	x	x	x	x	Fuseholder	343-1011P2	LF, 350221
L1	x	x		x		x		RFI Choke	127-1844	SR
			x		x		x	RFI Choke	127-1849	SR
								Meters		
M1	x							Voltmeter, 0-12V	94-579-1	AM, AR-2
		x	x					Voltmeter, 0-25V	94-579-2	AM, AR-2
				x	x			Voltmeter, 0-50V	94-579-3	AM, AR-2
						x	x	Voltmeter, 0-80V	94-579-4	AM, AR-2
M2	x		x					Ammeter, 0-30A	94-462-6	AM, AR-2
		x			x			Ammeter, 0-15A	94-462-4	AM, AR-2
				x				Ammeter, 0-8A	94-462-2	AM, AR-2
						x		Ammeter, 0-5A	94-462-1	AM, AR-2
							x	Ammeter, 0-10A	94-462-3	AM, AR-2

*115V input only. For 210/230V input, see page 6-21.

TABLE 6-2
Replaceable Parts List
Main Assembly
SRL Series/Convection Cooled (cont'd)

CIRCUIT SYMBOL	SRL Model 10-25	20-12	20-25	40-6	40-12	60-4	60-8	DESCRIPTION	SORENSEN PART NUMBER	MANUFACTURER, TYPE
								Transistors		
Q12	x	x	x					2N3055A	18-151	RCA
				x	x			40312 (Selected)	18-177-1	RCA
						x	x	40313	18-164	RCA
Q13A-D	x							2N3771 (3 Required)	18-202	RCA
		x						2N3055 (2 Required)	18-151	RCA
			x					2N3055 (4 Required)	18-151	RCA
				x				2N3055A (Selected - 2 Req'd)	18-178-1	RCA
					x			2N3055A (Selected - 3 Req'd)	18-178-1	RCA
						x		2N3442 (2 Required)	18-163	RCA
							x	2N3442 (3 Required)	18-163	RCA
								Resistors (ohms, 1/2W, ±10% unless noted)		
R18A	x	x	x	x	x	x	x	1.2K, 2W, Variable	29-596	CL, 43
R18B	x	x	x	x	x	x	x	10, 2W, Variable	29-595	CL, 43
R38A/B	x	x	x		x		x	Not Used		
				x		x		1,20W	27-655	WL, 25/20
R39	x		x	x		x	x	Not Used		
		x						0.15, 30W	27-1535	WL, Ribflex
					x			0.1, 25W	27-775	WL, Ribflex
R40A-D	x							0.1, 12.5W (3 Required)	27-590-1	WL, 12.5X
		x						0.18, 12.5W (2 Required)	27-590-1	WL, 12.5X
			x					0.18, 12.5W (4 Required)	27-590-1	WL, 12.5X
				x				0.27, 5W (2 Required)	586054-6	TEL, EL5
					x			0.18, 7W (3 Required)	167402-39	TEL, EL7
						x		0.39, 5W, 5% (2 Required)	27-496-6	IRC, PW
							x	0.39, 5W, 5% (3 Required)	27-496-6	IRC, PW
R41	x		x					0.02	190-4125-1	SR
		x						0.08	190-4143	SR
				x				0.15	190-4145	SR
					x			0.08	190-4125-2	SR
						x		0.25	190-4142	SR
							x	0.125	190-4125-3	SR
R42	x							15, 25W	27-744	WL, 30/25
		x						50, 25W	27-708	WL, 30/25
			x					25, 50W	27-809	WL, 30/50
				x				150, 25W	27-767	WL, 30/25
					x			75, 50W	27-842	CL, VN50NX
						x		400, 25W	27-717	CL, VN25LX
							x	200, 50W	27-843	CL, VN50NX
R47	x							270, 1W	280-1180P53	AB, GB
		x			x			470, 2W	280-1147P62	AB, HB
			x					220, 1W	280-1180P50	AB, GB
				x				680, 2W	280-1147P68	AB, HB
						x		680, 1W	280-1180P68	AB, GB
							x	390, 2W	280-1147P59	AB, HB
R48	x							5, 20W	27-656	CL, VN25KX
		x			x			25, 20W	27-610	WL, 25/20
			x					4, 25W	27-747	CL, 25LX-4
				x				50, 10W	27-599-3	CL, C10GL
						x		75, 5W	27-452	IRC, PW5
							x	35, 10W	27-563	WL, 10F35
R53A	x							2K, 2W, Var., +20, -0%	29-587	CL, 43
		x	x					4K, 2W, Var., +20, -0%	29-588	CL, 43
				x	x			8K, 2W, Var., +20, -0%	29-589	CL, 43
						x	x	12K, 2W, Var., +20, -0%	29-590	CL, 43
R53B	x							20, 2W, Variable	29-591	CL, 43
		x	x					40, 2W, Variable	29-592	CL, 43

TABLE 6-2
Replaceable Parts List
Main Assembly
SRL Series/Convection Cooled (cont'd)

CIRCUIT SYMBOL	SRL Model 10-25	20-12	20-25	40-6	40-12	60-4	60-6	DESCRIPTION	SORENSEN PART NUMBER	MANUFACTURER, TYPE
								Resistors (ohms, 1/2W, ±10% unless noted)		
R53B			x	x				80, 2W, Variable	29-593	CL, 43
					x	x		120, 2W, Variable	29-594	CL, 43
R55	x		x					0.055	190-4126	SR
		x		x		x		0.4	190-4144	SR
					x			0.44	190-4127	SR
							x	0.24	190-4164	SR
R57	x	x	x	x	x	x	x	3K, 7W	27-471-9	WL, 7XM
R77	x							12.1K, 1%	28-1408	IRC, CEC-TO
		x	x					24.9K, 1%	28-1261	IRC, CEC-TO
				x	x			49.9K, 1%	28-1409	IRC, CEC-TO
						x	x	80.6K, 1%	28-1351	IRC, CEC-TO
R85	x							3K, 2W, Variable	29-597	CL, 43
		x	x					4K, 2W, Variable	29-598	CL, 43
				x	x			8K, 2W, Variable	29-599	CL, 43
						x	x	12K, 2W, Variable	29-600	CL, 43
R90	x	x	x	x	x	x	x	47	280-1145P26	AB, EB
R91	x		x		x		x	0.24, 2W	28-1252	IRC, BWH
		x		x		x		1, 2W	28-1253	IRC, BWH
R93	x	x	x	x	x	x	x	330	280-1145P56	AB, EB
R94	x		x		x		x	330	280-1145P56	AB, EB
		x		x		x		Not Used		
R97	x		x		x		x	10	280-1145P2	AB, EB
		x		x		x		Not Used		
R98	x	x	x	x	x	x	x	10	280-1145P2	AB, EB
R101	x	x		x	x	x	x	Not Used		
			x					1	27-1157	AB, EB
R103	x	x		x	x	x		Not Used		
			x				x	1.8K	280-1145P83	AB, EB
R105	x		x			x	x	11K, 1/8W, 1%	586250-124	ELA, MF4
		x			x			7.87K, 1/8W, 1%	586250-117	ELA, MF4
				x				5.62K, 1/8W, 1%	586250-110	ELA, MF4
								Switches		
S1	x		x		x	x	x	Not Used		
		x		x				Power	45-169	Alco Switch
S2	x	x	x	x	x	x	x	Voltage/OVP Set Selector	45-168	Cutler-Hammer
								Transformers		
T1	x							Rect. Input	126-3140	SR
		x						" "	126-3124	SR
			x					" "	126-3139	SR
				x				" "	126-3125	SR
					x			" "	126-3138-1	SR
						x		" "	126-3126	SR
							x	" "	126-3138-2	SR
T2	x		x					Control	126-3141	SR
		x		x		x		"	126-3121	SR
					x		x	"	126-3142	SR
T3	x	x	x	x	x	x	x	Pulse	126-3123	SR
								Miscellaneous		
	x	x	x	x	x	x	x	Control Knob (4 Required)	42-274	RAY #70-2WD-2G
	x							Printed-Circuit Board Ass'y	190-4118-1	SR
		x						" " " "	190-4118-4	SR
			x					" " " "	190-4118-5	SR

TABLE 6-2

Replaceable Parts List
Main Assembly
SRL Series/Convection Cooled (cont'd)

CIRCUIT SYMBOL	SRL Model 10-25	20-12	20-25	40-6	40-12	60-4	60-8	DESCRIPTION	SORENSEN PART NUMBER	MANUFACTURER, TYPE
								Miscellaneous		
			x					Printed-Circuit Board Ass'y	190-4118-7	SR
				x				" " " "	190-4118-8	SR
					x			" " " "	190-4118-11	SR
						x		" " " "	190-4118-12	SR
	x	x	x	x	x	x	x	Cover, Top	73-3200	SR
	x	x	x	x	x	x	x	Cover, Bottom	73-3200	SR
	x		x		x		x	Case Side, Left	73-3270	SR
		x		x		x		" " "	73-3199	SR
	x		x		x		x	Case Side, Right	73-3271	SR
		x		x		x		" " "	73-3199	SR
	x		x		x		x	Handle (2 Required)	91-1245	CEC, 30-3230
		x		x		x		" "	30-784	SR
	x	x	x	x	x	x	x	Foot, Rubber (4 Required)	91-214	MP, BH-209
	x	x	x	x	x	x	x	Schematic Diagram	586245	SR
	x							Front Panel (No Components)	73-3275-1	SR
		x						" " " "	73-3201-1	SR
			x					" " " "	73-3275-2	SR
				x				" " " "	73-3201-2	SR
					x			" " " "	73-3275-3	SR
						x		" " " "	73-3201-3	SR
							x	" " " "	73-3275-4	SR
E1	x	x	x	x	x	x	x	Binding Post, Black	4-951	SU, DF31BC
E2	x	x	x	x	x	x	x	" " "	4-951	SU, DF31BC
E3	x	x	x	x	x	x	x	" " , Red	4-950	SU, DF31RC
								SRL M1 (210V) and M2 (230V) (Substitute the following components)		
CB1	x							Circuit Breaker, 6A, 250V	92-379	Airpax
			x		x		x	" " , 10A, 250V	92-380	Airpax
CR15/16	x	x		x		x		Control Rect.	26-1158-7	GE, EX245
			x		x		x	" "	26-178-7	GE, EX245
F1		x		x		x		Fuse, 5A, 250V	226-7176P57	BUS, MTH
F2	x		x					" , 1A, 250V	226-7176P30	BUS, AGC
		x		x	x	x	x	" , 1/2A, 250V	226-7176P36	BUS, AGC
	x							Front Panel (Special)	73-3340-1	SR
			x					" " "	73-3340-2	SR
					x			" " "	73-3340-3	SR
							x	" " "	73-3340-4	SR

TABLE 6-3
Replaceable Parts List
Printed-Circuit Board Assembly
SRL Series/Fan Cooled

CIRCUIT SYMBOL	SRL Model 10-50	10-100	20-50	40-25	40-50	60-17	60-35				DESCRIPTION	SORENSEN PART NUMBER	MANUFACTURER, TYPE
											Capacitors (uF unless noted)		
C6	x	x	x	x	x	x	x				1,000, 15V	24-2554-4	SP, 45D
C7	x	x	x	x	x	x	x				1,000, 15V	24-2554-4	SP, 45D
C8	x	x	x	x	x	x	x				0.015, 250V	24-2015-3	SE, MMK
C9	x	x	x	x	x	x	x				0.033, 250V	24-2015-7	SE, MMK
C10	x	x	x	x	x	x	x				20, 12V	235-7404P31	SP
C11	x	x	x	x	x	x	x				25, 75V	235-7404P11	SP
C12	x	x									0.22, 250V	24-2015-17	SE, MMK
			x	x	x	x	x				0.1, 250V	24-2015-13	SE, MMK
C13	x	x	x	x	x	x	x				0.01, 250V	24-2015-1	SE, MMK
C14	x	x	x	x	x	x	x				0.068, 250V	24-2015-11	SE, MMK
C15	x	x	x	x	x	x	x				0.068, 250V	24-2015-11	SE, MMK
C16	x	x	x	x	x	x	x				0.01, 250V	24-2015-1	SE, MMK
C22	x	x	x	x	x	x	x				25, 75V	235-7404P11	SP
C24	x	x									0.047, 250V	24-2015-9	SE, MMK
			x	x	x	x	x				0.01, 250V	24-2015-1	SE, MMK
C25	x	x	x	x	x	x	x				0.001, 200V	24-2409-1	AC, V146XR
C27	x	x	x	x	x	x	x				0.01, 250V	24-2015-1	SE, MMK
C30	x										0.01, 250V	24-2015-1	SE, MMK
		x									0.015, 250V	24-2015-3	SE, MMK
			x								0.0033, 200V	24-2409-4	AC, V146XR
				x	x		x				0.0022, 200V	24-2409-3	AC, V146XR
						x					0.001, 200V	24-2409-1	AC, V146XR
C32	x	x	x	x	x	x	x				4, 25V	235-7404P35	SP
C38	x	x	x	x	x	x	x				100, 25V	235-7404P8	SP, TE121
C39	x										0.1, 250V	24-2015-13	SE, MMK
		x	x	x	x	x	x				0.22, 250V	24-2015-17	SE, MMK
C40	x	x	x	x	x	x	x				1.8, 250V	24-2015-28	SE, MMK
C41	x	x	x	x	x	x	x				Not Used		
C43	x	x	x	x	x	x	x				0.001, 200V	24-2409-1	AC, V146XR
C44	x										Not Used		
		x	x	x	x	x	x				0.0022, 200V	24-2409-3	AC, V146XR
C45	x	x	x	x	x	x	x				10, 200V	24-2496	SP, 500D
C46	x	x	x	x	x	x	x				0.01, 250V	24-2015-1	SE, MMK
C47	x	x	x	x	x	x	x				0.1, 250V	24-2015-13	SE, MMK
C48	x	x	x	x	x	x	x				0.1, 250V	24-2015-13	SE, MMK
C49	x	x	x	x	x	x	x				Not Used		
C51	x	x	x	x	x	x	x				0.04, 250V	24-2015-9	SE, MMK
C56	x		x	x		x	x				Not Used		
		x			x						0.0047, 250V	24-2409-5	SE, MMK
											Diodes		
CR1	x	x	x	x	x	x	x				S11	587565-1	SEM
CR2	x	x	x	x	x	x	x				S11	587565-1	SEM
CR3	x	x	x	x	x	x	x				S11	587565-1	SEM
CR4	x	x	x	x	x	x	x				S11	587565-1	SEM
CR5	x	x	x	x	x	x	x				1N825, Zener, 6.2V	588105-3	MA
CR6	x	x	x	x	x	x	x				RD5637	26-1017	RAY
CR7	x	x	x	x	x	x	x				RD5637	26-1017	RAY
CR8	x	x	x	x	x	x	x				RD5637	26-1017	RAY
CR9	x	x	x	x	x	x	x				Not Used		
CR10	x	x	x	x	x	x	x				RD5637	26-1017	RAY
CR11	x	x	x	x	x	x	x				RD5637	26-1017	RAY
CR12	x	x	x	x	x	x	x				RD5637	26-1017	RAY
CR13	x	x	x	x	x	x	x				RD5637	26-1017	RAY
CR19A/B	x	x	x	x	x	x	x				S11	587565-1	SEM
CR24	x	x	x	x	x	x	x				S16	587565-4	SEM
CR25	x	x	x	x	x	x	x				S11	587565-1	SEM
CR26	x	x	x		x						Not Used		
				x		x	x				1N4720	26-1006-2	MA

TABLE 6-3
Replaceable Parts List
Printed-Circuit Board Assembly
SRL Series/Fan Cooled (cont'd)

CIRCUIT SYMBOL	SRL Model 10-50	10-100	20-50	40-25	40-50	60-17	60-35	DESCRIPTION	SORENSEN PART NUMBER	MANUFACTURER, TYPE
								Diodes		
CR29	x	x	x	x	x	x	x	1N750, Zener, 4.7V	26-211	MA
CR30	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR31	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR33	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR34	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR37	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR38	x	x	x	x	x	x	x	1N4747A, Zener, 20V	588102-13	MA
CR39	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR40	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR41	x	x	x	x	x	x	x	1N5226B, Zener, 3.3V	588101-3	MA
CR42	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR43	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR44	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR45	x	x	x	x	x	x	x	C106A21, 100V	26-1105	GE
CR46	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR47	x	x	x	x	x	x	x	1N5226B, Zener, 3.3V	588101-3	MA
CR48	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR51	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR52	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR53	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR54	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR55	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR56	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR58	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR59	x	x	x	x	x			Not Used		
						x	x	RD5637	26-1017	RAY
CR60	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR63	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR65	x	x	x	x	x	x	x	SS2996	587306-4	SEM
								Transistors		
Q1	x	x	x	x	x	x	x	RT9338	18-146	SR
Q2	x	x	x	x	x	x	x	CA3046 (IC, Transistor Array)	18-605	RCA
Q3	x	x	x	x	x	x	x	CA3046 (IC, Transistor Array)	18-605	RCA
Q4	x	x	x	x	x	x	x	2N3638	18-143	FS
Q5	x	x	x	x	x	x	x	Dual SA1448	18-176	SR
Q6	x	x	x	x	x	x	x	2N2907A	386-7249P58	RCA
Q7	x	x	x	x	x	x	x	2N3638	18-143	FS
Q8	x	x	x	x	x	x	x	2N3638	18-143	FS
Q9	x	x	x					2N697	18-115	GE
				x	x			2N697 (Select)	18-161-3	SR
						x	x	40321	18-165	RCA
Q10	x	x	x	x	x	x	x	CA3053 (IC, Diff. Amp)	18-606	RCA
Q11	x	x	x	x	x	x	x	40312	18-142	RCA
Q14	x	x	x	x	x	x	x	2N697	18-115	GE
Q15	x	x	x	x	x	x	x	2N3641	18-144	FS
Q16	x	x	x	x	x	x	x	2N1671A	18-097	GE
Q17	x	x	x	x	x	x	x	2N3641	18-144	FS
Q18	x	x	x	x	x	x	x	2N3638	18-143	FS
Q19	x	x	x	x	x	x	x	2N3638	18-143	FS
Q20	x	x	x	x	x	x	x	2N3641	18-144	FS
Q21	x	x	x	x	x	x	x	2N5415	18-216	RCA
Q22	x	x	x	x	x	x	x	2N3638	18-143	FS
Q23	x	x						2N3638	18-143	FS
			x	x	x	x	x	62490	587062-1	RCA
Q24	x	x						2N3638	18-143	FS
			x	x	x	x	x	62490	587062-1	RCA
Q25	x	x	x	x	x	x	x	2N5307	18-214	GE

TABLE 6-3
Replaceable Parts List
Printed-Circuit Board Assembly
SRL Series/Fan Cooled (cont'd)

CIRCUIT SYMBOL	SRL Model 10-50	10-100	20-50	40-25	40-50	60-17	60-35	DESCRIPTION	SORENSEN PART NUMBER	MANUFACTURER, TYPE
								Resistors (ohms, 1/2W, ±10% unless noted)		
R1	x	x	x	x	x	x	x	220	280-1145P50	AB, EB
R2	x	x	x	x	x	x	x	390, 1W	280-1180P59	AB, GB
R3	x	x	x	x	x	x	x	10	280-1145P2	AB, EB
R4	x	x	x	x	x	x	x	680	280-1145P68	AB, EB
R5	x	x	x	x	x	x	x	357, 1/4W, 1%	28-1285	IRC, CEA-TO
R6	x	x	x	x	x	x	x	1K	280-1145P74	AB, EB
R7	x	x	x	x	x	x	x	1K	280-1145P74	AB, EB
R8	x	x	x	x	x	x	x	1.2K	280-1145P77	AB, EB
R9	x	x	x	x	x	x	x	2K, 2W, Variable	29-519	CL, 43
R10	x	x	x	x	x	x	x	47K	280-1145P134	AB, EB
R11	x	x	x	x	x	x	x	1.5K	280-1145P80	AB, EB
R12	x	x	x	x	x	x	x	2.2K	280-1145P86	AB, EB
R13	x	x	x	x	x	x	x	820	280-1145P71	AB, EB
R14	x	x	x	x	x	x	x	3.3K	280-1145P91	AB, EB
R15	x	x	x	x	x	x	x	50, 2W, Variable	29-467	IRC, 110
R16	x	x	x	x	x	x	x	47	280-1145P26	AB, EB
R17	x		x		x			5.36K, 1/8W, 1%	28-1413	IRC, CEA-T2
		x						8.66K, 1/8W, 1%	28-1414	IRC, CEA-T2
			x					4.32K, 1/8W, 1%	586055-190	ELA, MF4
					x			3.16K, 1/8W, 1%	28-1416	IRC, CEA-T2
						x		4.12K, 1/8W, 1%	28-1417	IRC, CEA-T2
R19	x	x	x	x	x	x	x	330	280-1145P56	AB, EB
R20	x	x	x	x	x	x	x	390	280-1145P59	AB, EB
R21	x	x	x	x	x	x	x	1.78K, 1/2W, 1%	28-1373	IRC, CEC-T2
R22	x	x	x	x	x	x	x	560, 1W	280-1180P65	AB, GB
R23	x	x	x	x	x	x	x	2.2K	280-1145P86	AB, EB
R24	x	x	x	x	x	x	x	2.2K	280-1145P86	AB, EB
R25	x	x	x	x	x	x	x	2.05K, 1/8W, 1%	586055-89	ELA, MF4
R26	x	x	x	x	x	x	x	560	280-1145P65	AB, EB
R27	x	x	x	x	x	x	x	3.9K	280-1145P95	AB, EB
R28	x	x	x	x	x	x	x	330, 1W	280-1180P56	AB, GB
R29	x	x	x		x		x	Not Used		
				x				2.49M, 1/2W, 1%	28-1396	IRC, CEC-TO
						x		2M, 1/2W, 1%	28-1399	IRC, CEC-TO
R30	x	x	x		x		x	Not Used		
				x		x		1	27-983	IRC, BWH
R31	x	x	x	x	x	x	x	2.7K	280-1145P89	AB, EB
R32	x	x	x	x	x	x	x	2.7K	280-1145P89	AB, EB
R33	x	x	x	x	x	x	x	6.48K, 1/8W, 1%	586055-113	ELA, MF4
R34	x	x	x	x	x	x	x	560, 1W	280-1180P65	AB, GB
R35	x	x	x	x	x	x	x	22K	280-1145P122	AB, EB
R36	x	x	x	x	x	x	x	5.6K	280-1145P100	AB, EB
R37	x	x	x	x	x	x	x	220	280-1145P50	AB, EB
R44	x	x	x	x	x	x	x	2.2K	280-1145P86	AB, EB
R45	x	x	x					1.2K	280-1145P77	AB, EB
				x	x	x	x	2.2K	280-1145P86	AB, EB
R46	x	x	x					1.2K	280-1145P77	AB, EB
				x	x	x	x	2.2K, 1W	280-1180P86	AB, GB
R49	x	x						18K	280-1145P119	AB, EB
			x	x	x			33K	280-1145P128	AB, EB
						x	x	47K	280-1145P134	AB, EB
R50	x	x	x	x	x	x	x	2.2K	280-1145P86	AB, EB
R51	x	x	x	x	x	x	x	12K	280-1145P113	AB, EB
R52	x		x					12K	280-1145P113	AB, EB
		x						20K	280-1145P120	AB, EB
				x				9.09K, 1/8W, 1%	586250-120	ELA, MF4
					x			11.0K, 1/8W, 1%	586250-124	ELA, MF4
						x		7.5K	280-1145P105	AB, EB

TABLE 6-3
Replaceable Parts List
Printed-Circuit Board Assembly
SRL Series/Fan Cooled (cont'd)

CIRCUIT SYMBOL	SRL Model 10-50	10-100	20-50	40-25	40-50	60-17	60-35	DESCRIPTION	SORENSEN PART NUMBER	MANUFACTURER, TYPE
								Resistors (ohms, 1/2W, ±10% unless noted)		
R52						x		10K	280-1145P110	AB, EB
R54	x	x	x	x	x	x	x	47	280-1145P26	AB, EB
R58	x	x	x	x	x	x	x	390	280-1145P59	AB, EB
R59	x							150K	280-1145P152	AB, EB
		x	x	x	x	x	x	68K	280-1145P140	AB, EB
R60	x	x	x	x	x	x	x	3.9K	280-1145P95	AB, EB
R61	x	x	x	x	x	x	x	3.3K	280-1145P91	AB, EB
R62	x	x						470	280-1145P62	AB, EB
			x					680	280-1145P68	AB, EB
				x	x			820	280-1145P71	AB, EB
						x	x	1K	280-1145P74	AB, EB
R63	x	x	x	x	x			1K, 2W, Variable	29-503	CTS, 110
						x	x	400, 2W, Variable	29-547	CTS, 110
R64	x	x	x	x	x	x	x	6.8K	280-1145P104	AB, EB
R65	x	x						4.7K	280-1145P98	AB, EB
			x					12K	280-1145P113	AB, EB
				x	x			22K	280-1145P122	AB, EB
						x	x	33K	280-1145P128	AB, EB
R66	x	x						5.6K	280-1145P100	AB, EB
			x					10K	280-1145P110	AB, EB
				x	x			18K	280-1145P119	AB, EB
						x	x	27K	280-1145P125	AB, EB
R68	x	x	x	x	x	x	x	3.3K	280-1145P91	AB, EB
R69	x	x	x	x	x	x	x	220	280-1145P50	AB, EB
R70	x	x	x	x	x	x	x	10K	280-1145P110	AB, EB
R71	x	x	x	x	x	x	x	30K, 2W	585109-56	CG, C42S
R72	x	x	x	x	x	x	x	820	280-1145P179	AB, EB
R73	x	x	x	x	x	x	x	237, 1/4W, 1%	28-1419	IRC, CEA-TO
R74	x	x	x	x	x	x	x	4.7K	280-1145P98	AB, EB
R75	x	x	x	x	x	x	x	27K, 2W	585109-55	CG, C42S
R76	x	x	x	x	x	x	x	120K	280-1145P149	AB, EB
R78	x	x	x	x	x	x	x	5K, 2W, Variable	29-426	CTS, 110
R79	x	x	x	x	x	x	x	2.7K	280-1145P89	AB, EB
R80	x	x	x	x	x	x	x	1.2K	280-1145P77	AB, EB
R81	x	x	x	x	x	x	x	470	280-1145P62	AB, EB
R82	x	x	x	x	x	x	x	4.7K	280-1145P98	AB, EB
R84	x	x	x	x	x	x	x	470	280-1145P62	AB, EB
R86	x	x	x	x	x	x	x	1K	280-1145P74	AB, EB
R87	x	x	x	x	x	x	x	1M, 1/4W, 1%	28-1418	IRC, CEA-TO
R88	x	x	x	x	x	x	x	3.3M	280-1145P200	AB, EB
R89	x	x						27K	280-1145P125	AB, EB
			x					22K	280-1145P122	AB, EB
				x	x			18K	280-1145P119	AB, EB
						x	x	15K	280-1145P116	AB, EB
R92	x	x						150	280-1145P44	AB, EB
			x	x	x	x	x	100	280-1145P38	AB, EB
R96	x	x	x	x	x	x	x	10K, 1/4W, 1%	28-1325	IRC, CEA-TO
R99	x	x	x	x	x	x	x	470K	280-1145P170	AB, EB
R102	x	x	x	x	x			Not Used		
						x	x	12K	280-1145P113	AB, EB
TB2	x	x	x	x	x	x	x	Terminal Board	43-180	Kulka, 670A-3000-10
U1	x	x	x	x	x	x	x	LM741CH	585322-1	NS

TABLE 6-3
Replaceable Parts List
Printed-Circuit Board Assembly
SRL Series/Fan Cooled (cont'd)

CIRCUIT SYMBOL	SRL Model 10-50	10-100	20-50	40-25	40-50	60-17	60-35	DESCRIPTION	SORENSEN PART NUMBER	MANUFACTURER, TYPE
								Miscellaneous		
XQ3	x	x	x	x	x	x	x	Socket (IC)	585741-1	T1, C931402
XQ4	x	x	x	x	x	x	x	" "	585741-1	T1, C931402
	x							Printed-Circuit Board Ass'y	190-4118-2	SR
		x						" " " "	190-4118-3	SR
			x					" " " "	190-4118-6	SR
				x				" " " "	190-4118-9	SR
					x			" " " "	190-4118-10	SR
						x		" " " "	190-4118-13	SR
							x	" " " "	190-4118-14	SR

TABLE 6-4

Replaceable Parts List
Main Assembly
SRL Series/Fan Cooled*

CIRCUIT SYMBOL	SRL Model 10-50	10-100	20-50	40-25	40-50	60-17	60-35	DESCRIPTION	SORENSEN PART NUMBER	MANUFACTURER, TYPE
B1	x	x	x	x	x	x	x	Fan	91-1000-2	Rotron
								Capacitors (uF unless noted)		
C1	x	x	x	x	x	x	x	Not Used		
C2	x	x	x	x	x	x	x	0.1, 600V	24-2110-13	CD, PKM
C3	x	x	x	x	x	x	x	Not Used		
C4	x	x	x	x	x	x	x	0.1, 600V	24-2110-13	CD, PKM
C5	x	x	x	x	x	x	x	2, 330V	23-369	CD, KS
C17	x	x	x	x	x	x	x	0.1, 250V	587626-65	SE, 105
C18	x	x	x	x	x	x	x	0.1, 250V	587626-65	SE, 105
C19	x	x	x	x	x	x	x	0.33, 200V	24-2409-16	AC, V146XR
C20	x	x	x	x	x	x	x	2.2, 100V	587626-12	SE, 105
C20A	x	x		x	x	x	x	Not Used		
			x					100, 25V	235-7404P8	SP, TE1211
C21	x		x					15K, 20V	24-2459-2	CD, FAH
		x						23K, 20V	24-2459-4	CD, FAH
				x		x	x	4.7K, 40V	24-2460-2	SP, 32D
					x			8.7K, 50V	24-2445-9	SP, 32D
C23	x							69K, 15V (7 Required)	24-2594-1	CD, FAH
		x						85K, 20V (8 Required)	24-2594-5	SP, 32D
			x					26K, 30V (7 Required)	24-2444-7	SP, 32D
				x				9.4K, 50V (6 Required)	24-2595-1	SAN, 500
					x			21K, 50V (6 Required)	24-2595-2	SAN, 500
						x		6.5K, 75V (4 Required)	24-2593-1	SP, 32D
							x	6.5K, 75V (8 Required)	24-2593-1	SP, 32D
C26	x		x	x		x		9.6K, 15V	24-2454-8	SP, 32D
		x			x		x	21K, 15V	24-2454-3	SP, 32D
C28	x	x	x	x	x	x	x	0.05, 500V	24-2010	Arco, CCD503
C29	x	x	x	x	x	x	x	0.05, 500V	24-2010	Arco, CCD503
C31	x							6.4K, 15V	24-2454-4	SP, 32D
		x						26K, 30V	24-2444-7	SAN, 500
			x					6.7K, 30V	24-2444-4	SP, 32D
				x				3.2K, 40V	24-2460-1	SP, 32D
					x			5.8K, 50V	24-2445-8	SP, 32D
						x		2.5K, 75V	24-2525-4	SP, 32D
							x	6.5K, 75V	24-2593-1	SP, 32D
C33	x	x	x	x	x	x	x	0.05, 500V	24-2010	Arco, CCD503
C33A	x		x	x		x	x	Not Used		
		x						100, 15V	24-2554-1	SP, 45D
					x			100, 50V	24-2556-2	SP, 45D
C34	x	x	x	x	x	x	x	Not Used		
C35	x	x	x	x	x	x	x	Not Used		
C36	x	x	x	x	x	x	x	0.33, 250V	587626-68	SE, 105
C37	x	x	x	x	x	x	x	0.33, 250V	587626-68	SE, 105
C50	x			x				0.15, 400V	24-2411-14	AC, V146XR
		x	x		x	x	x	0.33, 400V	24-2411-16	AC, V146XR
C54	x			x		x		0.68, 400V	24-2411-18	AC, V146XR
		x	x		x		x	Not Used		
C55	x	x	x		x	x	x	0.68, 200V	24-2409-18	AC, V146XR
				x				2, 200V	24-2409-21	AC, V146XR
C57	x		x	x	x	x		Not Used		
		x					x	4, 150V	24-2288-1	SP, TVA
C58								210/230V only (See page 6-)		
C59								210/230V only (See page 6-)		
CB1**	x							Circuit Breaker	92-375	Airpax, APGX
		x						" "	92-384	Airpax, APGX
			x		x		x	" "	92-383	Airpax, APGX
				x		x		" "	92-376	Airpax, APGX

*Includes all components not on PCB.
**115V input only, see page 6-34 for 210/230 volt.

TABLE 6-4
Replaceable Parts List
Main Assembly
SRL Series/Fan Cooled (cont'd)

CIRCUIT SYMBOL	SRL Model 10-50	10-100	20-50	40-25	40-50	60-17	60-35	DESCRIPTION	SORENSEN PART NUMBER	MANUFACTURER, TYPE
								Diodes		
CR14	x	x	x	x	x	x	x	S11	587565-1	SEM
CR15*	x							C230CX7	26-178-5	GE
		x						C137CX80	26-1164	GE
			x	x		x		C137CX77	26-1159-1	GE
					x		x	C137E	26-1159-3	GE
CR16*	x							C230CX7	26-178-5	GE
		x						C137CX80	26-1164	GE
			x	x		x		C137CX77	26-1159-1	GE
					x		x	C137E	26-1159-3	GE
CR17	x	x	x	x	x	x	x	S11	587565-1	SEM
CR18A	x		x		x		x	1215SL	26-1163-9	MA
		x						154K10A	587571-1	IR
				x		x		1N1186A	587382-3	WH
CR18B	x		x		x		x	1215SL	26-1163-9	MA
		x						154K10A	587571-1	IR
				x		x		1N1186A	587382-3	WH
CR18C				x				1N1186A	587382-3	WH
					x		x	MR1215SLR	26-1163-10	MA
CR18D				x				1N1186A	587382-3	WH
					x		x	MR1215SLR	26-1163-10	MA
CR19A	x	x	x	x	x	x	x	S11	587565-1	SEM
CR19B	x	x	x	x	x	x	x	S11	587565-1	SEM
CR22	x			x			x	3S11	587566-1	SEM
		x			x			1N1200A	587393-1	WH
			x					1N4720	26-1006-2	MA
						x		S11	587565-1	SEM
CR23	x			x			x	3S11	587566-1	SEM
		x			x			1N1200A	587393-1	WH
			x					1N4720	26-1006-2	MA
						x		S11	587565-1	SEM
CR27	x		x	x				3S11	587566-1	SEM
		x			x			1N1200A	587393-1	WH
						x		Not Used		
							x	1N4720	26-1006-2	MA
CR28	x		x	x				3S11	587566-1	SEM
		x			x			1N1200A	587566-1	SEM
						x		Not Used		
							x	1N4720	26-1006-2	MA
CR32	x	x	x	x	x	x	x	1N1184A	587382-2	WH
CR35	x	x	x	x	x	x	x	S16	587565-4	SEM
CR36	x	x	x	x	x	x	x	S16	587565-4	SEM
CR49	x	x	x					Not Used		
				x	x	x	x	1N1184A	587382-2	WH
CR50	x	x						C45U	26-1161-1	GE
			x					C45F	26-1161-2	GE
				x	x	x	x	C45A	26-1161-3	GE
CR57	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR61	x	x	x	x	x	x	x	RD5637	26-1017	RAY
CR62	x	x	x	x	x	x	x	S11	587565-1	SEM
CR64	x	x	x	x	x	x	x	S11	587565-1	SEM
DS1	x	x	x	x	x	x	x	Power Indicator	43-357	IND
DS2	x	x	x	x	x	x	x	Overvoltage Indicator	43-358	GI
DS3	x	x	x	x	x	x	x	Thermal Indicator	43-358	GI

*115V input only, see page 6- 34for 210/230 volt.

TABLE 6-4
Replaceable Parts List
Main Assembly
SRL Series/Fan Cooled (cont'd)

CIRCUIT SYMBOL	SRL Model 10-50	10-100	20-50	40-25	40-50	60-17	60-35	DESCRIPTION	SORENSEN PART NUMBER	MANUFACTURER, TYPE
								Fuses		
F1	x	x	x	x	x	x	x	Not Used		
F2*	x		x	x				2A, 125V, SB	226-7177P22	BUS, MDL
		x						4A, 125V, SB	226-7177P14	BUS, MDX
				x				2.5A, 250V, SB	226-7177P77	BUS, MDA
					x			1.5A, 250V	226-7176P41	BUS, AGC
						x		1.25A, 250V, SB	226-7177P25	BUS, MDX
XF2	x	x	x	x	x	x	x	Fuseholder	343-1011P2	LF, 350221
L1**	x							RFI Choke	127-1846	SR
		x	x	x		x		" "	127-1847	SR
					x		x	" "	127-1851	SR
M1	x	x						Voltmeter, 0-12V	94-579-1	AM, AR-2
			x					" , 0-25V	94-579-2	AM, AR-2
				x	x			" , 0-50V	94-579-3	AM, AR-2
						x	x	" , 0-80V	94-579-4	AM, AR-2
M2	x		x		x			Ammeter, 0-60A	94-462-8	AM, AR-2
		x						" , 0-120A	94-462-9	AM, AR-2
			x					" , 0-30A	94-462-6	AM, AR-2
						x		" , 0-20A	94-462-5	AM, AR-2
							x	" , 0-40A	94-462-7	AM, AR-2
								Transistors		
Q12	x		x	x	x	x	x	2N3055A	18-151	RCA
		x						2N3771	18-202	RCA
Q13	x							2N3771 (4 Required)	18-202	RCA
		x						2N3771 (7 Required)	18-202	RCA
			x					2N3771 (5 Required)	18-202	RCA
				x				2N3055 (Selected - 4 Required)	18-178-1	RCA
					x			2N3055 (Selected - 8 Required)	18-178-1	RCA
						x		2N3442 (4 Required)	18-163	RCA
							x	2N3442 (8 Required)	18-163	RCA
								Resistors (ohms, 1/2W, ±10 unless noted)		
R18A	x	x	x	x	x	x	x	1.2K, 2W, Variable	29-596	CL, 43
R18B	x	x	x	x	x	x	x	10, 2W, Variable	29-595	CL, 43
R40	x							0.18, 12.5W, 5% (8 Required)	27-590-7	WL, 12.5X
		x						0.18, 12.5W, 5% (14 Required)	27-590-7	WL, 12.5X
			x					0.18, 12.5W, 5% (4 Required)	27-590-7	WL, 12.5X
				x				0.18, 12.5W, 5% (8 Required)	27-590-7	WL, 12.5X
			x					0.1, 12.5W, 5% (5 Required)	27-590-1	WL, 12.5X
					x			0.33, 12.5W, 5% (4 Required)	27-590-13	WL, 12.5X
						x		0.33, 12.5W, 5% (8 Required)	27-590-13	WL, 12.5X
R41	x							8 Milliohms	190-4159	SR
		x						2.5 Milliohms	190-4165	SR
			x		x			8 Milliohms	190-4178	SR
				x				20 Milliohms	190-4140	SR
					x			40 Milliohms	190-4141	SR
						x		15 Milliohms	190-4179	SR
R42	x							5, 100W	27-827	WL, 130/100
		x						3, 100W	27-1010	WL, 100
			x					10, 100W	27-867	WL, 130/100
				x				25, 50W (Series - 2 Required)	27-809	WL, 30/50
					x			50, 100W (Parallel - 2 Req'd)	27-856	WL, 30/50
						x		50, 50W (Series - 2 Required)	27-841	WL, 70/50

*115V input only, see page 6-34 for 210/230 volt.
**L2/L3 added for 210/230 volt inputs, see page 6-34

TABLE 6-4
Replaceable Parts List
Main Assembly
SRL Series/Fan Cooled (cont'd)

CIRCUIT SYMBOL	SRL Model 10-50	10-100	20-50	40-25	40-50	60-17	60-35	DESCRIPTION	SORENSEN PART NUMBER	MANUFACTURER, TYPE
								Resistors (ohms, 1/2W, ±10% unless noted)		
R42						x		100, 100W (Parallel - 2 Req'd)	27-1009	WL, 100
R47	x							220, 2W	280-1147P50	AB, HB
		x						125, 5W	28-557	IRC, PW5
			x					150, 2W	280-1147P44	AB, HB
				x				390, 2W	280-1147P59	AB, HB
					x			180, 5W	27-499-18	CL, C5GL
						x		300, 2W	280-1147P54	AB, HB
							x	150, 5W	27-499-17	CL, C5GL
R48	x							3, 50W	27-805	WL, 70/50
		x						1, 100W	27-826	WL, 130/100
			x					2, 50W	27-804	WL, 70/50
				x				10, 50W	27-850	WL, 70/50
					x			5, 100W	27-827	WL, 130/100
						x		15, 25W	27-744	WL, 30/25
R53A	x	x						2K, 2W, Variable, +20, -0%	29-587	CL, 43
			x					4K, 2W, Variable, +20, -0%	29-588	CL, 43
				x	x			8K, 2W, Variable, +20, -0%	29-589	CL, 43
						x	x	12K, 2W, Variable, +20, -0%	29-590	CL, 43
R53B	x	x						20, 2W, Variable	29-591	CL, 43
			x					40, 2W, Variable	29-592	CL, 43
				x	x			80, 2W, Variable	29-593	CL, 43
						x	x	120, 2W, Variable	29-594	CL, 43
R55	x							0.02	190-4160	SR
		x						0.015	190-4195	SR
			x		x			0.055	190-4180	SR
				x				0.14	190-4161	SR
						x		0.185	190-4162	SR
							x	0.120	190-4194	SR
R56	x		x					60A, 50mV	588151-7	RAM
		x						120A, 50mV	588151-6	RAM
				x		x		Not Used		
					x			60A, 50mV	94-043	RAM
							x	40A, 50mV	588151-8	RAM
R57	x	x	x	x	x	x	x	3K, 7W	27-471-9	WL, 7XM
R77	x	x						12.1K, 1%	28-1408	IRC, CEC-TO
			x					24.9K, 1%	28-1261	IRC, CEC-TO
				x	x			49.9K, 1%	28-1409	IRC, CEC-TO
						x	x	80.6K, 1%	28-1351	IRC, CEC-TO
R83	x	x	x	x	x	x	x	1K	280-1145P74	AB, EB
R85	x	x						3K, 2W, Variable	29-597	CL, 43
			x					4K, 2W, Variable	29-598	CL, 43
				x	x			8K, 2W, Variable	29-599	CL, 43
						x	x	12K, 2W, Variable	29-600	CL, 43
R90	x	x	x	x	x	x	x	47	280-1145P26	AB, EB
R91	x	x	x	x	x	x	x	0.24, 2W, 5%	28-1252	IRC, BWH
R91A	x	x		x	x	x	x	Not Used		
			x					1	27-1157	AB, EB
R93*	x	x	x	x	x	x	x	330, 1/2W	280-1145P56	AB, EB
R94**	x	x	x	x	x	x	x	330, 1/2W	280-1145P56	AB, EB
R95	x	x	x	x	x	x	x	2.2K	280-1145P86	AB, EB
R97	x	x	x	x	x	x	x	10	280-1145P2	AB, EB
R98	x	x	x	x	x	x	x	10	280-1145P2	AB, EB
R101	x	x	x		x	x	x	1	27-1157	AB, EB
R103	x		x	x	x	x		Not Used		
		x						3.3K, 1/2W	280-1145P91	AB, EB
							x	6.8K, 1/2W	280-1145P104	AB, EB
R105	x	x	x	x	x	x	x	11K, 1/8W, 1%	586250-124	ELA, MF4

*Omitted with 210/230 volt inputs.
**See page 6-34 for 210/230 volt inputs.

TABLE 6-4
Replaceable Parts List
Main Assembly
SRL Series/Fan Cooled (cont'd)

CIRCUIT SYMBOL	SRL Model 10-50	10-100	20-50	40-25	40-50	60-17	50-35	DESCRIPTION	SORENSEN PART NUMBER	MANUFACTURER, TYPE
								Switches		
S1	x	x	x	x	x	x	x	Not Used		
S2	x	x	x	x	x	x	x	Voltage/OVP Set Selector	45-168	Cutler-Hammer
S3	x	x	x	x	x	x	x	Thermostat, 15A, 120 Vac SPST, (N.O.)	92-516	TI, (Klixon) Type 20704F
								Transformers		
T1	x							Rect. Input	126-3133	SR
		x						" "	126-3144	SR
			x					" "	126-3145	SR
				x				" "	126-3146	SR
					x			" "	126-3146-1	SR
						x		" "	126-3135	SR
							x	" "	126-3146-2	SR
T2	x		x					Control	126-3132	SR
		x						"	126-3147-1	SR
				x	x	x		"	126-3131	SR
					x			"	126-3147-2	SR
T3	x		x	x	x	x	x	Pulse	126-3123	SR
		x						"	126-3148	SR
								Miscellaneous		
	x	x	x	x	x	x	x	Control Knobs (4 Required)	42-274	RAY #70-2WD-2G
	x							Printed-Circuit Board Ass'y	190-4118-2	SR
		x						" " " "	190-4118-3	SR
			x					" " " "	190-4118-6	SR
				x				" " " "	190-4118-9	SR
					x			" " " "	190-4118-10	SR
						x		" " " "	190-4118-13	SR
							x	" " " "	190-4118-14	SR
	x		x	x	x	x	x	Cover, Top	73-3361	SR
		x						" "	73-3381	SR
	x		x	x	x	x	x	Cover, Bottom	73-3337	SR
		x						" "	73-3266	SR
	x			x		x		Cover, Rear	73-3218	SR
		x	x		x		x	" "	73-3259	SR
	x			x		x		Case Side, Left	73-3210	SR
		x						" " "	73-3264	SR
			x		x		x	" " "	73-3250	SR
	x			x		x		Case Side, Right	73-3209	SR
		x						" " "	73-3263	SR
			x		x		x	" " "	73-3249	SR
	x			x		x		Handle (2 Required)	91-1245	CEC, 30-3230
		x	x		x		x	" " "	30-786	SR
	x			x		x		Foot, Rubber (4 Required)	91-214	MP, BH-209
		x	x		x		x	Foot, Aluminum (4 Required)	30-473	SR
	x	x	x	x	x	x	x	Schematic Diagram	E586246	SR
E1	x	x	x		x		x	Not Used		
				x		x		Binding Post, Black	4-951	SU, DF31BC
E2	x	x	x		x		x	Not Used		
				x		x		Binding Post, Black	4-951	SU, DF31BC
E3	x	x	x		x		x	Not Used		
				x		x		Binding Post, Red	4-950	SU, DF31RC
	x							Front Panel (No Components)	73-3208-1	SR
		x						" " " "	73-3248-1	SR
			x					" " " "	73-3248-2	SR
				x				" " " "	73-3208-2	SR
					x			" " " "	73-3248-3	SR

TABLE 6-4
Replaceable Parts List
Main Assembly
SRL Series/Fan Cooled (cont'd)

CIRCUIT SYMBOL	SRL Model 10-50	10-100	20-50	40-25	40-50	60-17	60-35	DESCRIPTION	SORENSEN PART NUMBER	MANUFACTURER, TYPE
								Miscellaneous		
					x			Front Panel (No Components)	73-3208-3	SR
						x		" " " "	73-3248-4	SR
								SRL M1 (210V) and M2 (230V) Modifications*		
C28	x			x	x			Remove Capacitor		
*C58	x							6.8uF, 35V	586058-17	SP
(Connect				x				4.7uF, 50V	585071-37	SP, 150D
from E1					x			3.9uF, 75V	586386-5	SP
to E2										
*C59	x							6.8uF, 35V	586058-17	SP
(Connect				x				4.7uF, 50V	585071-37	SP, 150D
from					x			3.9uF, 75V	586386-5	SP
TB3-1 to										
TB3-3)										
CB1	x							Circuit Breaker, 10A, 250 Vac	92-381	Airpax
		x						" " , 23A, 250 Vac	92-385	Airpax
			x	x	x			" " , 21A, 250 Vac	92-382	Airpax
CR15	x	x	x	x	x			Cont. Rect., 25A	26-178-7	GE, EX245
CR16	x	x	x	x	x			" " , 25A	26-178-7	GE, EX245
F2	x		x					Fuse, 1.25A, 250V, SB	226-7177P25	BUS, MDX
		x						" , 2.5A, 250V, SB	226-7177P77	BUS, MDA
			x					" , 1A, 250V, SB	226-7177P47	BUS, MDL
					x			" , 1A, 250V	226-7176P39	BUS, AGC
L2	x			x	x			Choke Assembly	586936-1	SR
L3	x			x	x			" "	586936-1	SR
R93	x			x	x			Remove Resistor		
R94	x			x	x			Resistor, 680, 1/2W	280-1145P68	AB, EB
	x							Front Panel (Special)	73-3339-1	SR
			x					" " "	73-3339-2	SR
					x			" " "	73-3339-3	SR

*Not required for SRL 40-50/60-35.

SERVICE NOTES

FIELD SERVICE REPRESENTATIVES

UNITED STATES

ALABAMA

B & C Instruments, Inc.
7920 Unit 5, Charlotte Drive
Huntsville, Alabama 35802
Tel: (205)883-6530

ARIZONA

Arizona Electronic Standards Lab.
1848 West Campbell
Phoenix, Arizona 85015
Tel: (602)264-9351

Arizona Electronic Standards Lab.
1842 W. Grant Road - Suite 101
Tucson, Arizona 85703
Tel: (602)623-5779

CALIFORNIA

J.D. & Associates
1012 Morse Avenue
Suite #6
Sunnyvale, California 94086
Tel: (408)734-5529

Power Specialist Company
10601 Bloomfield Street
Los Alamitos, California 90720
Tel: (213)594-9418

COLORADO

R & R Instruments, Inc.
1554 Elmira St.
Aurora, Colorado 80010
Tel: (303)364-8325

MARYLAND

Applied Metrology Inc.
10067 N. 2nd Street
Laurel, Maryland 20810
Tel: (301)953-1010

MICHIGAN

Comtel Standards Laboratory
21223 Hilltop Street
P. O. Box 5034
Southfield, Michigan 48037
Tel: (313)358-2500

MINNESOTA

Chris-Tec, Inc.
5366 Kimberly Road
P. O. Box 1010
Minnetonka, Minnesota 55343
Tel: (612)934-1334

NEW HAMPSHIRE

Sorensen Company
676 Island Pond Road
Manchester, N. H. 03103
Tel: (603)668-4500

NEW JERSEY

Ampower Electronic Instrument Co., Inc.
26 Just Road
Fairfield, New Jersey 07006
Tel: (201)227-7720

UNITED STATES

NEW MEXICO

Instrument Service Laboratories
630 Haines Avenue N.W.
Albuquerque, New Mexico 87102
Tel: (505)842-1107

OHIO

Comtel Instrument Company
5387 Avion Park Drive
Cleveland, Ohio 44143
Tel: (216)442-8080

TEXAS

Certified Test Equipment Sales, Inc.
601 Easy Street
Garland, Texas 75042
Tel: (214)494-3446

WASHINGTON

XTEK Corporation
14824 Northeast 31st Circle
Redmond, Washington 98052
Tel: (206)885-6969

WORLDWIDE

CANADA

Brunelle Instrument Company
826 Belvedere Street
Sherbrooke, P.Q., Canada J1H4B8
Tel: (819)569-1408

ENGLAND

Cossor Electronics Ltd.
The Pinnacles, Harlow
Essex CM19 5BB, England
Tel: (0279)26862

ISRAEL

Agentex Ltd.
ATIDIM
Scientific Industries Park
End of Dvora Hanevia Road
P. O. Box 10150
Tel Aviv 61101 Israel
Tel: 03-493111

ITALY

3G Electronics S.r.1.
Via Perugino 9
20135 Milano, Italy
Tel: 39-2-54-42-91

JAPAN

Kansai Electronics Co, Tokyo Office
24-17 Sendagaya 4-Chome, Shibu Yaku, Tokyo
Tel: 03-404-2585 Telex 2423371

WEST GERMANY/AUSTRIA

Neumuller GmbH
Eschenstrasse 2
8028 Taufkirchen/Muenchen
W. Germany
Tel: 089/61181

(11/82)

SORENSEN
POWER SUPPLIES
RAYTHEON

www.manualsplus.com
1006820

SORENSEN
POWER SUPPLIES

RAYTHEON